




I GROUND POINT

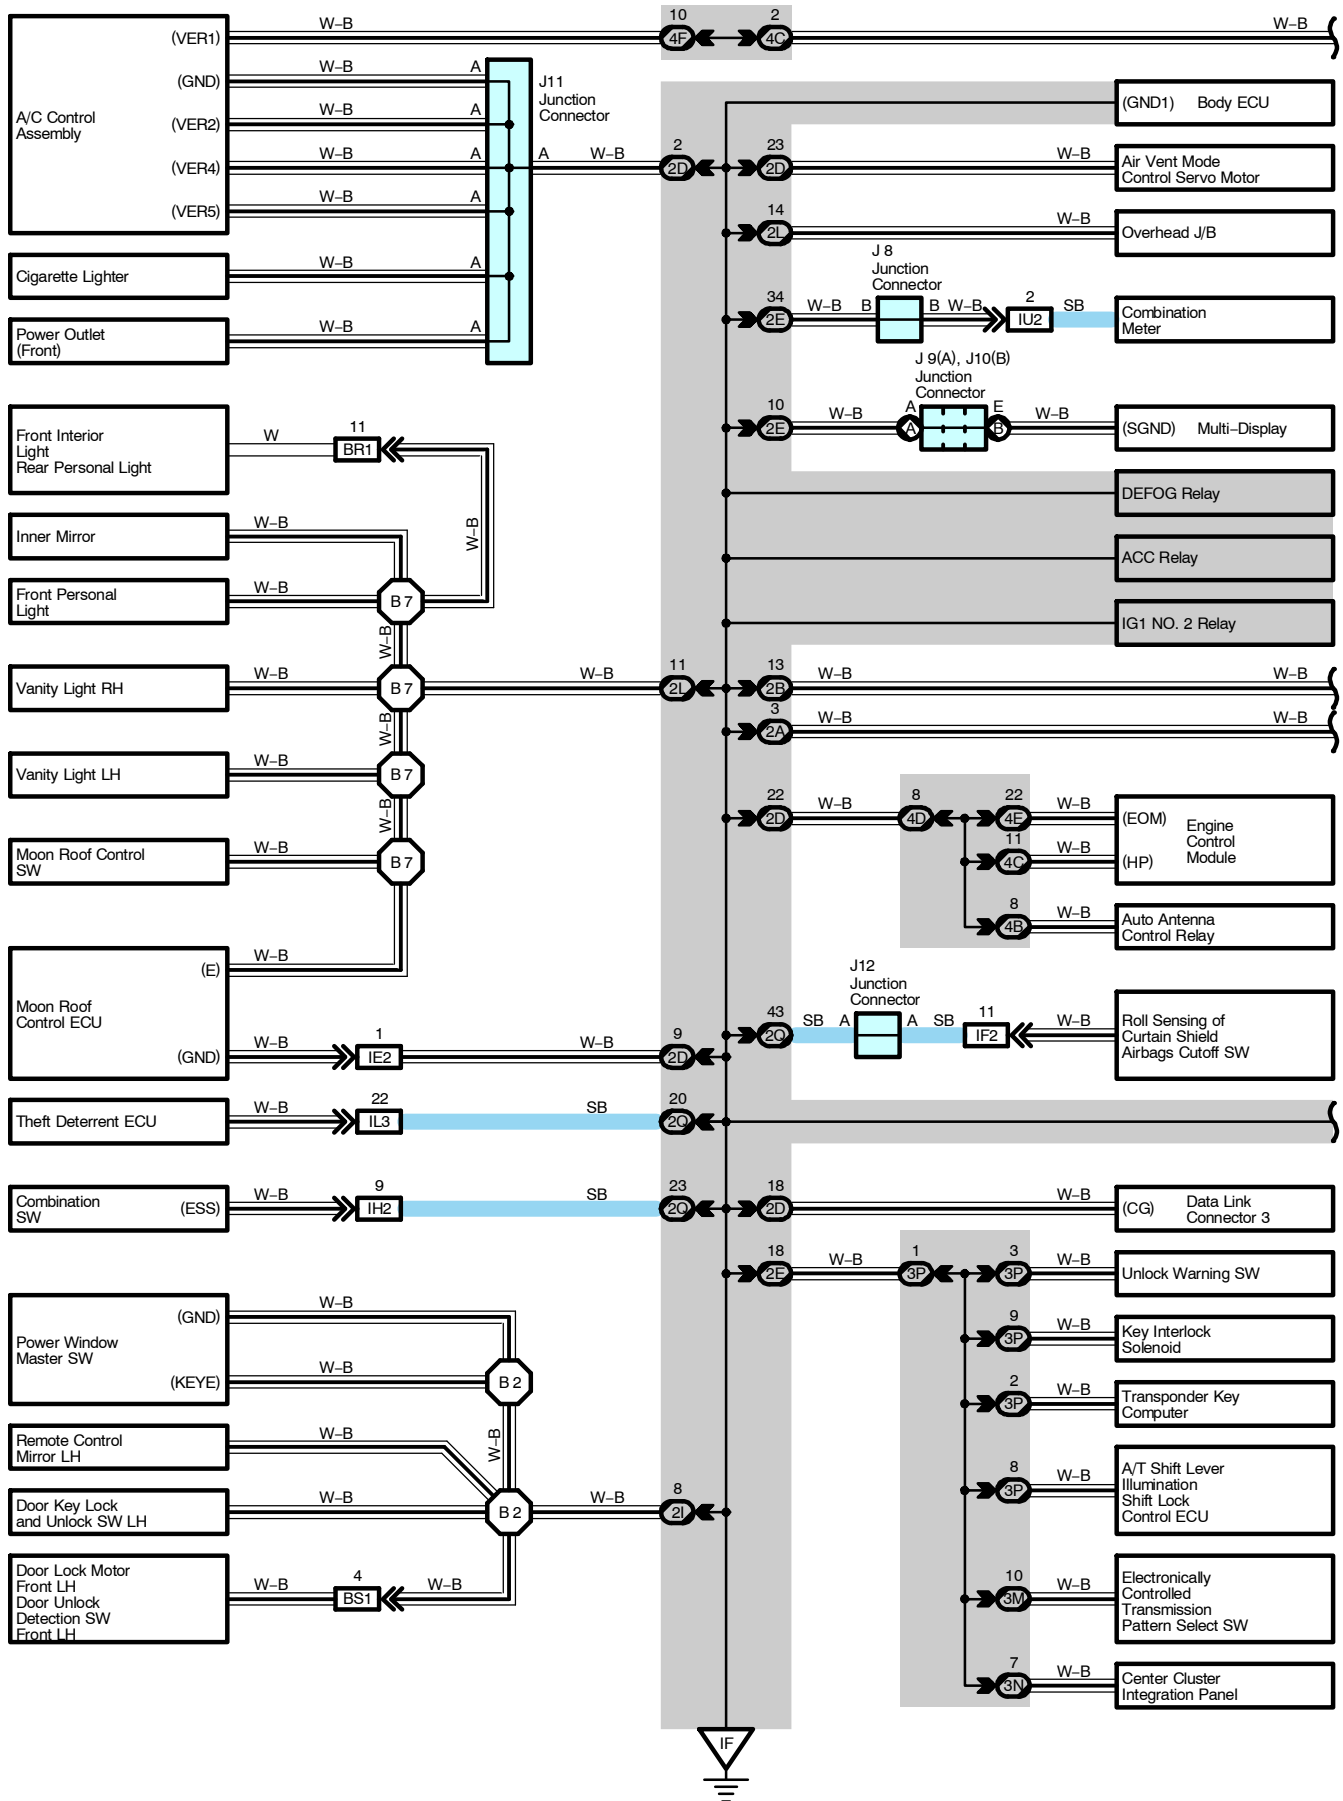

I GROUND POINT

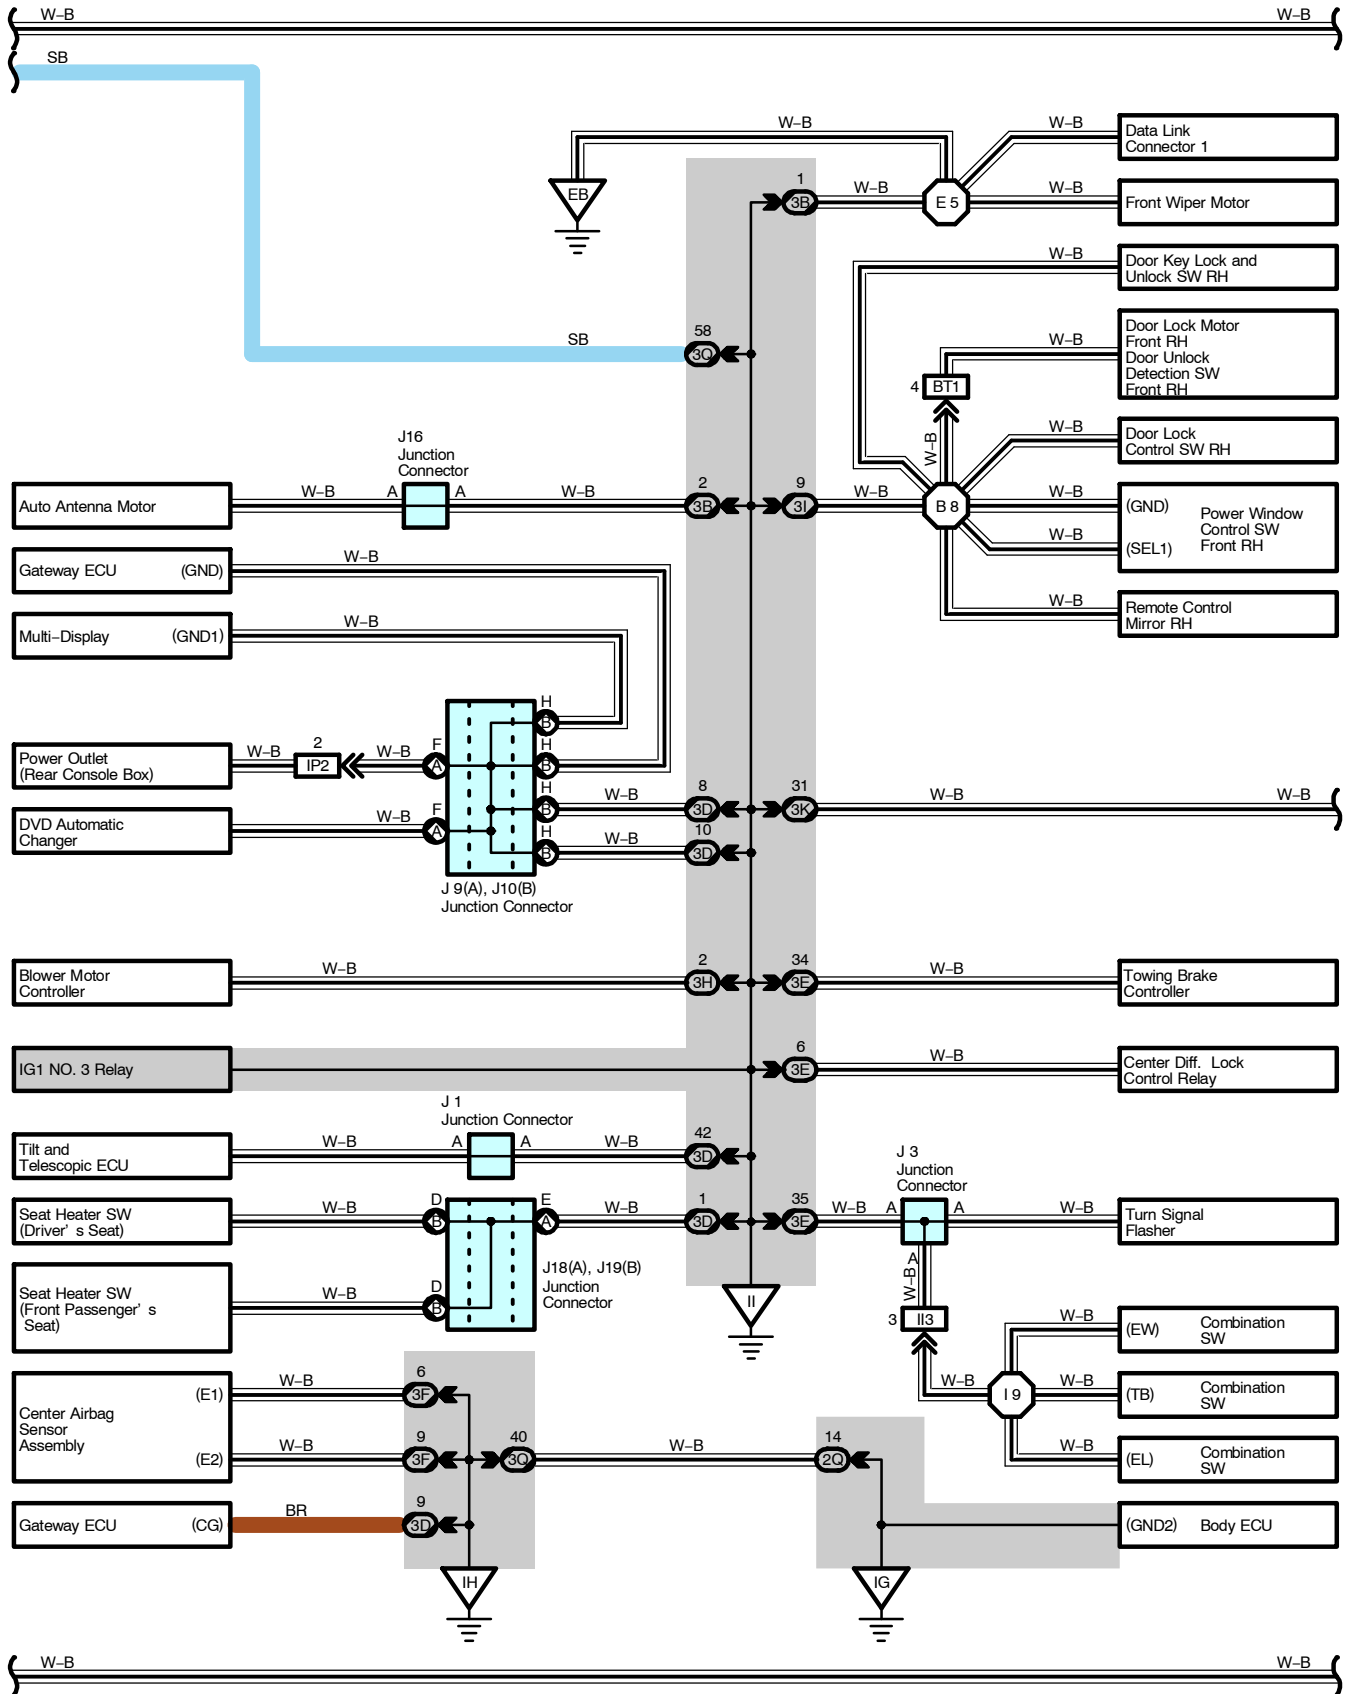

I GROUND POINT

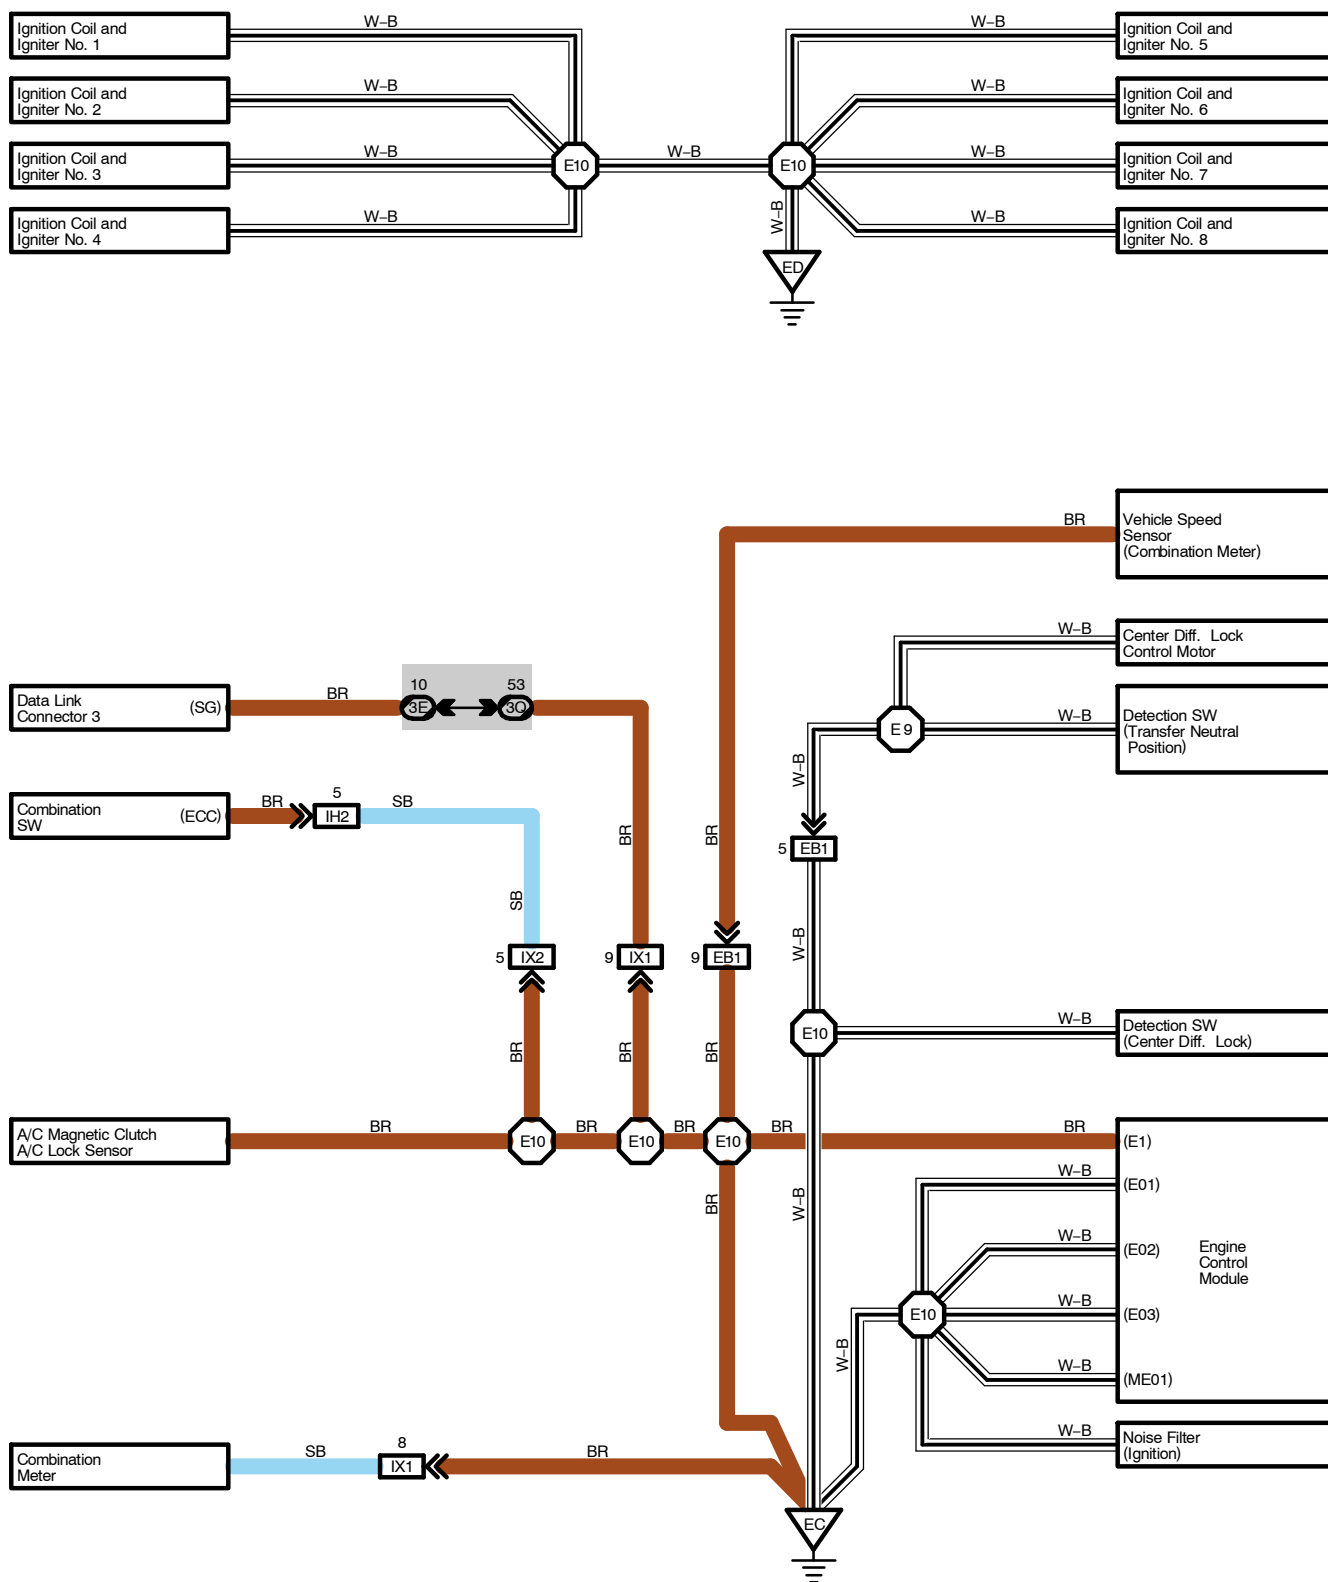

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J1	71	J11	71	J22	72
J3	71	J12	71	J23	B 72
J8	71	J16	71	J25	A 72
J9	A 71	J18	A 71		
J10	B 71	J19	B 71		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2B		
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2I	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3F		
3H		
3I	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3M	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3N		
3P		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4B	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
4F		

I GROUND POINT

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	76	Engine Wire and Transmission Wire (On the Transmission)
IE2	78	Dash Wire and Roof No.1 Wire (Left Kick Panel)
IF2	78	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH2	80	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II3	80	Dash Wire and Column Wire (Near the Ignition SW)
IL3	80	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IP2	80	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	80	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU2	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IV4	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IX1	82	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2		
Ig1	84	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
BA3	86	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BA4		
BB1	86	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)
BC3	86	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BC4		
BD2	86	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BH2	86	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BL1	88	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BM2	90	Floor No.1 Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BM3		
BO2	90	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
BO3		
BP3	88	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BP4		
BQ2	88	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BR1	88	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)
BS1	88	Door Lock LH Sub Wire and Front Door LH Wire (Front Door LH)
BT1	88	Door Lock RH Sub Wire and Front Door RH Wire (Front Door RH)
BU1	88	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)
BV1	88	Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support)
BW1	88	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BX1	88	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)

: Ground Points

Code	See Page	Ground Points Location
EA	76	Front Right Side of Fender Apron
EB		
EC	76	Rear Bank of Right Cylinder Head
ED	76	Rear Bank of Left Cylinder Head
EE	76	Front Left Side of Fender Apron
IF	78	Set Bolt of Cowl Side J/B LH
IG		
IH	78	Set Bolt of Cowl Side J/B RH
II		
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat
BL	86	Rear Side Under the Front Passenger's Seat
BM	86	Left Rear Side Quarter Panel



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	76	Engine Room Main Wire	B6	88	Floor No.1 Wire
E5	76	Engine Room No.2 Wire	B7	88	Roof No.1 Wire
E9	76	Transmission Wire	B8	88	Front Door RH Wire
E10	76	Engine Wire	B9	88	Floor No.2 Wire
E14	76	Engine Room No.2 Wire	B11	88	Floor No.1 Wire
E15	76	Engine Room Main Wire	B14	88	Floor No.2 Wire
I2	80	Engine Room No.2 Wire	B15	88	Back Door Upper Wire
I9	80	Column Wire	B16	88	Floor No.3 Wire
I18	80	Instrument Panel Wire	B26	88	Back Door Lower Wire
B2	88	Front Door LH Wire	B27	90	Front Seat LH Wire
B4	88	Floor No.1 Wire	B28	90	Front Seat RH Wire