



Ignition

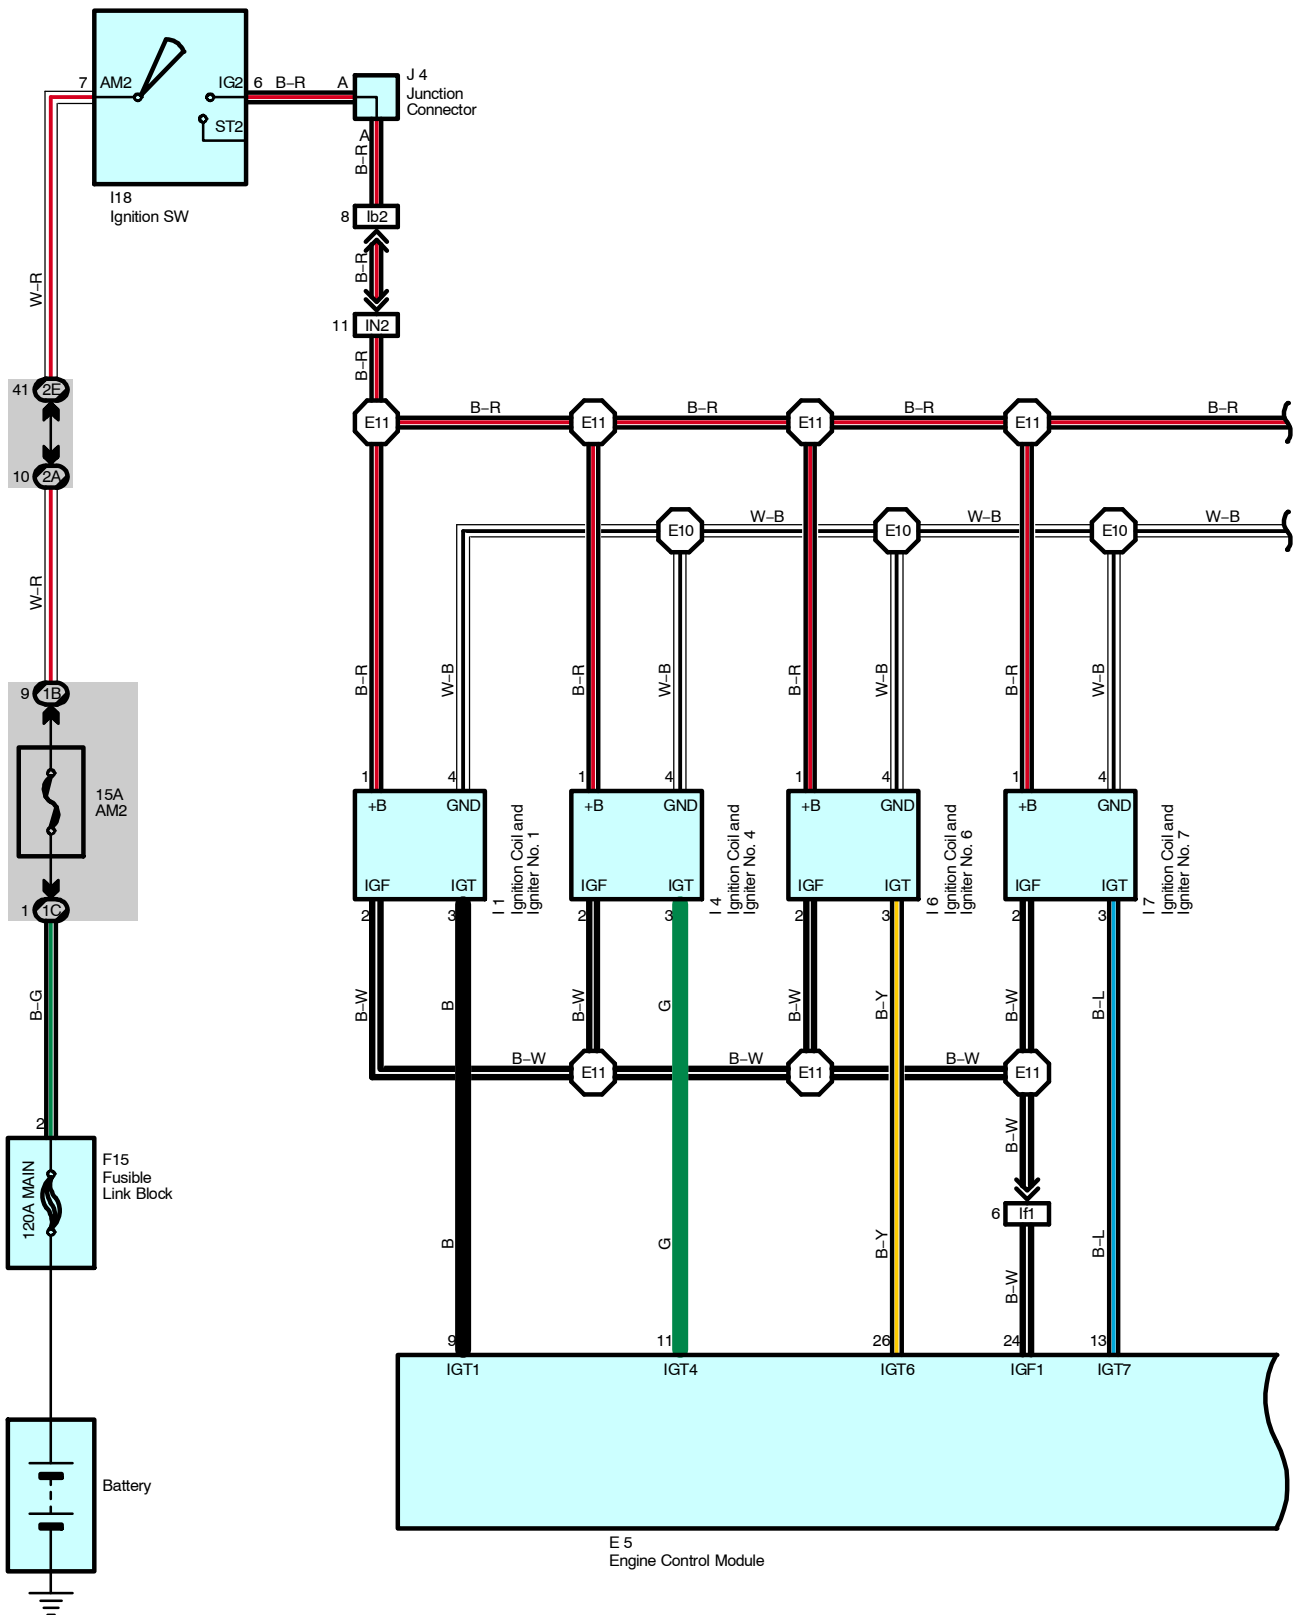

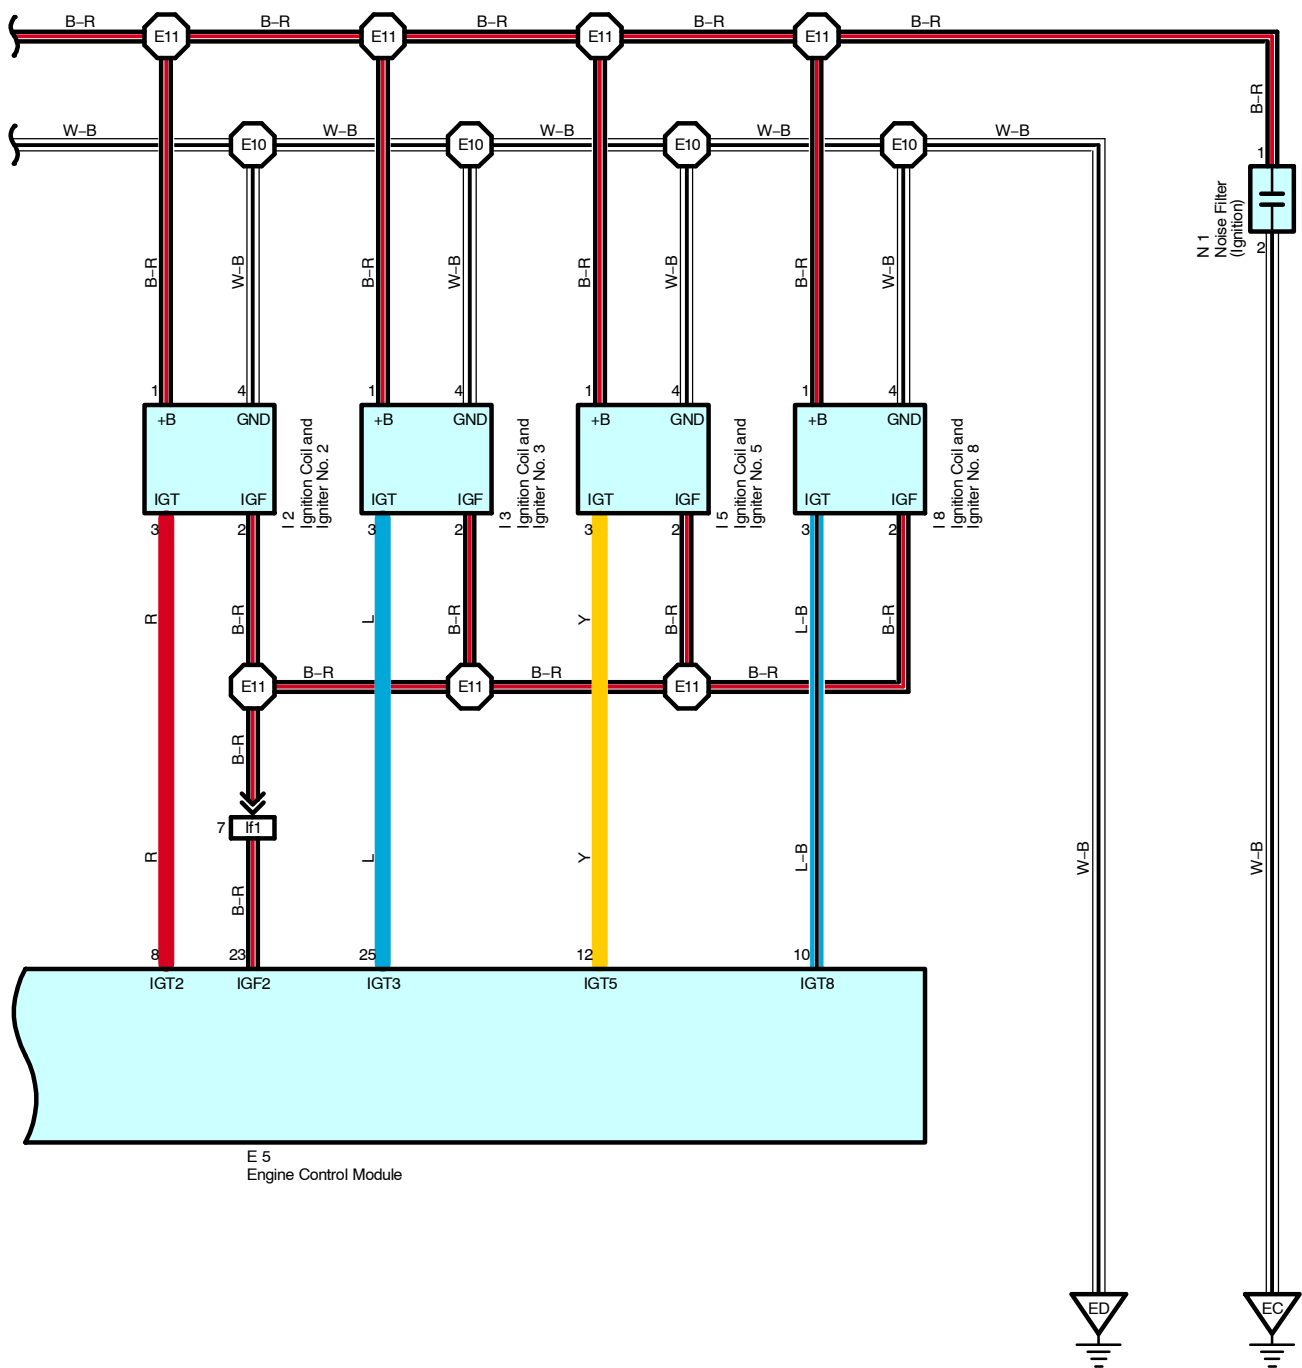

Ignition

Service Hints

I18 Ignition SW

7-6 : Closed with ignition SW at ON or ST position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E5	70	I4	69	I18	70
F15	68	I5	69	J4	71
I1	69	I6	69	N1	69
I2	69	I7	69		
I3	69	I8	69		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IN2	80	Engine Wire and Dash Wire (Behind the Glove Box)
Ib2	84	Dash Wire and Dash Wire (Behind the Combination Meter)
If1	84	Engine Wire and Engine Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EC	76	Rear Bank of Right Cylinder Head
ED	76	Rear Bank of Left Cylinder Head

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E10	76	Engine Wire	E11	76	Engine Wire

