



Turn Signal and Hazard Warning Light

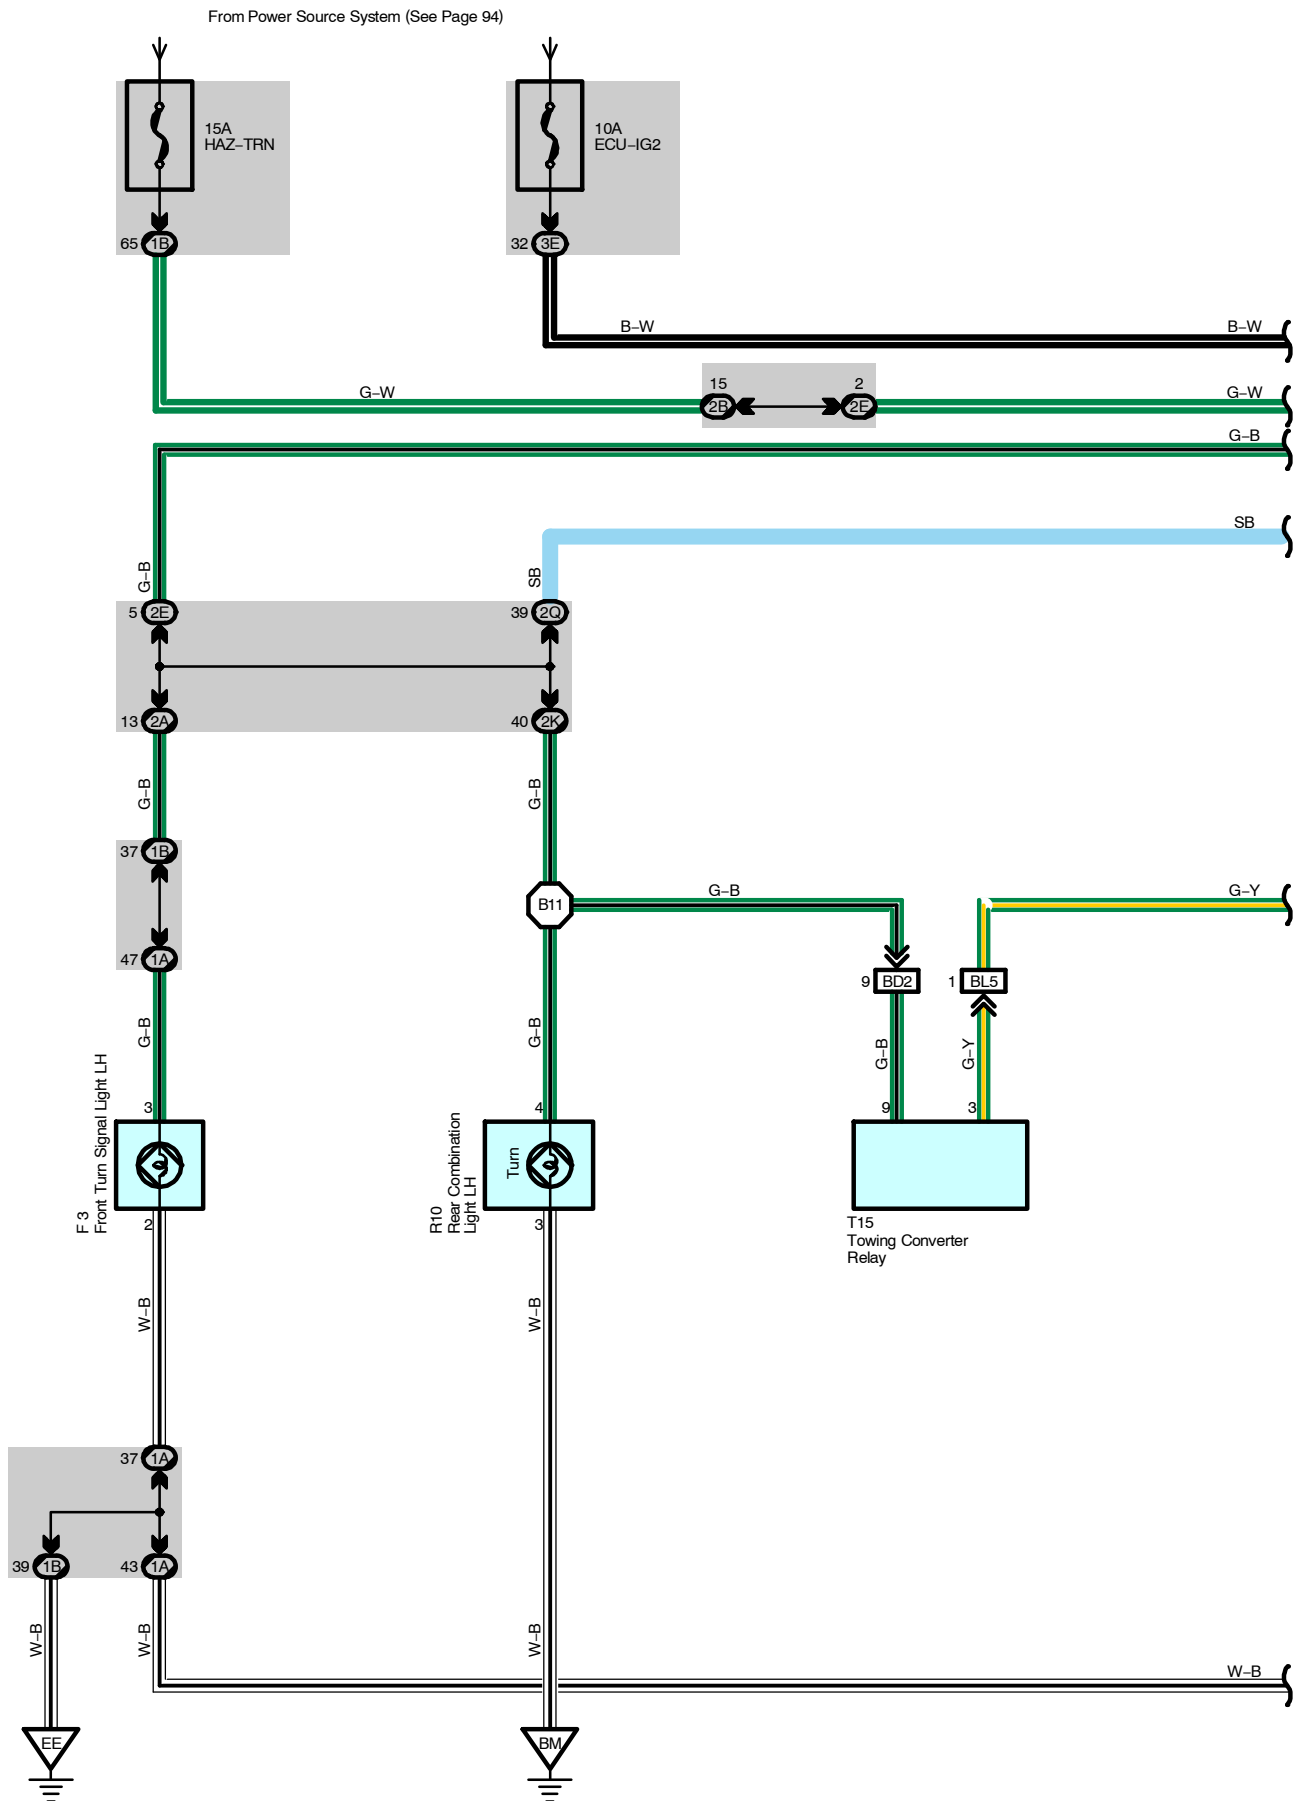

* 1 : w/ Navigation System
 * 2 : w/o Navigation System

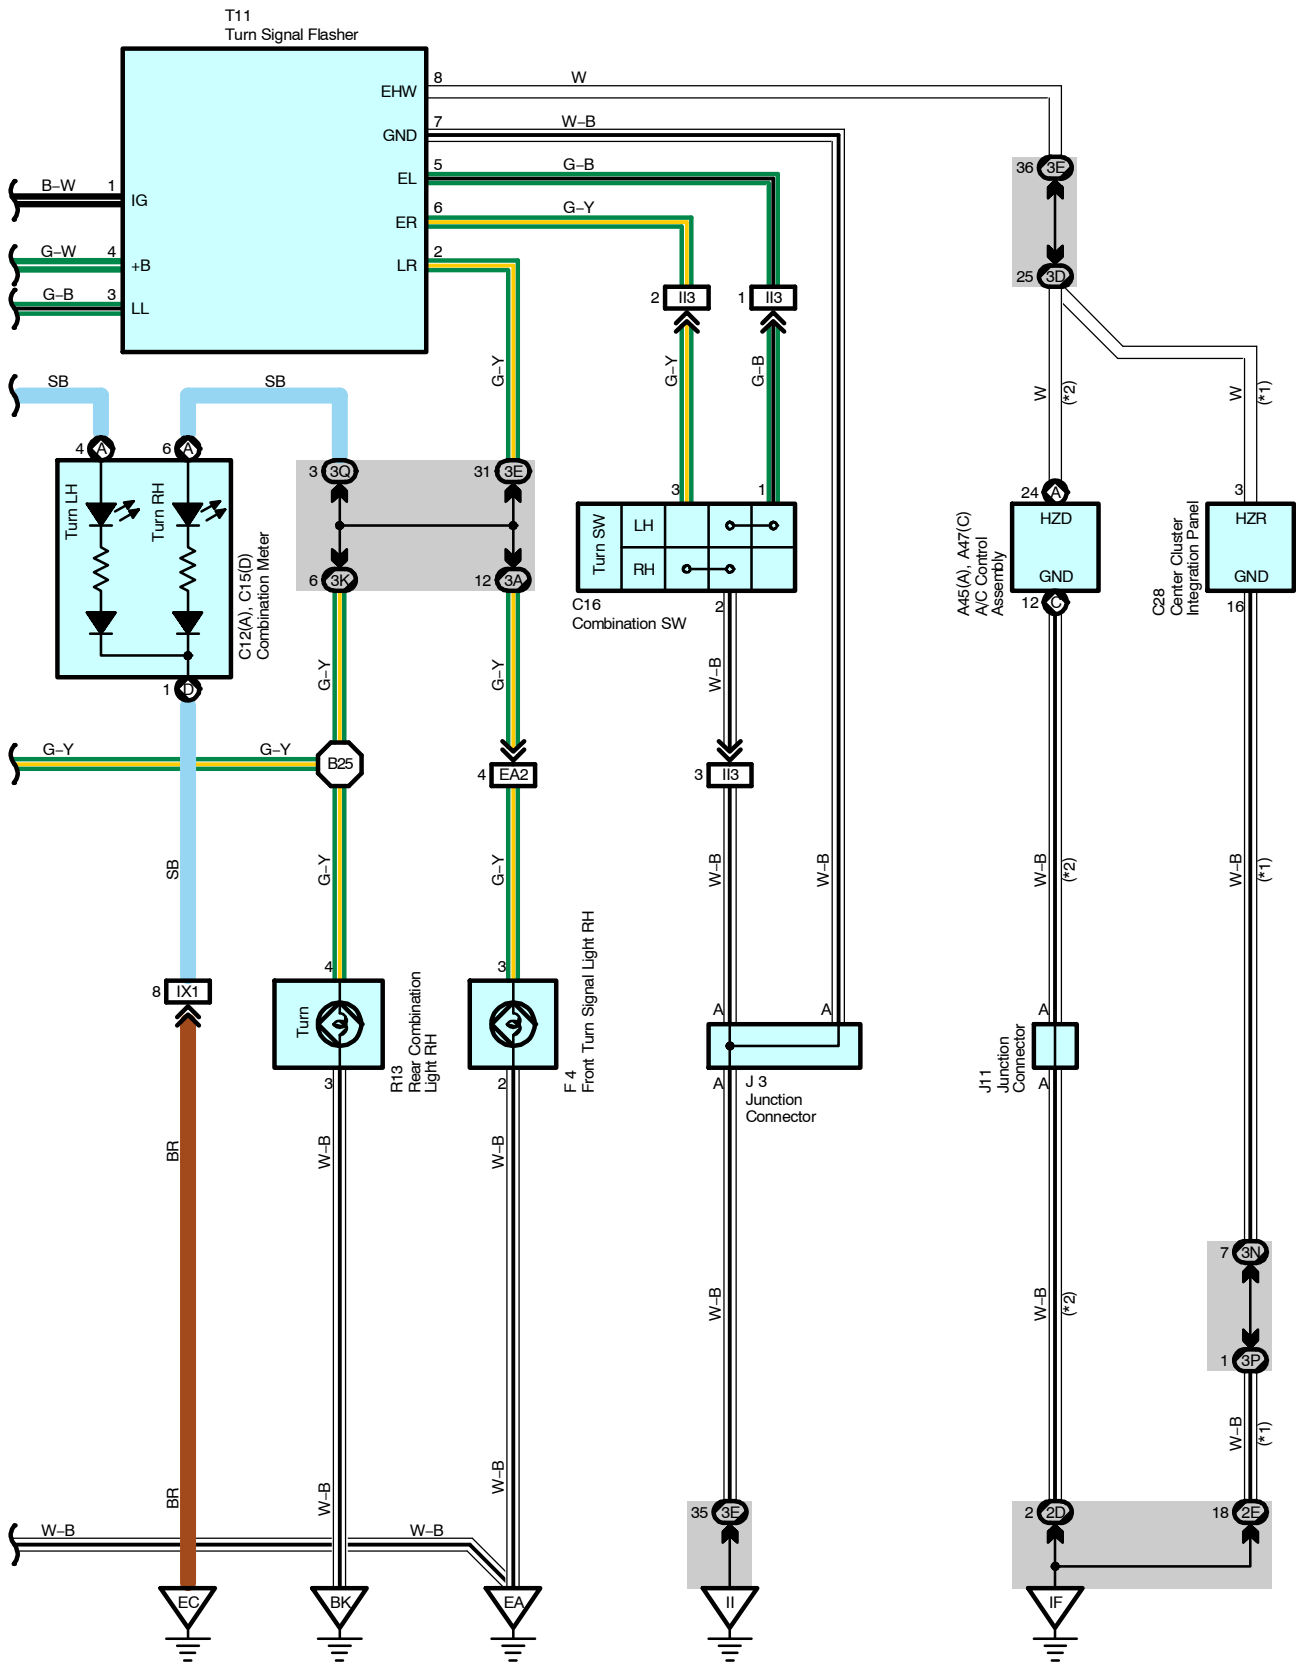

Turn Signal and Hazard Warning Light

Service Hints

T11 Turn Signal Flasher

- 4-Ground : Always approx. 12 volts
- 1-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 7-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A45	A 70	C28	70	R10	73
A47	C 70	F3	68	R13	73
C12	A 70	F4	68	T11	71
C15	D 70	J3	71	T15	73
C16	70	J11	71		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2B		
2D		
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K		
3N	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3P		
3Q		Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	76	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
II3	80	Dash Wire and Column Wire (Near the Ignition SW)
IX1	82	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BD2	86	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BL5	88	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

: Ground Points

Code	See Page	Ground Points Location
EA	76	Front Right Side of Fender Apron
EC	76	Rear Bank of Right Cylinder Head
EE	76	Front Left Side of Fender Apron
IF	78	Set Bolt of Cowl Side J/B LH
II	78	Set Bolt of Cowl Side J/B RH
BK	86	Front Side Under the Front Passenger's Seat
BM	86	Left Rear Side Quarter Panel

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B11	88	Floor No.1 Wire	B25	88	Floor No.2 Wire

