



Taillight

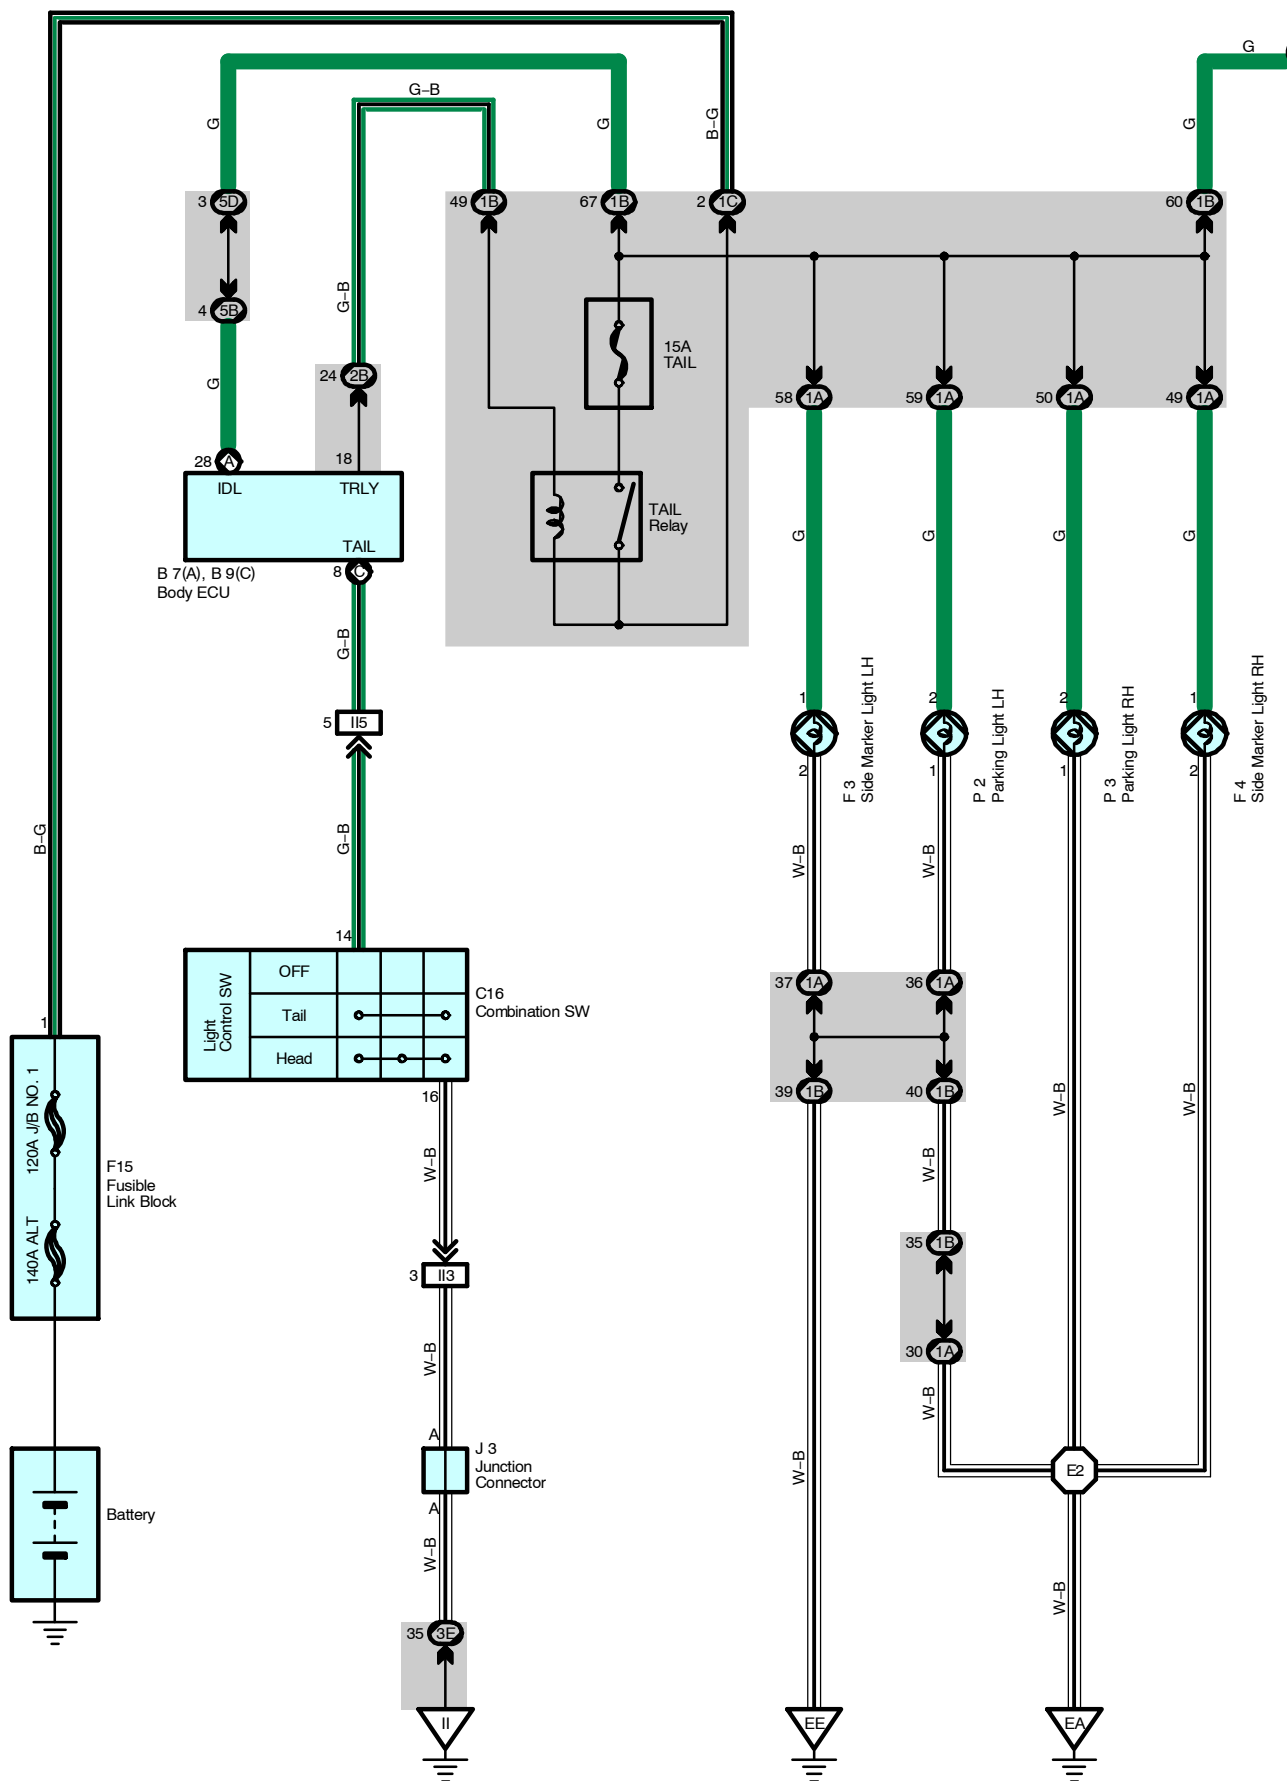

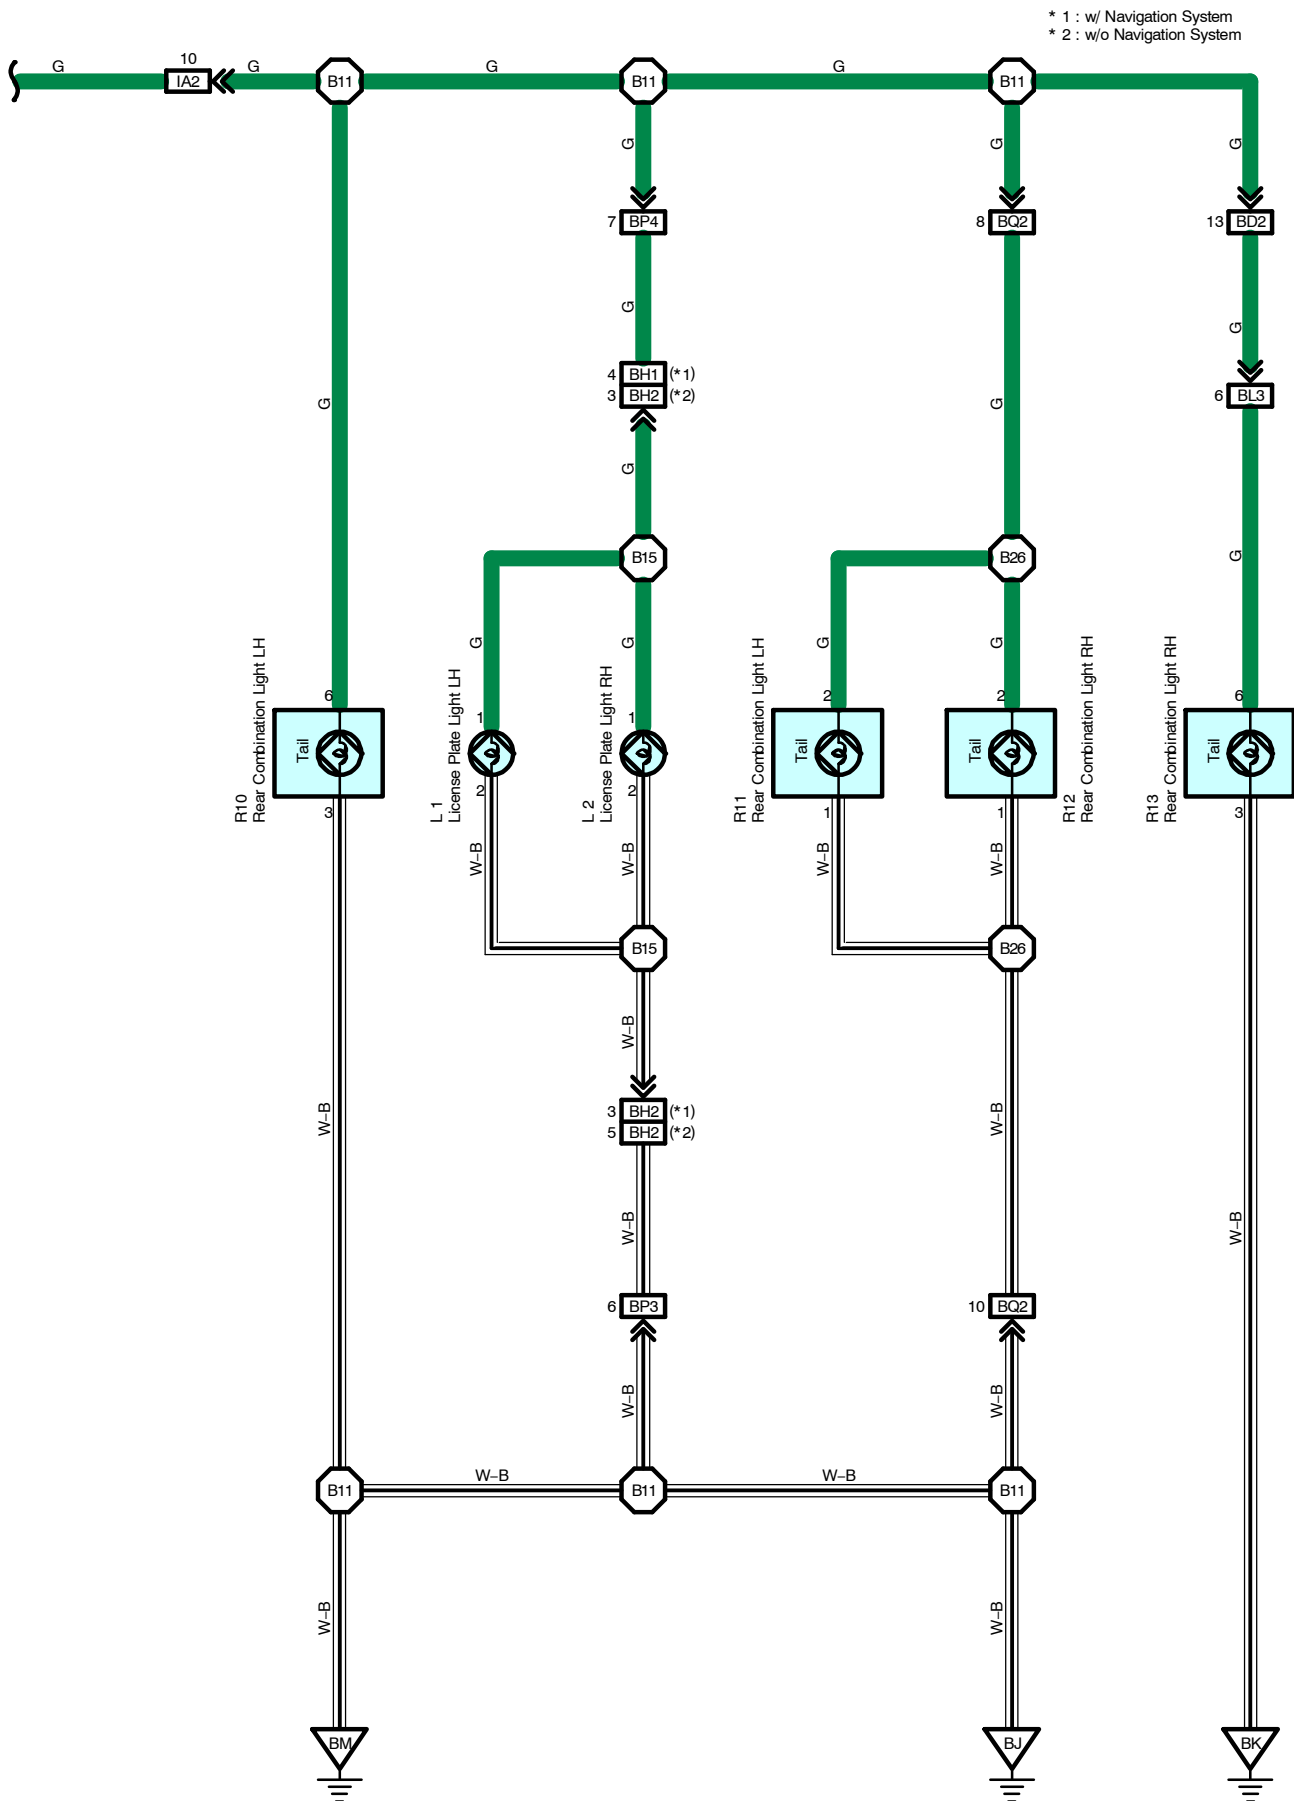

Taillight

Service Hints

C16 Combination SW

14-16 : Closed with light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B7	A	70	F15	68	P3
B9	C	70	J3	71	R10
C16	70	L1	72	R11	73
F3	68	L2	72	R12	73
F4	68	P2	69	R13	73

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	78	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
II3	80	Dash Wire and Column Wire (Near the Ignition SW)
II5		
BD2	86	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BH1	86	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BH2		
BL3	88	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP3	88	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BP4		
BQ2	88	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	76	Front Right Side of Fender Apron
EE	76	Front Left Side of Fender Apron
II	78	Set Bolt of Cowl Side J/B RH
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat
BM	86	Left Rear Side Quarter Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	76	Engine Room Main Wire	B15	88	Back Door Upper Wire
B11	88	Floor No.1 Wire	B26	88	Back Door Lower Wire

