




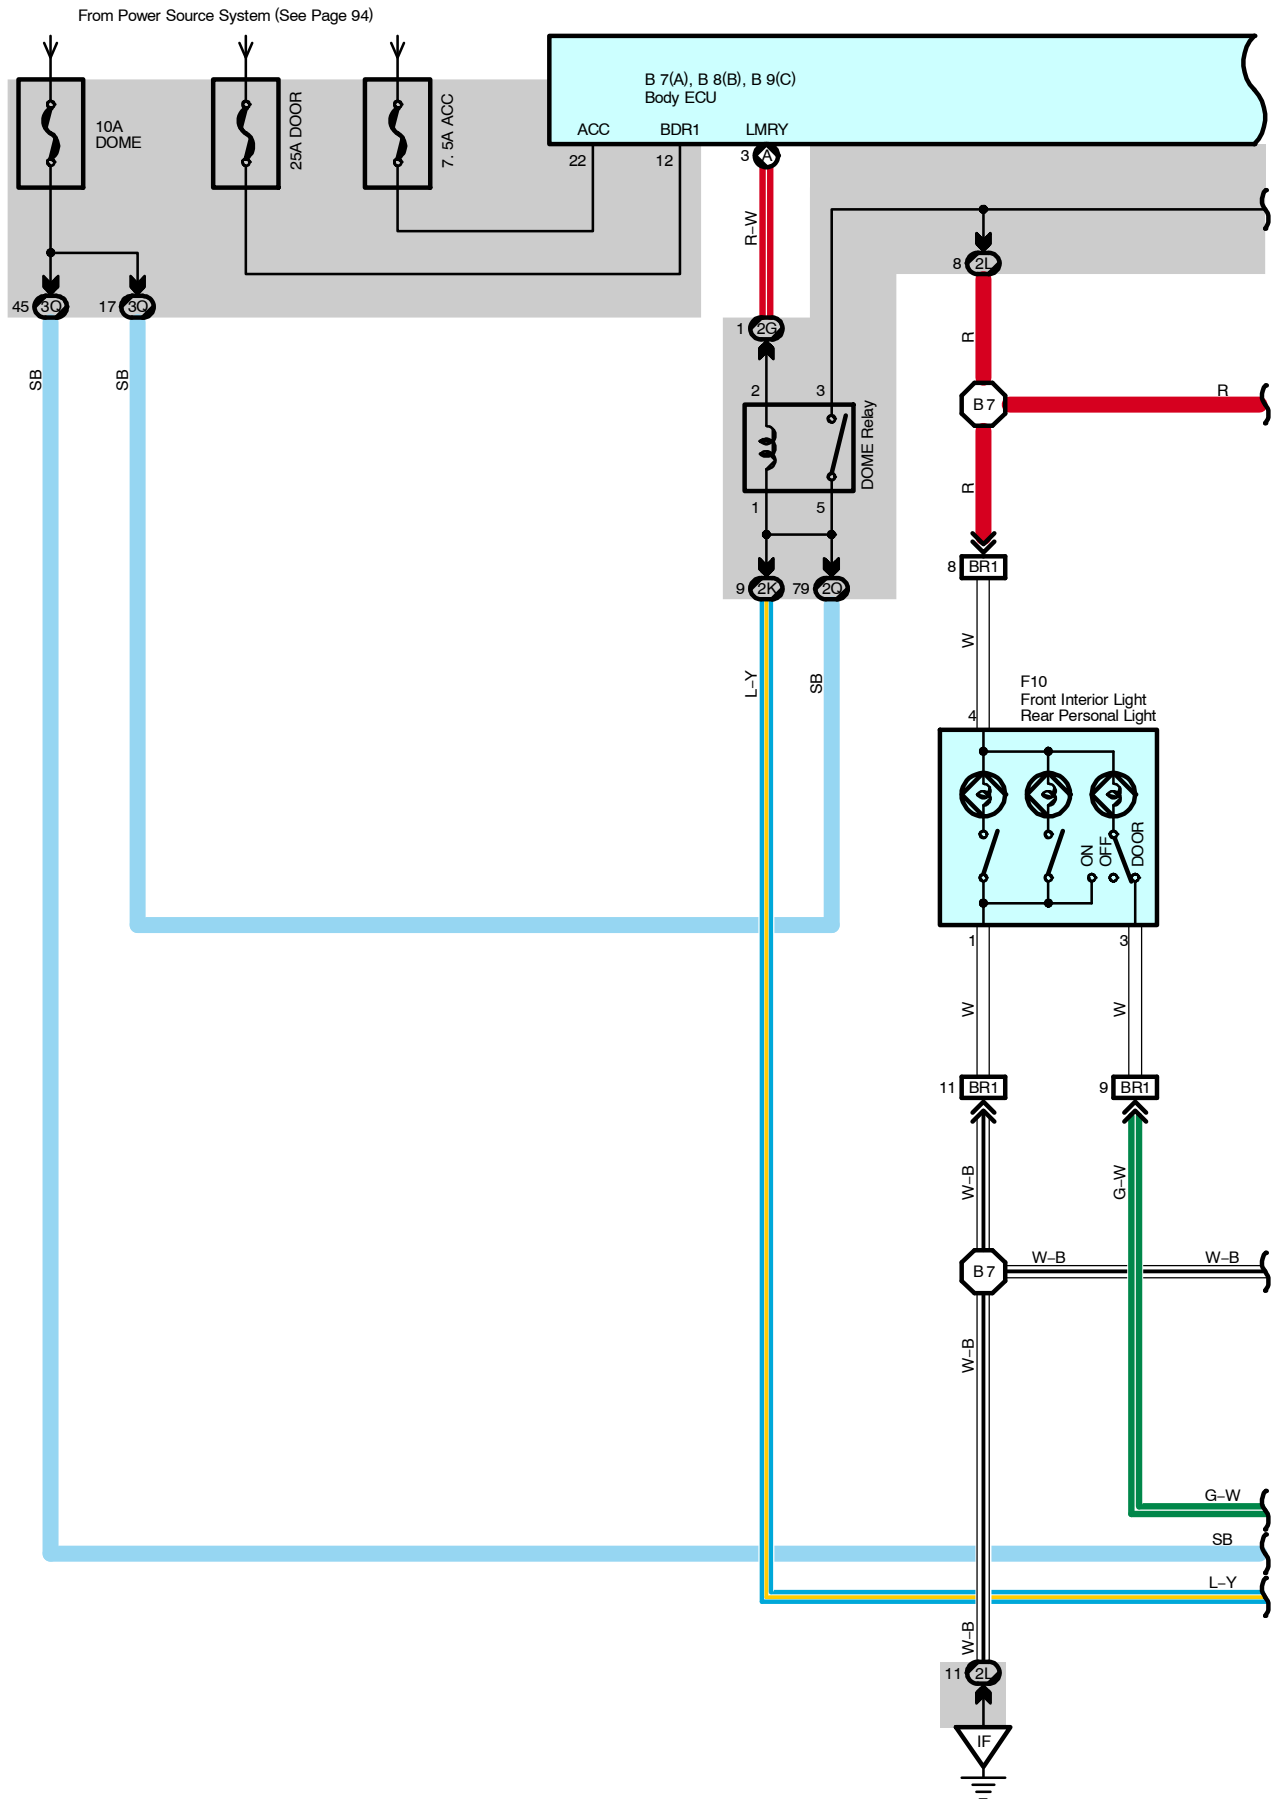

Interior Light

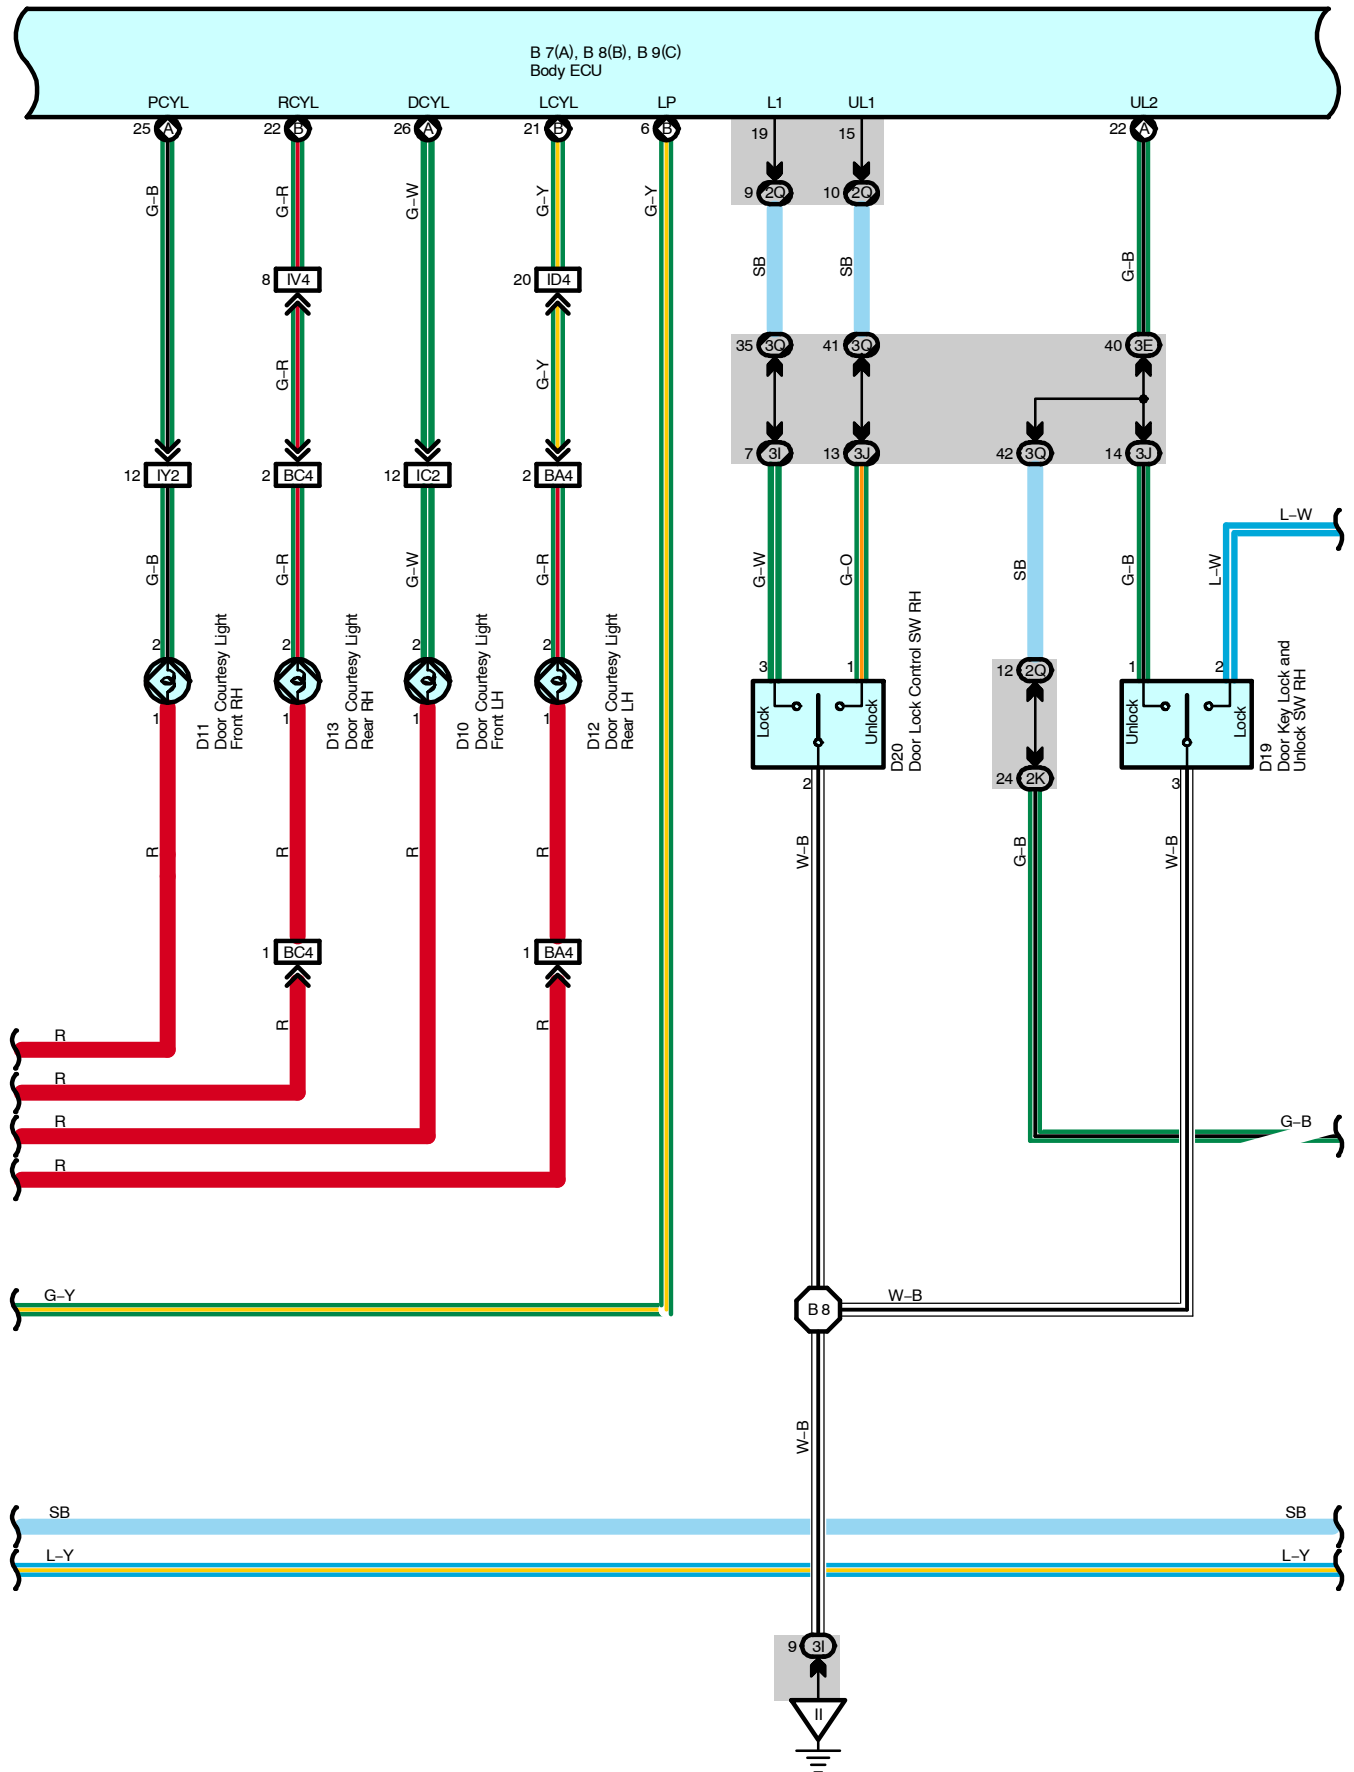

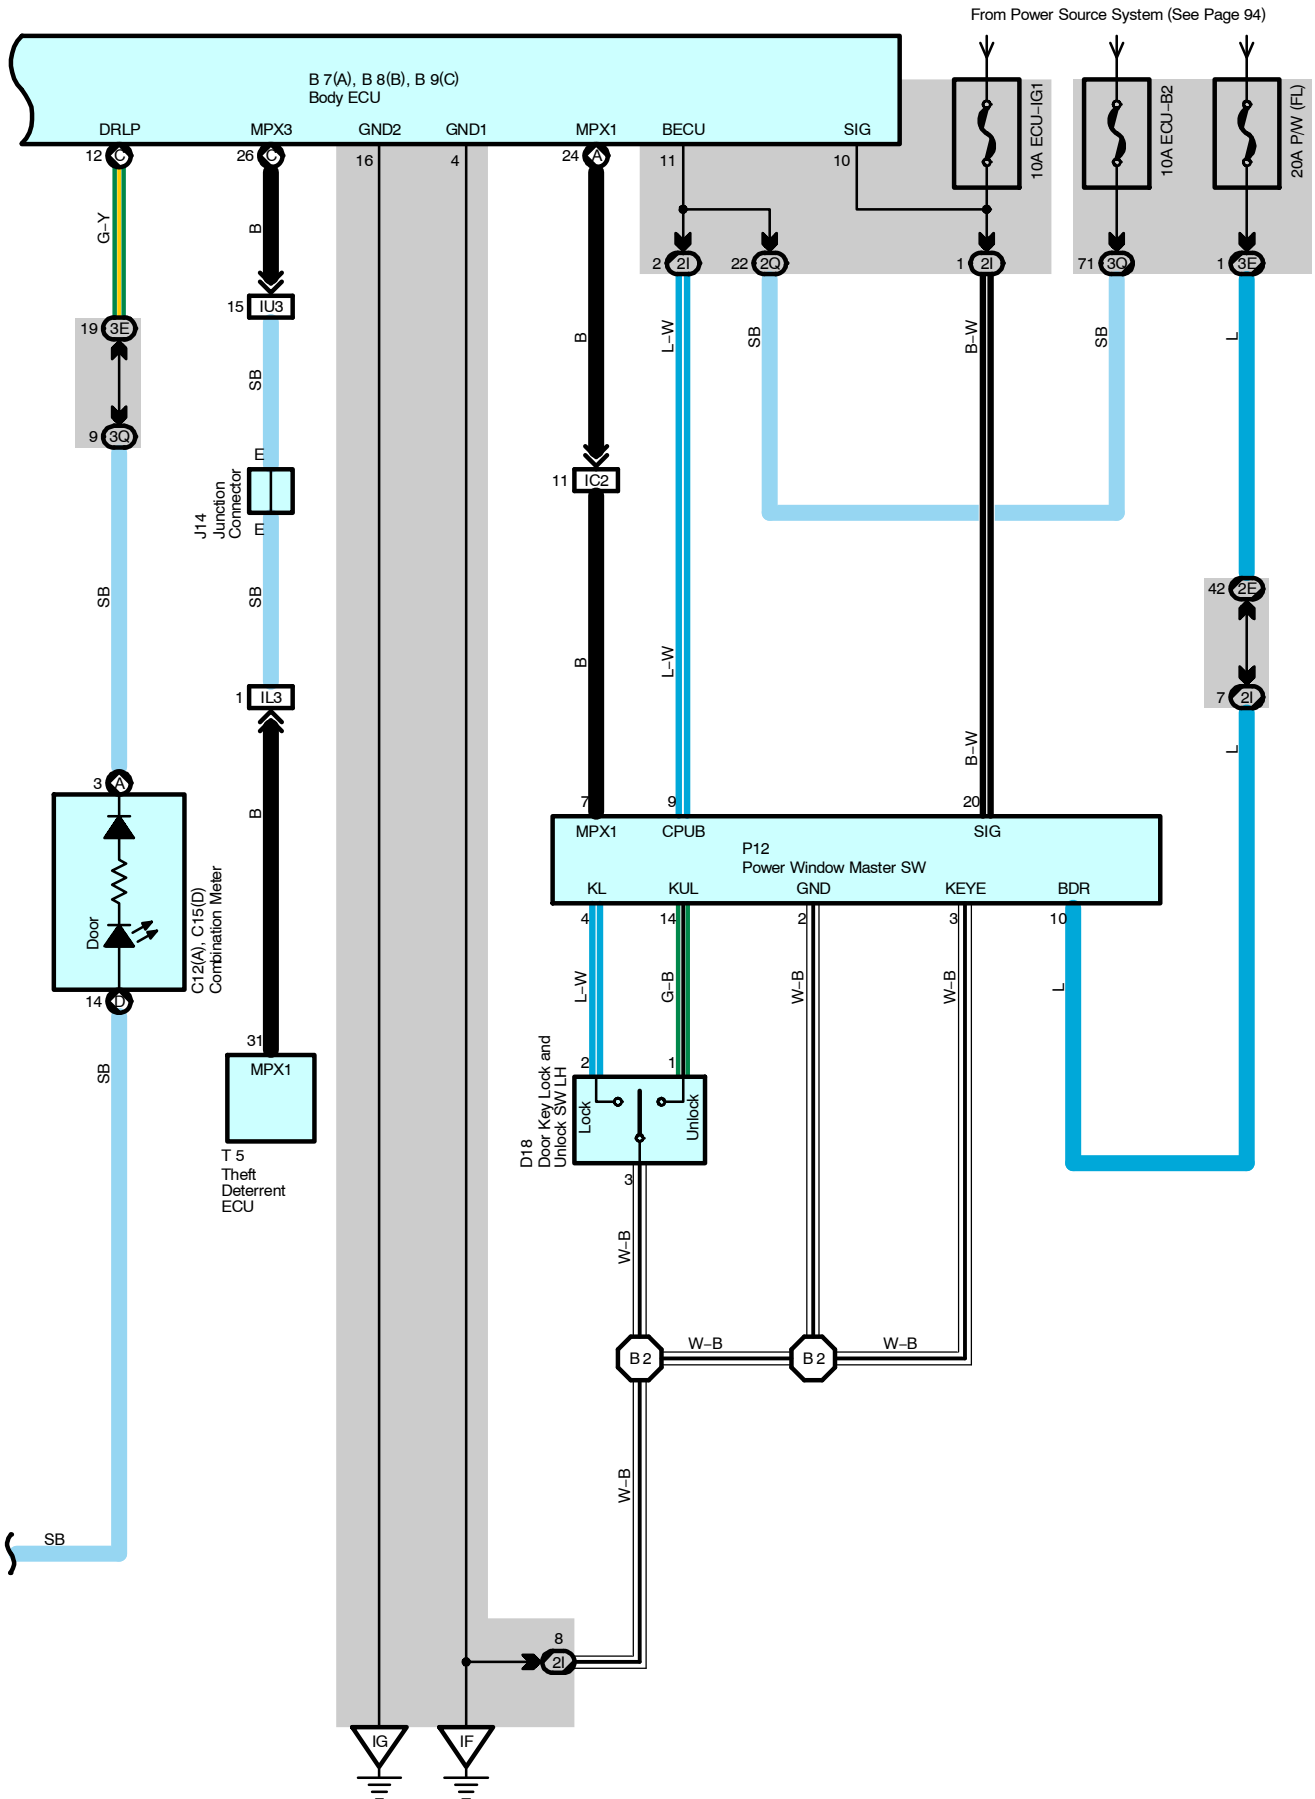

System Outline

Normal Operation

- * When the front Door LH or RH is opened, the door courtesy light front LH, RH and open door warning light is turned on. When the front door LH and RH are closed, the door courtesy light front LH, RH is turned off.
- * When the rear door LH, RH or the back door is opened, door courtesy light rear LH, RH, rear interior light and the open door warning light is turned on. When the rear door LH, RH and back door are closed, the door courtesy light rear LH, RH is turned off.
- * When all the doors are closed, the open door warning light is turned off.

Turn Off Function

When the ignition SW turned off and there is no change in the door courtesy SW for approx. 30 minute, the DOME relay is turned off. The DOME relay is turned on again when any of the following conditions are met.

- * Ignition SW is turned from OFF position to ACC or ON position
- * Change to any door courtesy SW
- * Driver or front passenger door is unlocked by the key or transmitter

Immediate Turn Off Function at Door Lock

When all the doors are closed, and the driver or front passenger door is locked by the key or transmitter, the DOME relay is turned off, after approx. 80 seconds. However, when the illuminated entry system is operating, the DOME relay is turned off after the operation is completed. the DOME relay is turned on again when any of the following conditions are met.

- * Ignition SW is turned from OFF position to ACC or ON position
- * Change to any door courtesy SW
- * Driver or front passenger door is unlocked by the key or transmitter

Illuminated Entry System

- * When any door is opened, each light is turned on.
- * The light remains on for approx. 15 seconds after all doors are closed, and fades out.
- * With the ignition SW is at ACC or ON position, and any door open, when all the doors are closed, each light fades out immediately.
- * When the ignition SW is turned to ACC or ON position during timer lighting, each light fades out immediately.
- * When the doors are locked during timer lighting, each light fades out immediately.
- * The lights include, the front interior light, ignition key cylinder light, and front door courtesy light LH, RH.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	72	D13	72	F11	72
B3	72	D14	72	J14	71
B7	A	D15	72	J22	72
B8	B	D16	72	P12	73
B9	C	D17	72	R27	73
C12	A	D18	72	T5	71
C15	D	D19	72	T10	71
D10	72	D20	72	V6	73
D11	72	D27	72	V7	73
D12	72	F10	72		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2I	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3I	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3J		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

Interior Light

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	78	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID4	78	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IL3	80	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IU3	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IV3	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IV4		
IY2	82	Front Door RH Wire and Dash Wire (Right Kick Panel)
BA4	86	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BC4	86	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BH1	86	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BH2		
BP3	88	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BP4		
BQ2	88	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BR1	88	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)

: Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH
IG		
II	78	Set Bolt of Cowl Side J/B RH
BJ	86	Under the Driver's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	88	Front Door LH Wire	B8	88	Front Door RH Wire
B7	88	Roof No.1 Wire	B11	88	Floor No.1 Wire

