



Trailer Towing

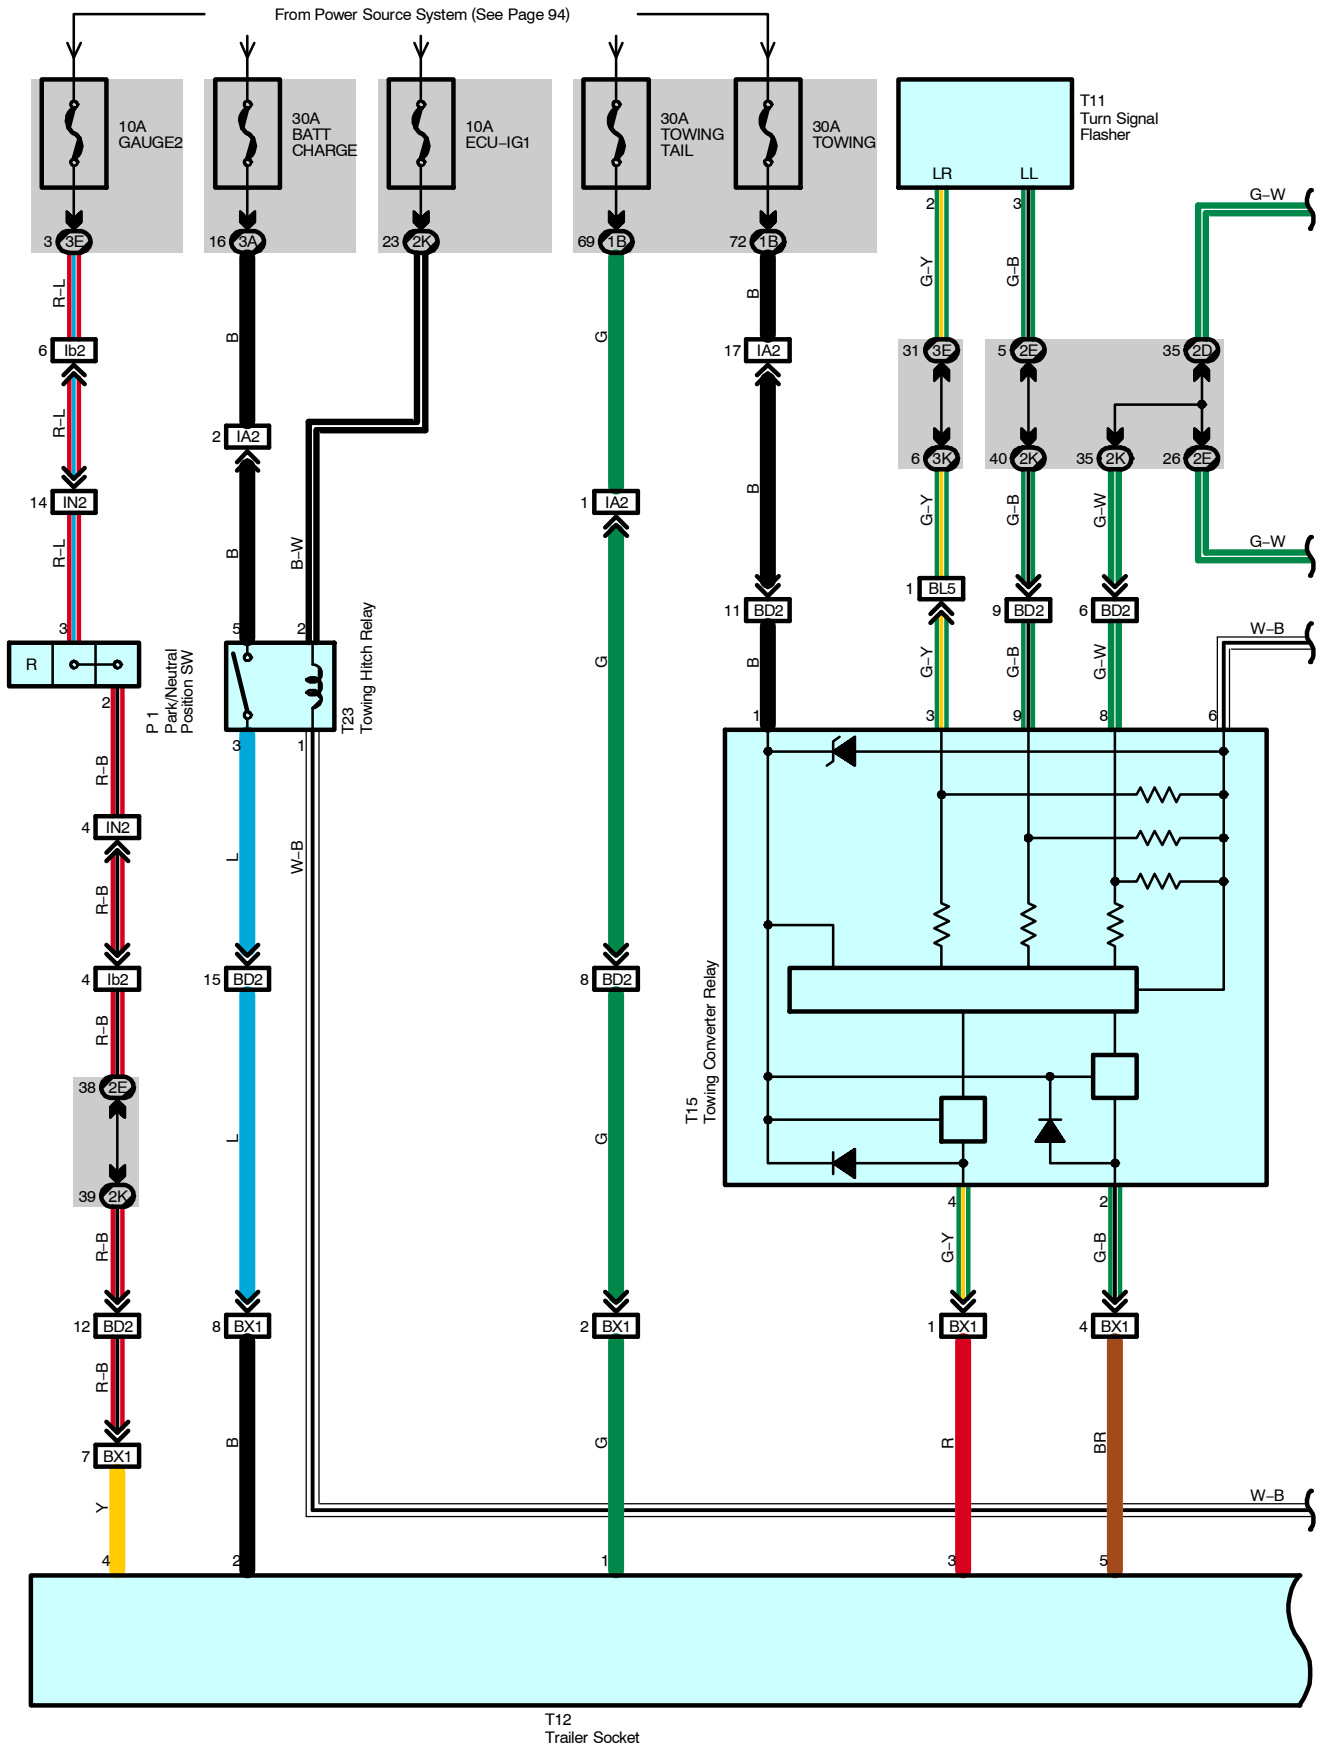

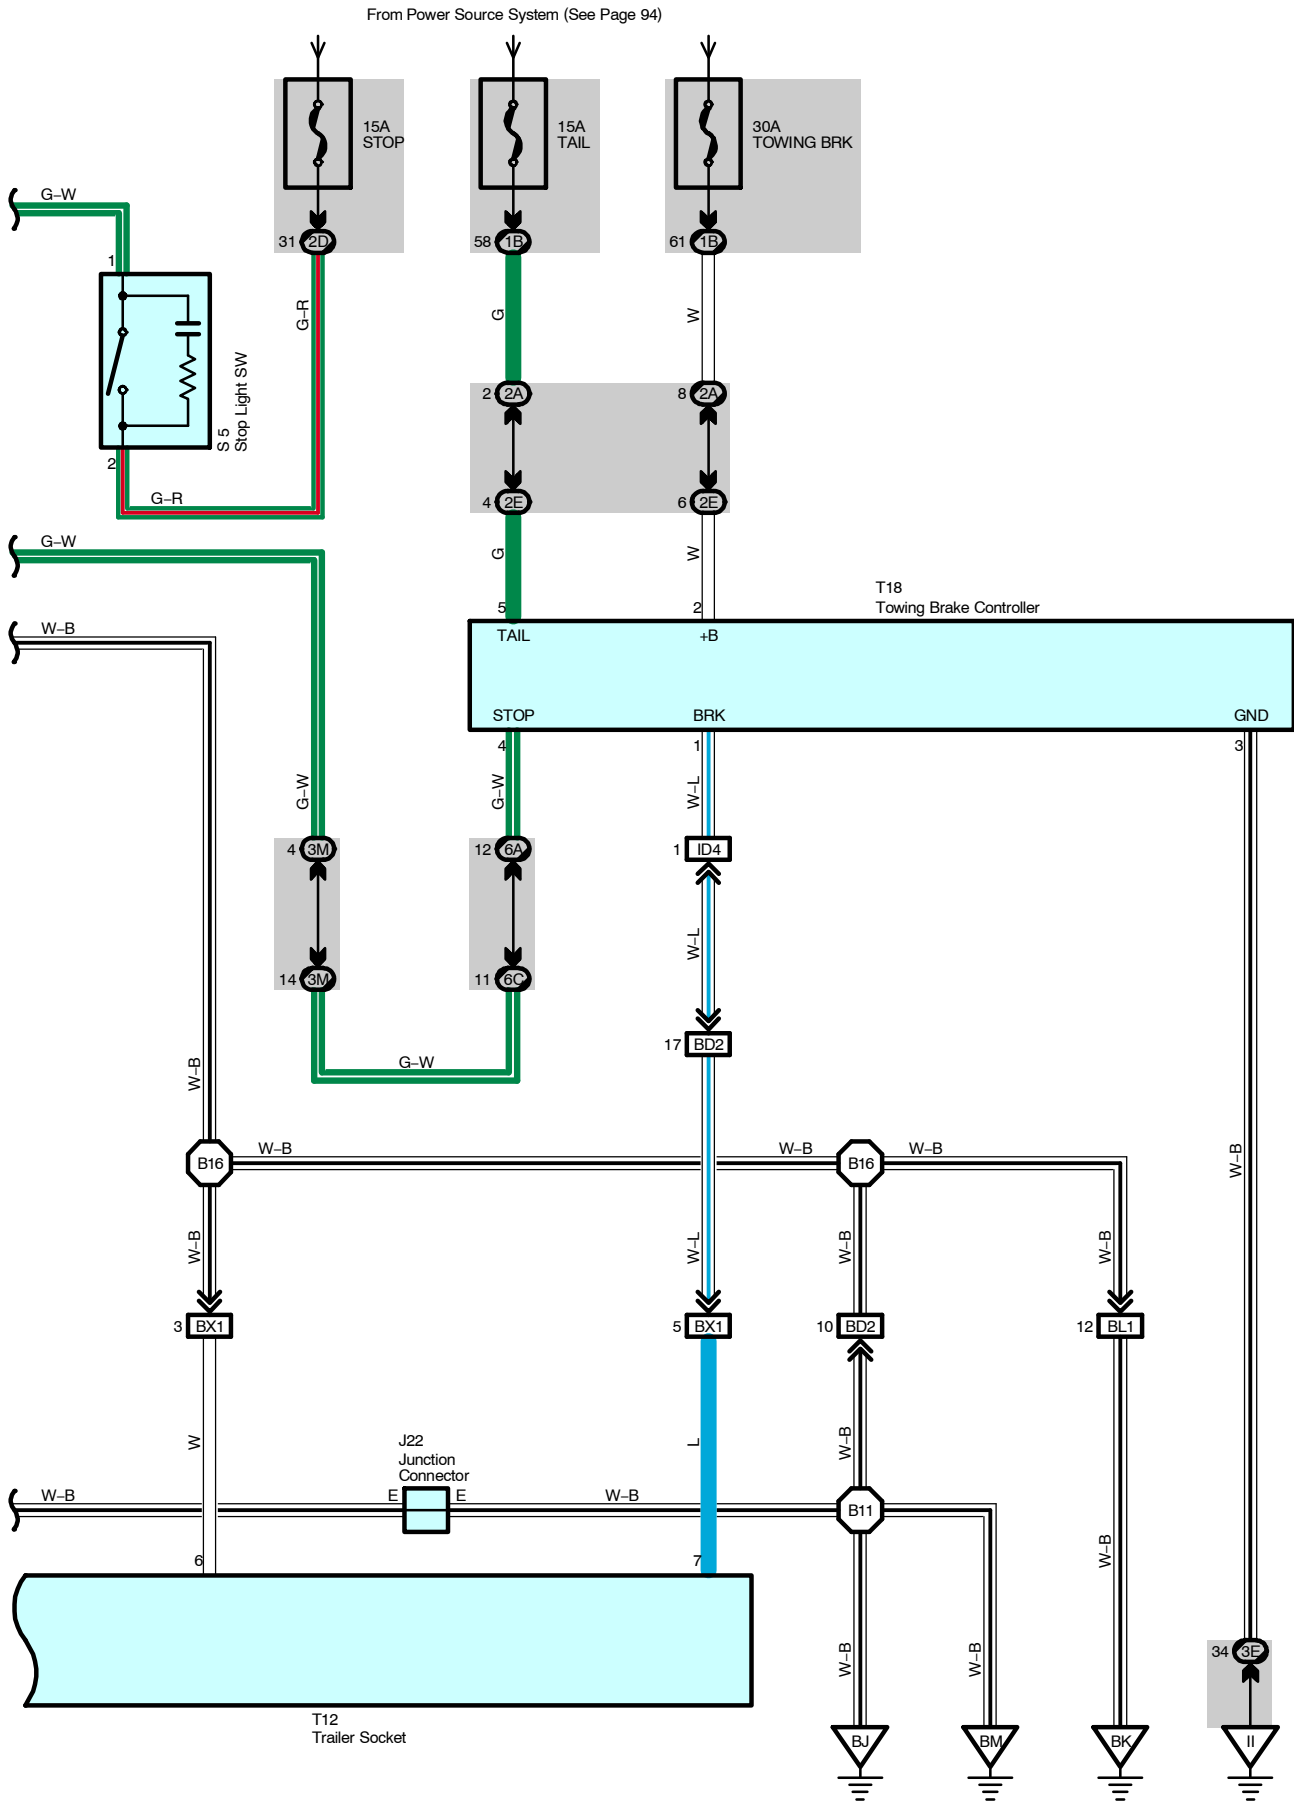

Trailer Towing

Service Hints

T15 Towing Converter Relay

- 1-Ground : Always approx. 12 volts
- 6-Ground : Always continuity

S5 Stop Light SW

- 2-1 : Closed with brake pedal depressed

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J22	72	T11	71	T18	71
P1	69	T12	73	T23	73
S5	71	T15	73		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3A	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3M	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
6A	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	78	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
ID4	78	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IN2	80	Engine Wire and Dash Wire (Behind the Glove Box)
Ib2	84	Dash Wire and Dash Wire (Behind the Combination Meter)
BD2	86	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BL1	88	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BL5		
BX1	88	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)

▽ : Ground Points

Code	See Page	Ground Points Location
II	78	Set Bolt of Cowl Side J/B RH
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat
BM	86	Left Rear Side Quarter Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B11	88	Floor No.1 Wire	B16	88	Floor No.3 Wire

