


# Power Outlet

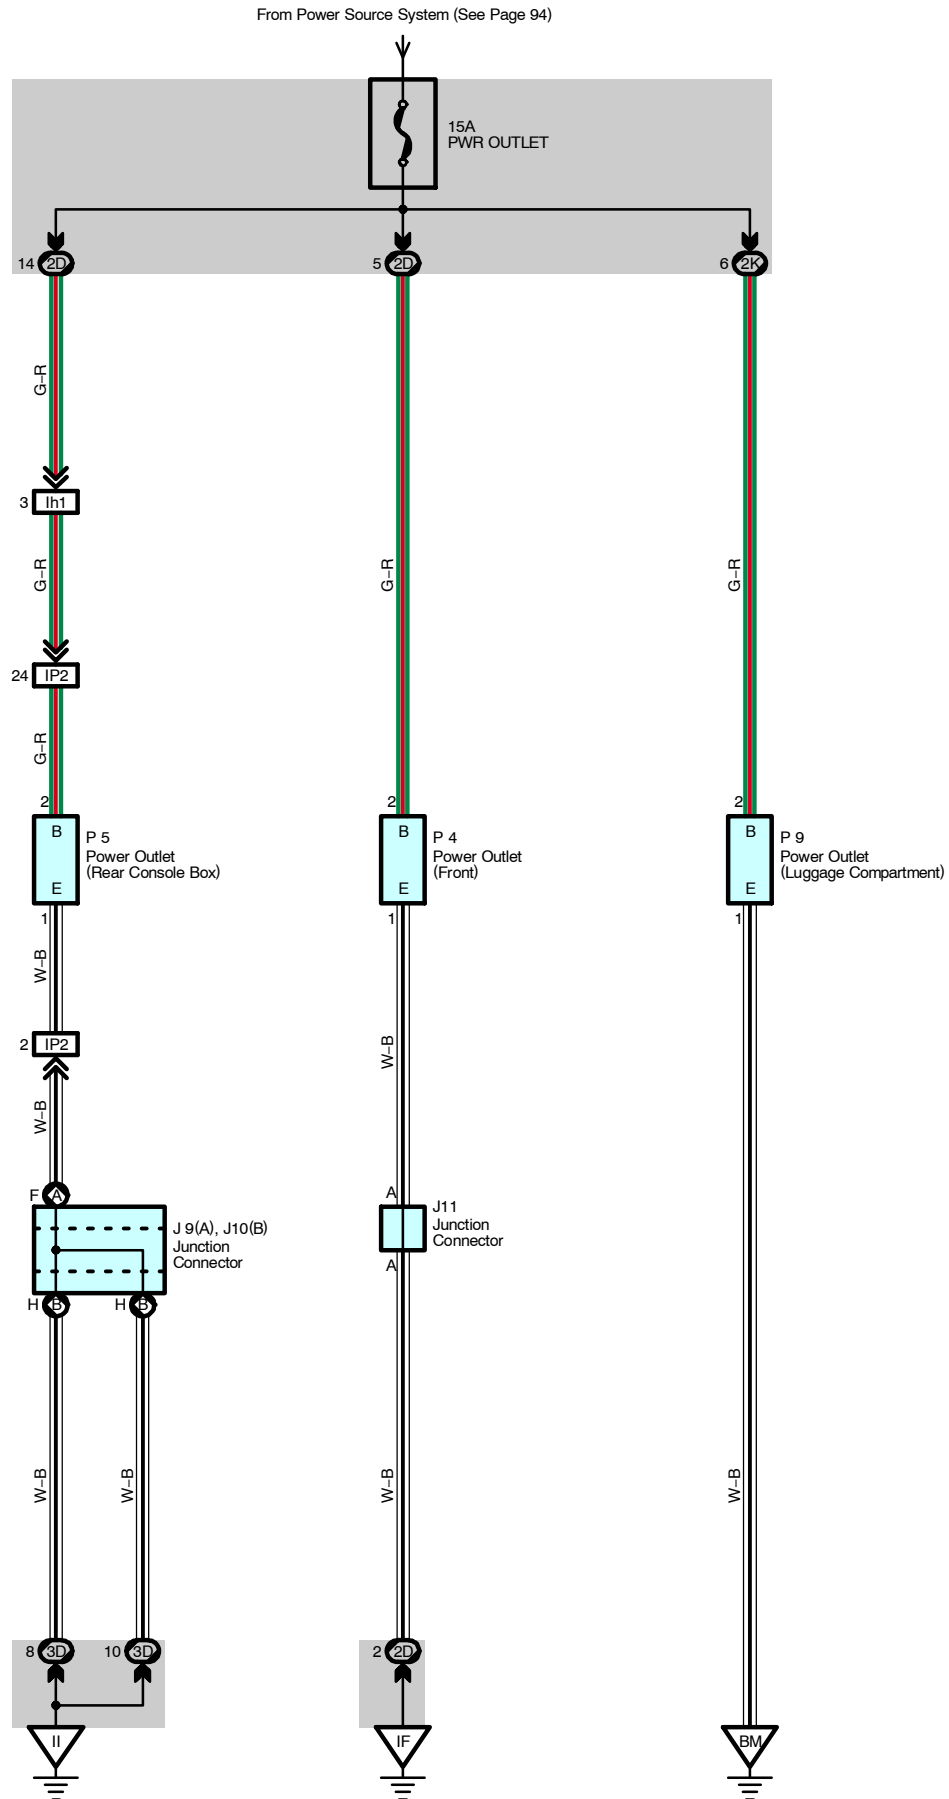

## Service Hints

### P4 Power Outlet (Front)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

### P5 Power Outlet (Rear Console Box)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

### P9 Power Outlet (Luggage Compartment)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

## ○ : Parts Location

| Code |   | See Page | Code | See Page | Code | See Page |
|------|---|----------|------|----------|------|----------|
| J9   | A | 71       | J11  | 71       | P5   | 71       |
| J10  | B | 71       | P4   | 71       | P9   | 73       |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)   |
|------|----------|--------------------------------------------------------|
| 2D   | 28       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)       |
| 2K   | 28       | Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel) |
| 3D   | 40       | Dash Wire and Cowl Side J/B RH (Right Kick Panel)      |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)       |
|------|----------|------------------------------------------------------------------|
| IP2  | 80       | Rear Console Box Wire and Dash Wire (Right Side of Rear Console) |
| Ih1  | 84       | Dash Wire and Dash Wire (Center Side of Front Console)           |

## ▽ : Ground Points

| Code | See Page | Ground Points Location       |
|------|----------|------------------------------|
| IF   | 78       | Set Bolt of Cowl Side J/B LH |
| II   | 78       | Set Bolt of Cowl Side J/B RH |
| BM   | 86       | Left Rear Side Quarter Panel |