


Garage Door Opener

From Power Source System (See Page 94)

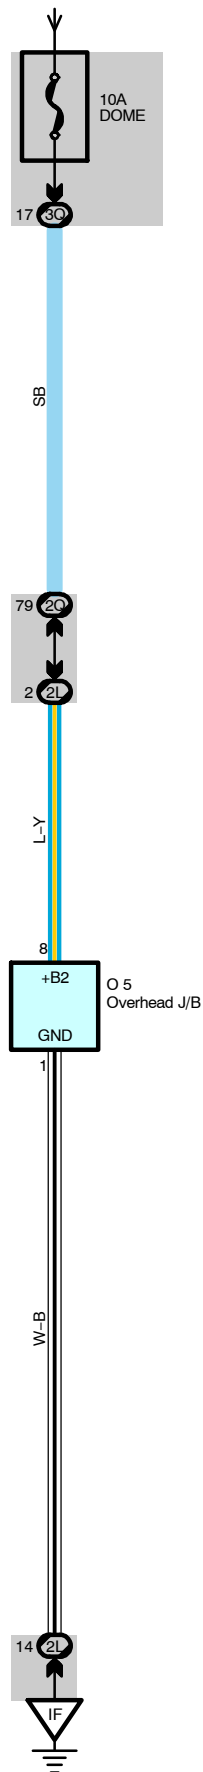

Service Hints

O5 Overhead J/B

8-Ground : Always approx. 12 volts

1-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
O5	72				

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH