



Theft Deterrent

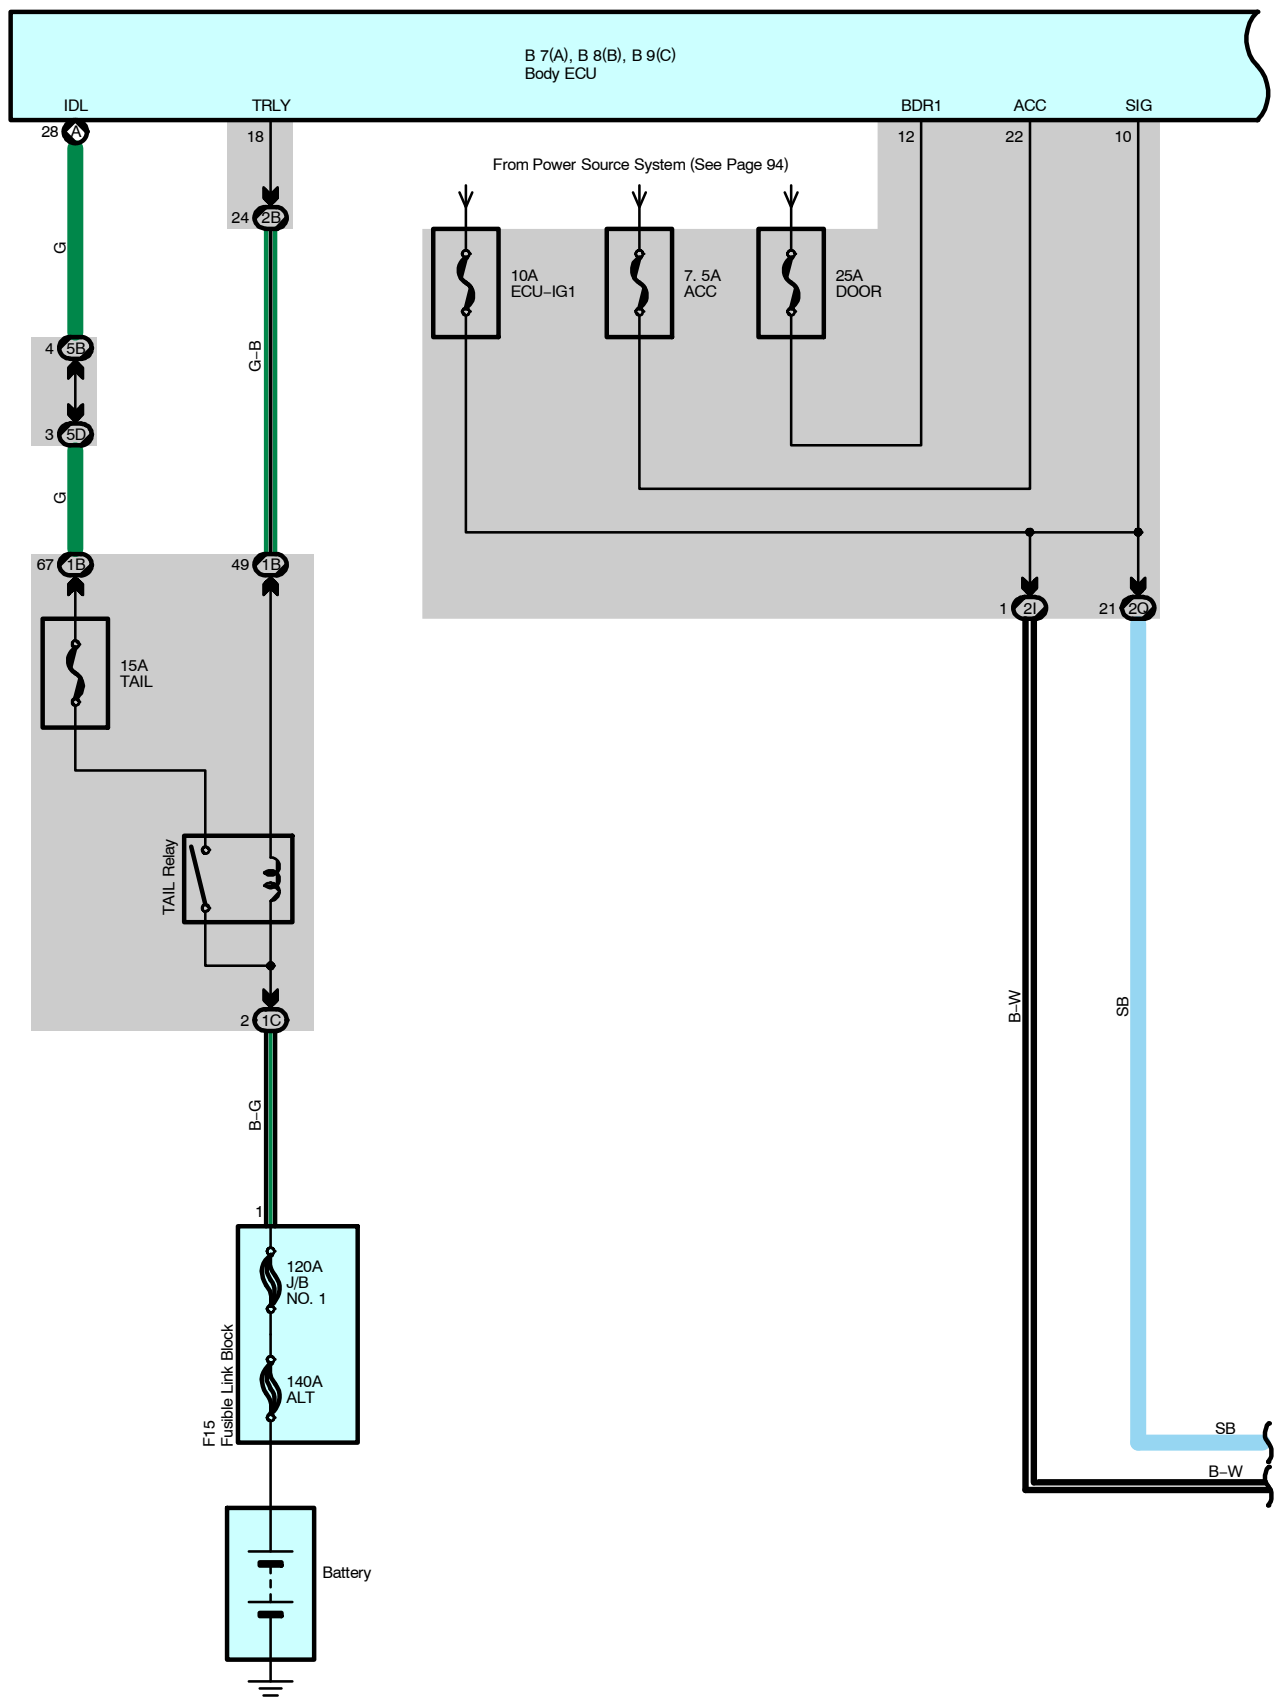



Theft Deterrent

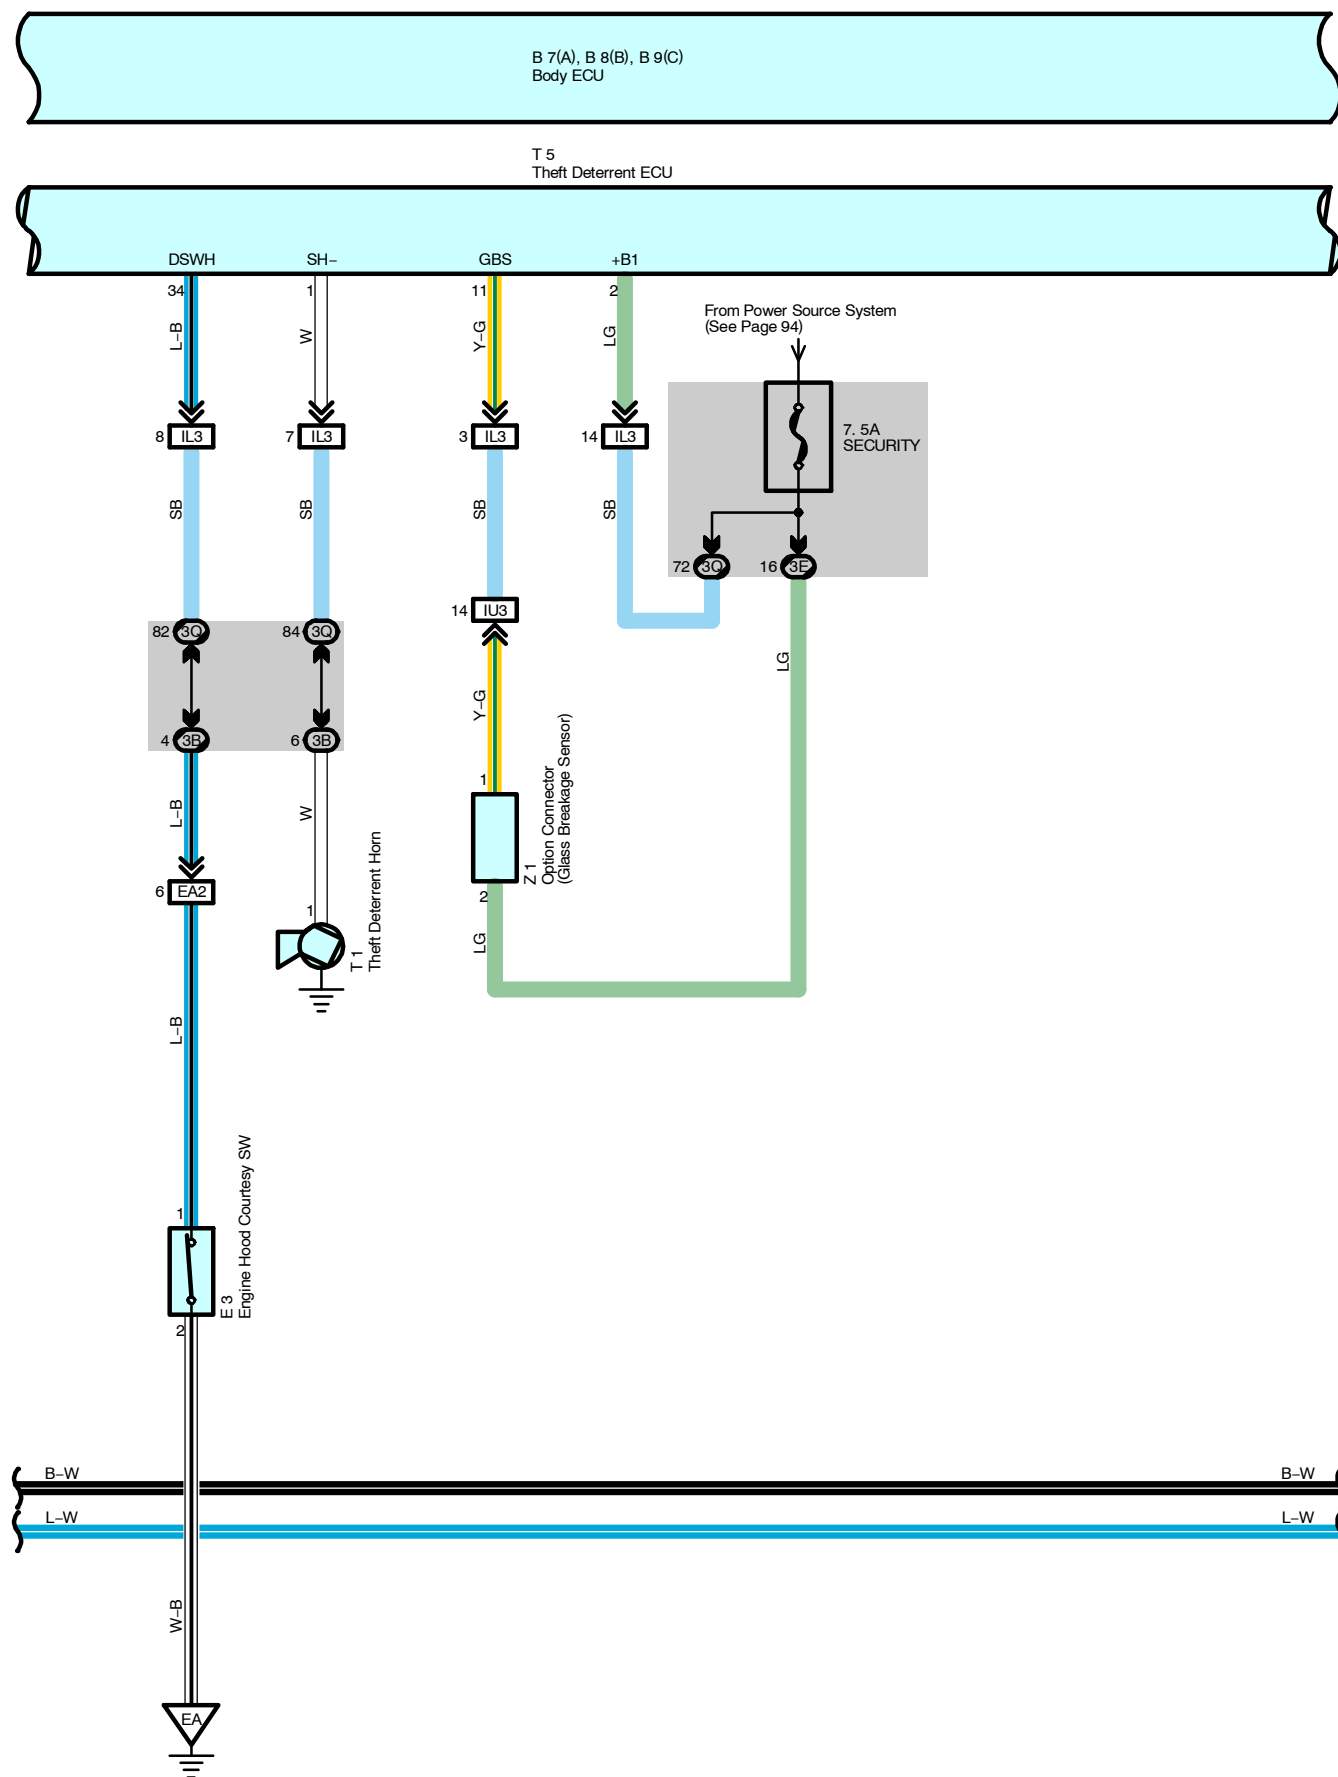





Theft Deterrent

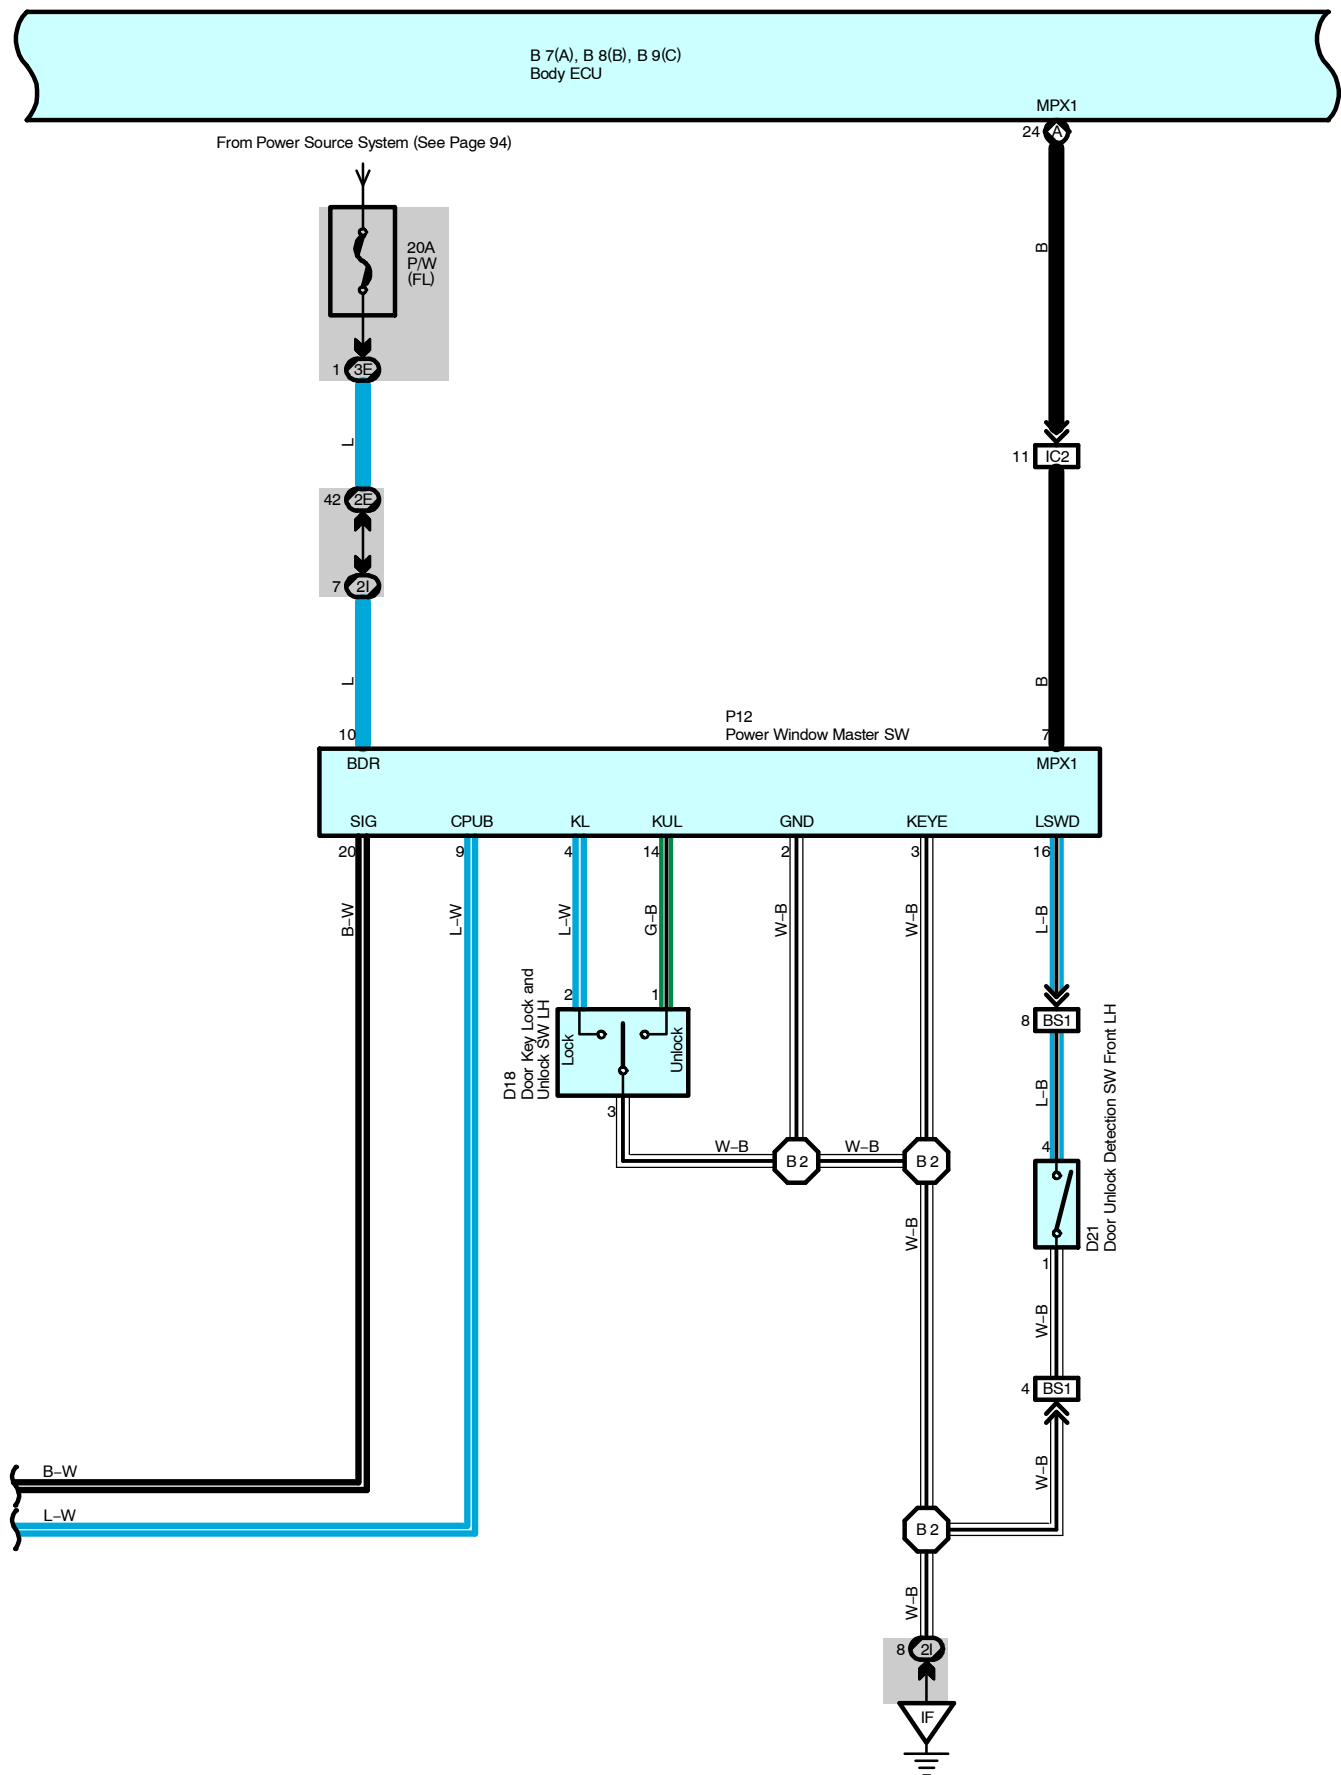

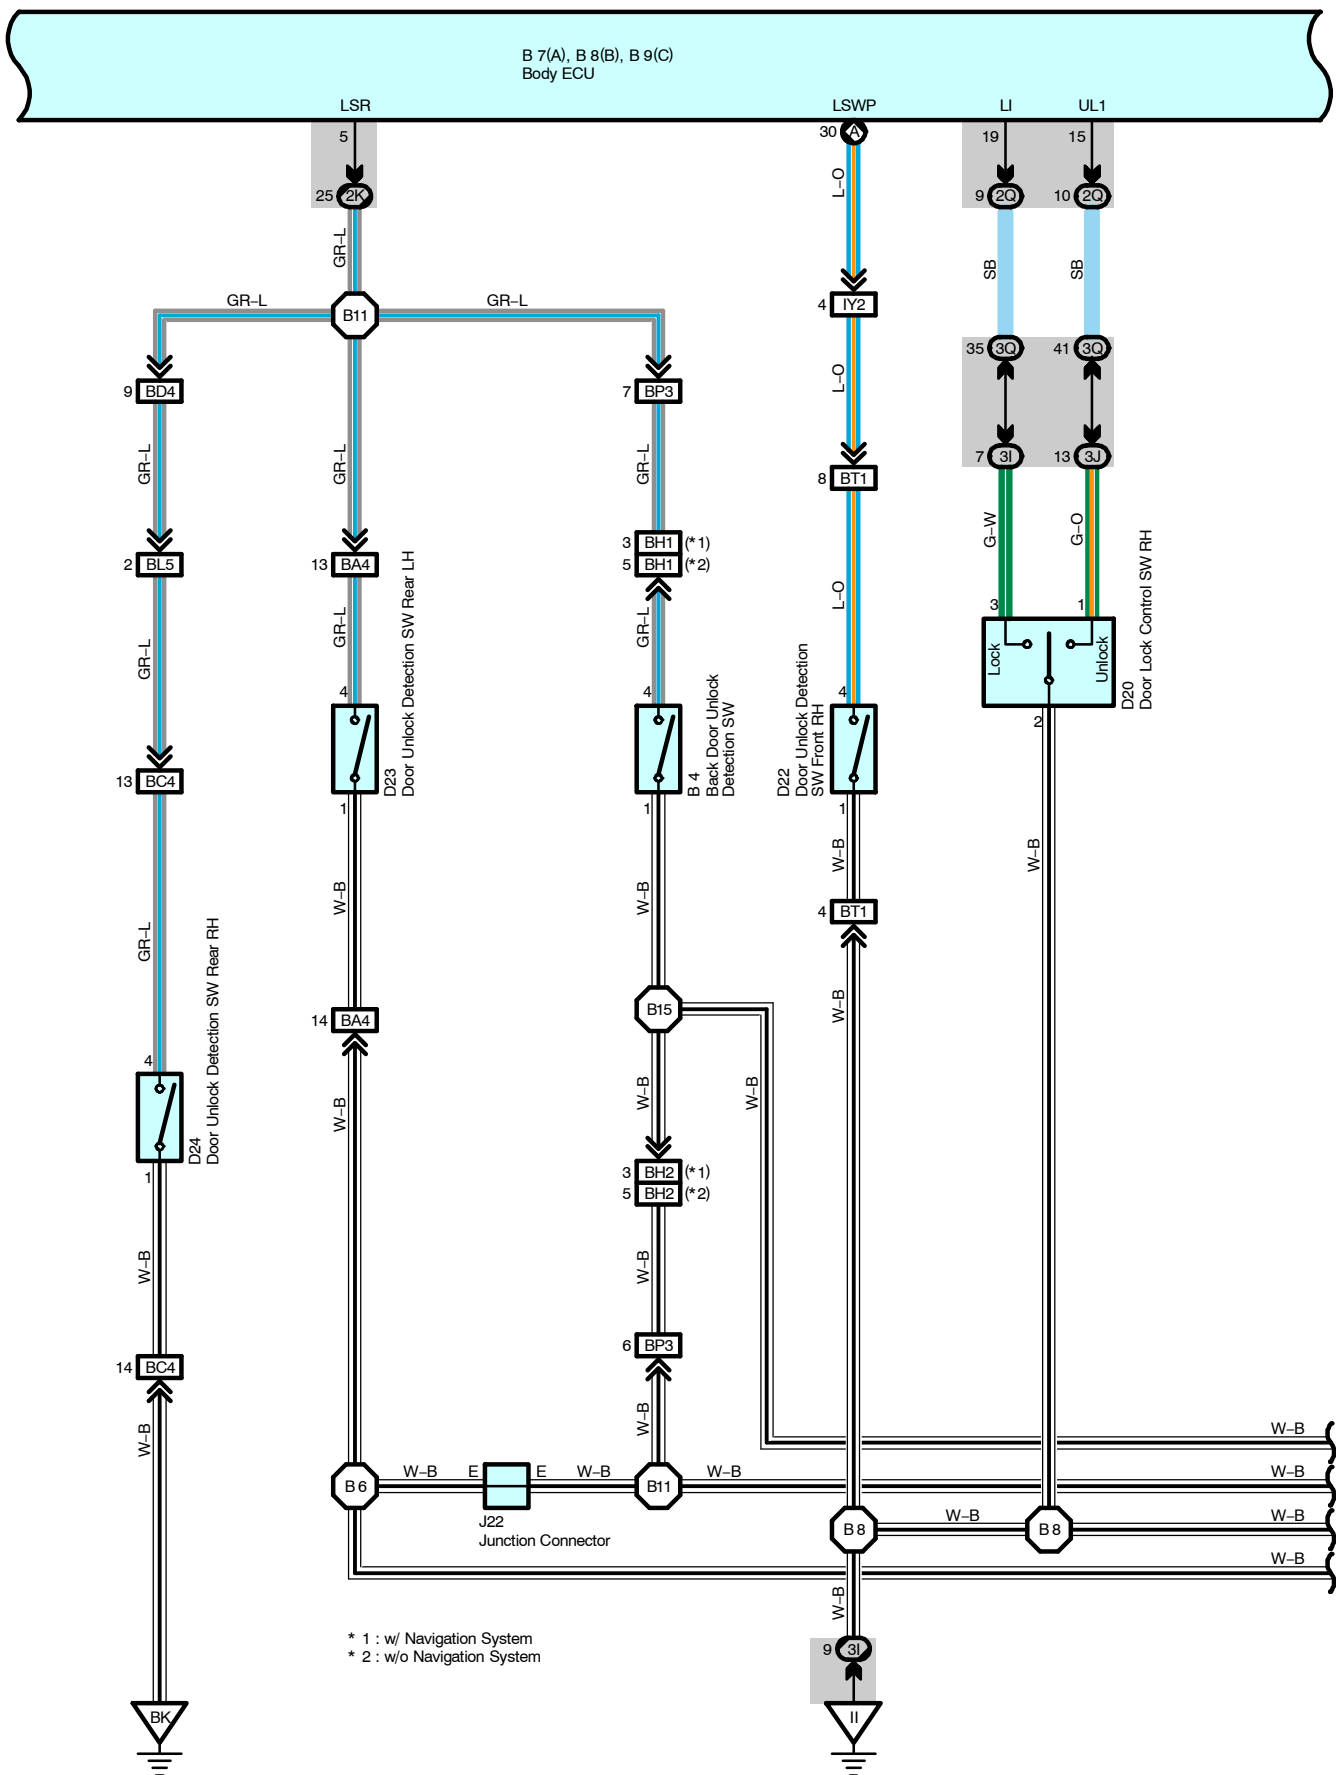


Theft Deterrent

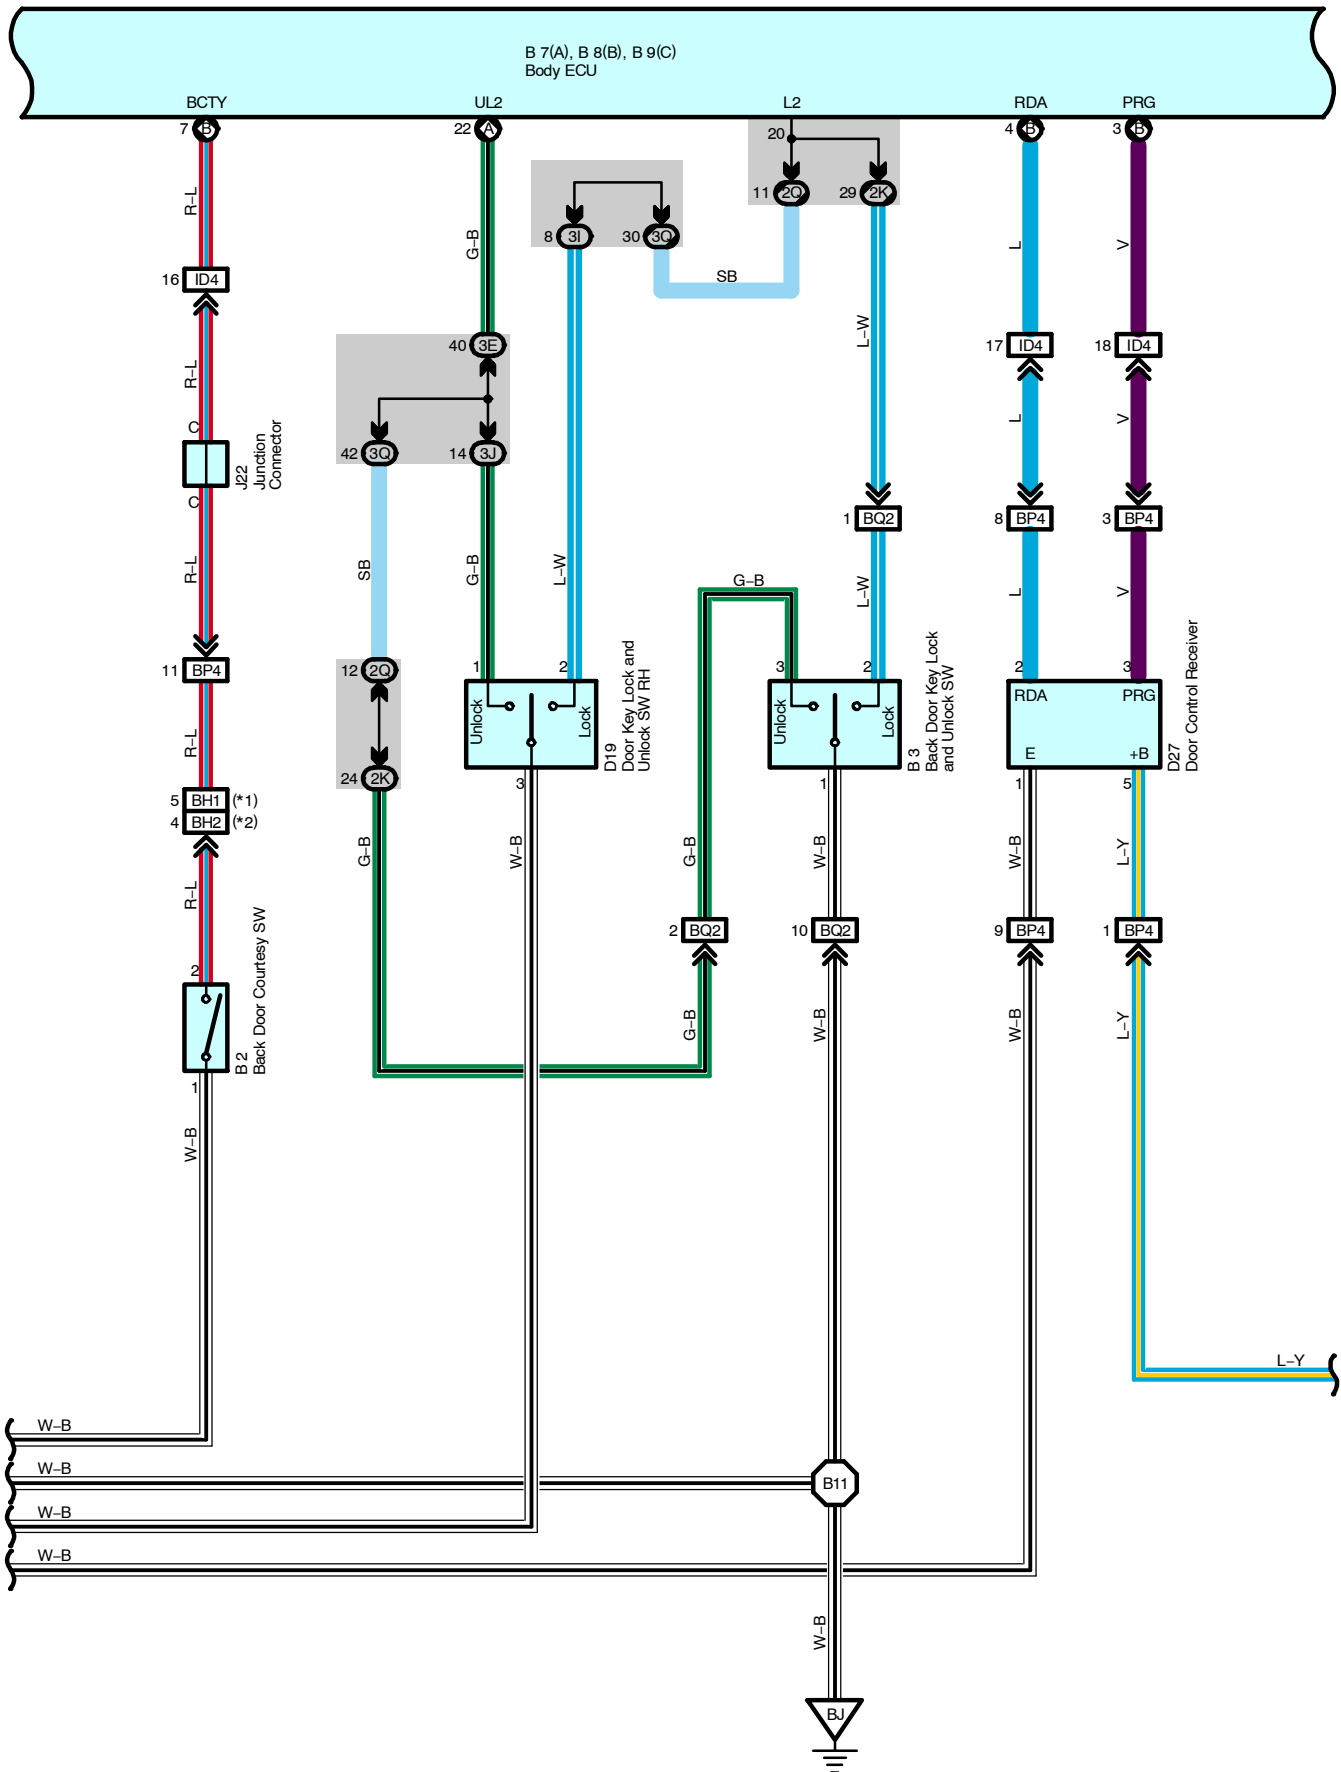

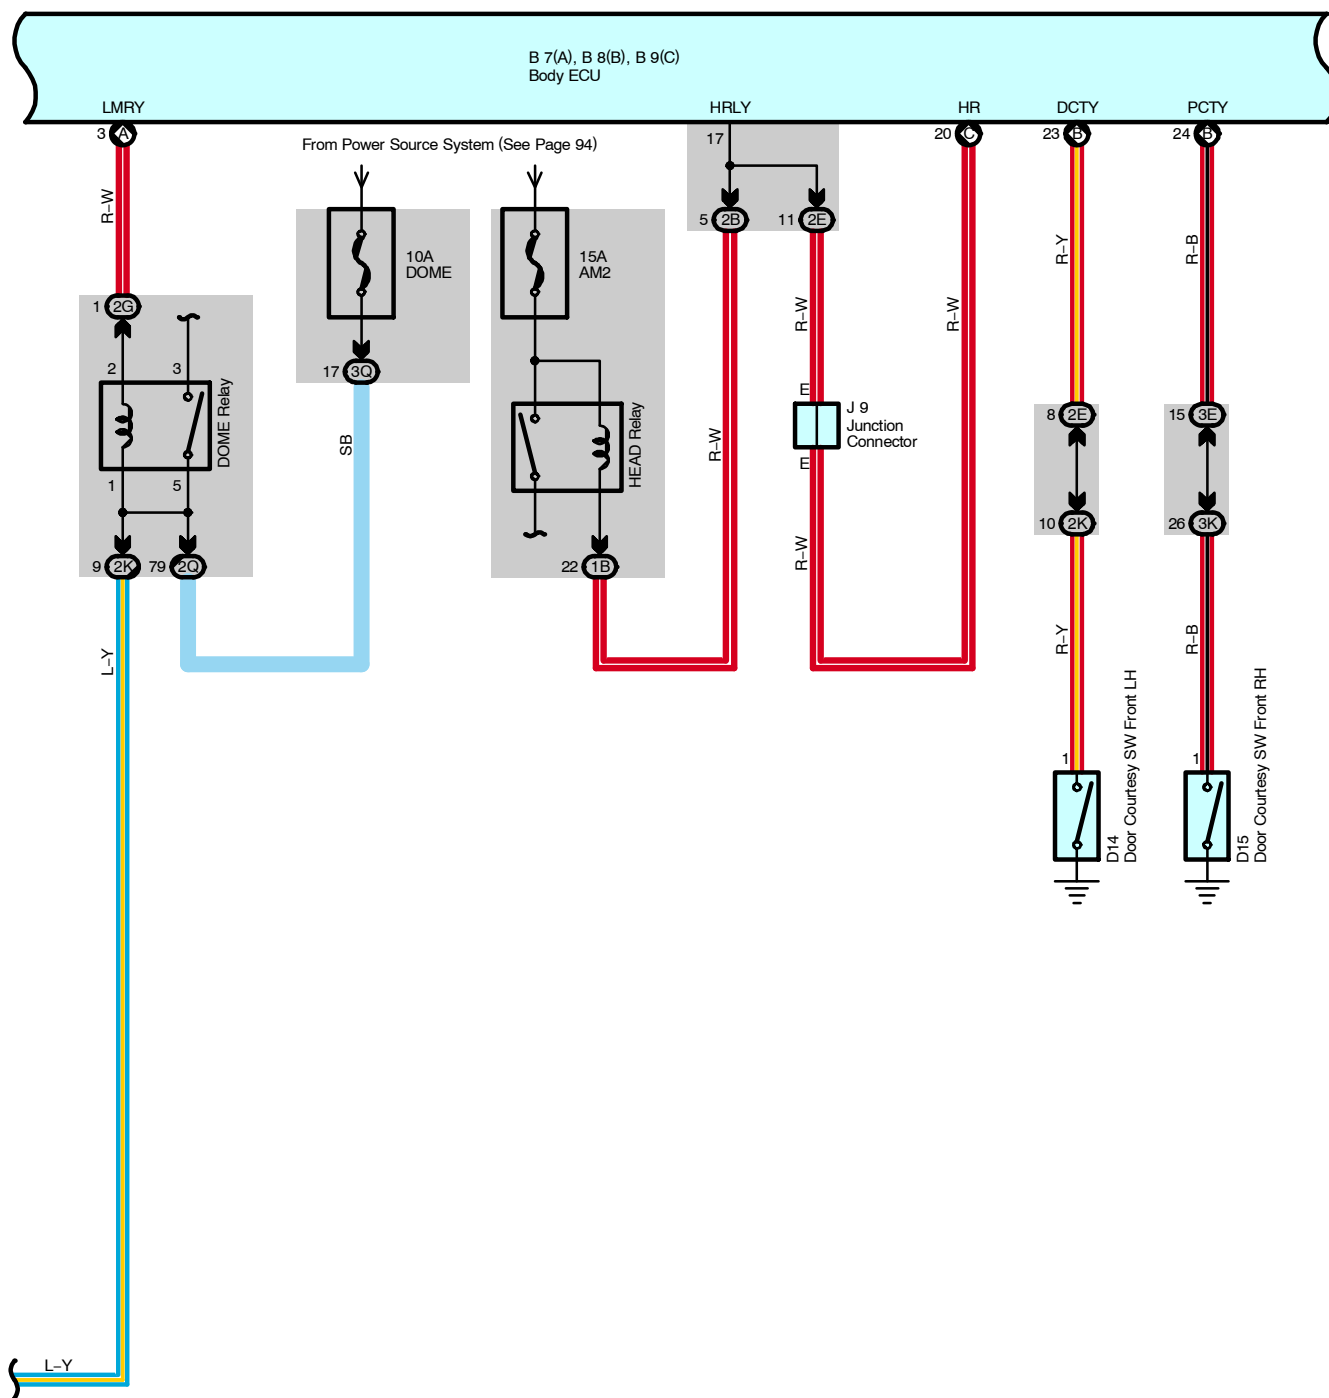

* 1 : w/ Navigation System
 * 2 : w/o Navigation System

Theft Deterrent

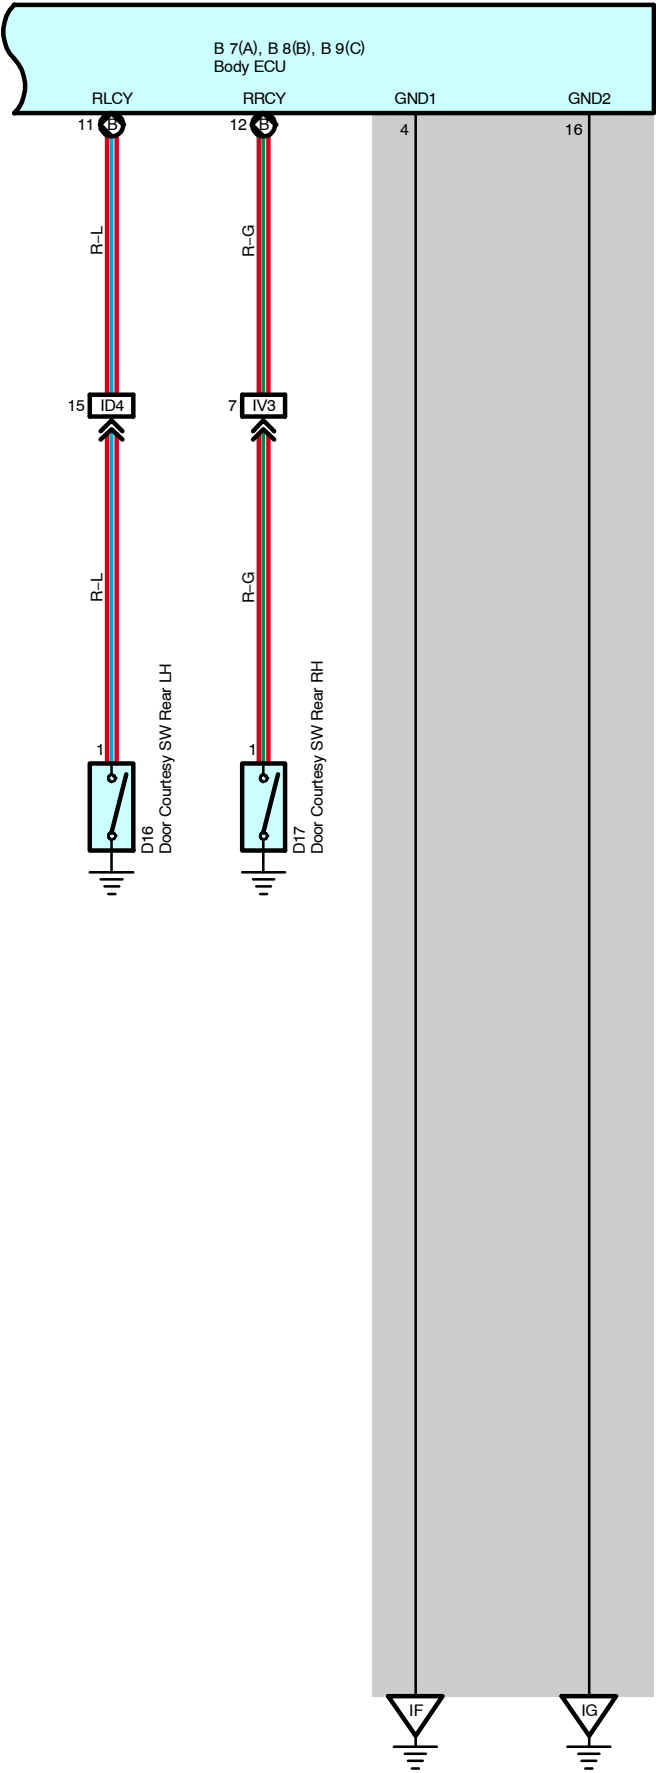

Service Hints

D18, D19 Door Key Lock and Unlock SW LH, RH

- 1-3 : Closed with door lock cylinder unlocked with key
- 2-3 : Closed with door lock cylinder locked with key

B3 Back Door Key Lock and Unlock SW

- 3-1 : Closed with door lock cylinder unlocked with key
- 2-1 : Closed with door lock cylinder locked with key

E3 Engine Hood Courtesy SW

- 1-2 : Opened with engine hood open

U1 Unlock Warning SW

- 2-1 : Closed with ignition key in cylinder

T5 Theft Deterrent ECU

- 2, 3-Ground : Always approx. 12 volts
- 10-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 29-Ground : Always continuity
- 12-Ground : Continuity with ignition key in cylinder
- 34-Ground : Continuity with engine hood close

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B2	72	D18	72	J10	71
B3	72	D19	72	J14	71
B4	72	D20	72	J22	72
B7	A 70	D21	72	M5	A 71
B8	B 70	D22	72	M9	B 71
B9	C 70	D23	72	P12	73
D7	70	D24	72	T1	69
D14	72	D27	72	T5	71
D15	72	E3	68	U1	71
D16	72	F15	68	Z1	71
D17	72	J9	71		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2I	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3I	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3J		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3P	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4D	52	Dash Wire and J/B No.4 (Instrument Panel Center)
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)
7B	64	Dash Wire and J/B No.7 (Behind the Glove Box)

Theft Deterrent



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	76	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
IC2	78	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID4	78	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IL3	80	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IU3	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IV3	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IY2	82	Front Door RH Wire and Dash Wire (Right Kick Panel)
BA4	86	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BC4	86	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BD4	86	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BH1	86	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BH2		
BL5	88	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP3	88	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BP4		
BQ2	88	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BS1	88	Door Lock LH Sub Wire and Front Door LH Wire (Front Door LH)
BT1	88	Door Lock RH Sub Wire and Front Door RH Wire (Front Door RH)



: Ground Points

Code	See Page	Ground Points Location
EA	76	Front Right Side of Fender Apron
IF	78	Set Bolt of Cowl Side J/B LH
IG		
II	78	Set Bolt of Cowl Side J/B RH
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	88	Front Door LH Wire	B11	88	Floor No.1 Wire
B6	88	Floor No.1 Wire	B15	88	Back Door Upper Wire
B8	88	Front Door RH Wire			

