



Power Seat

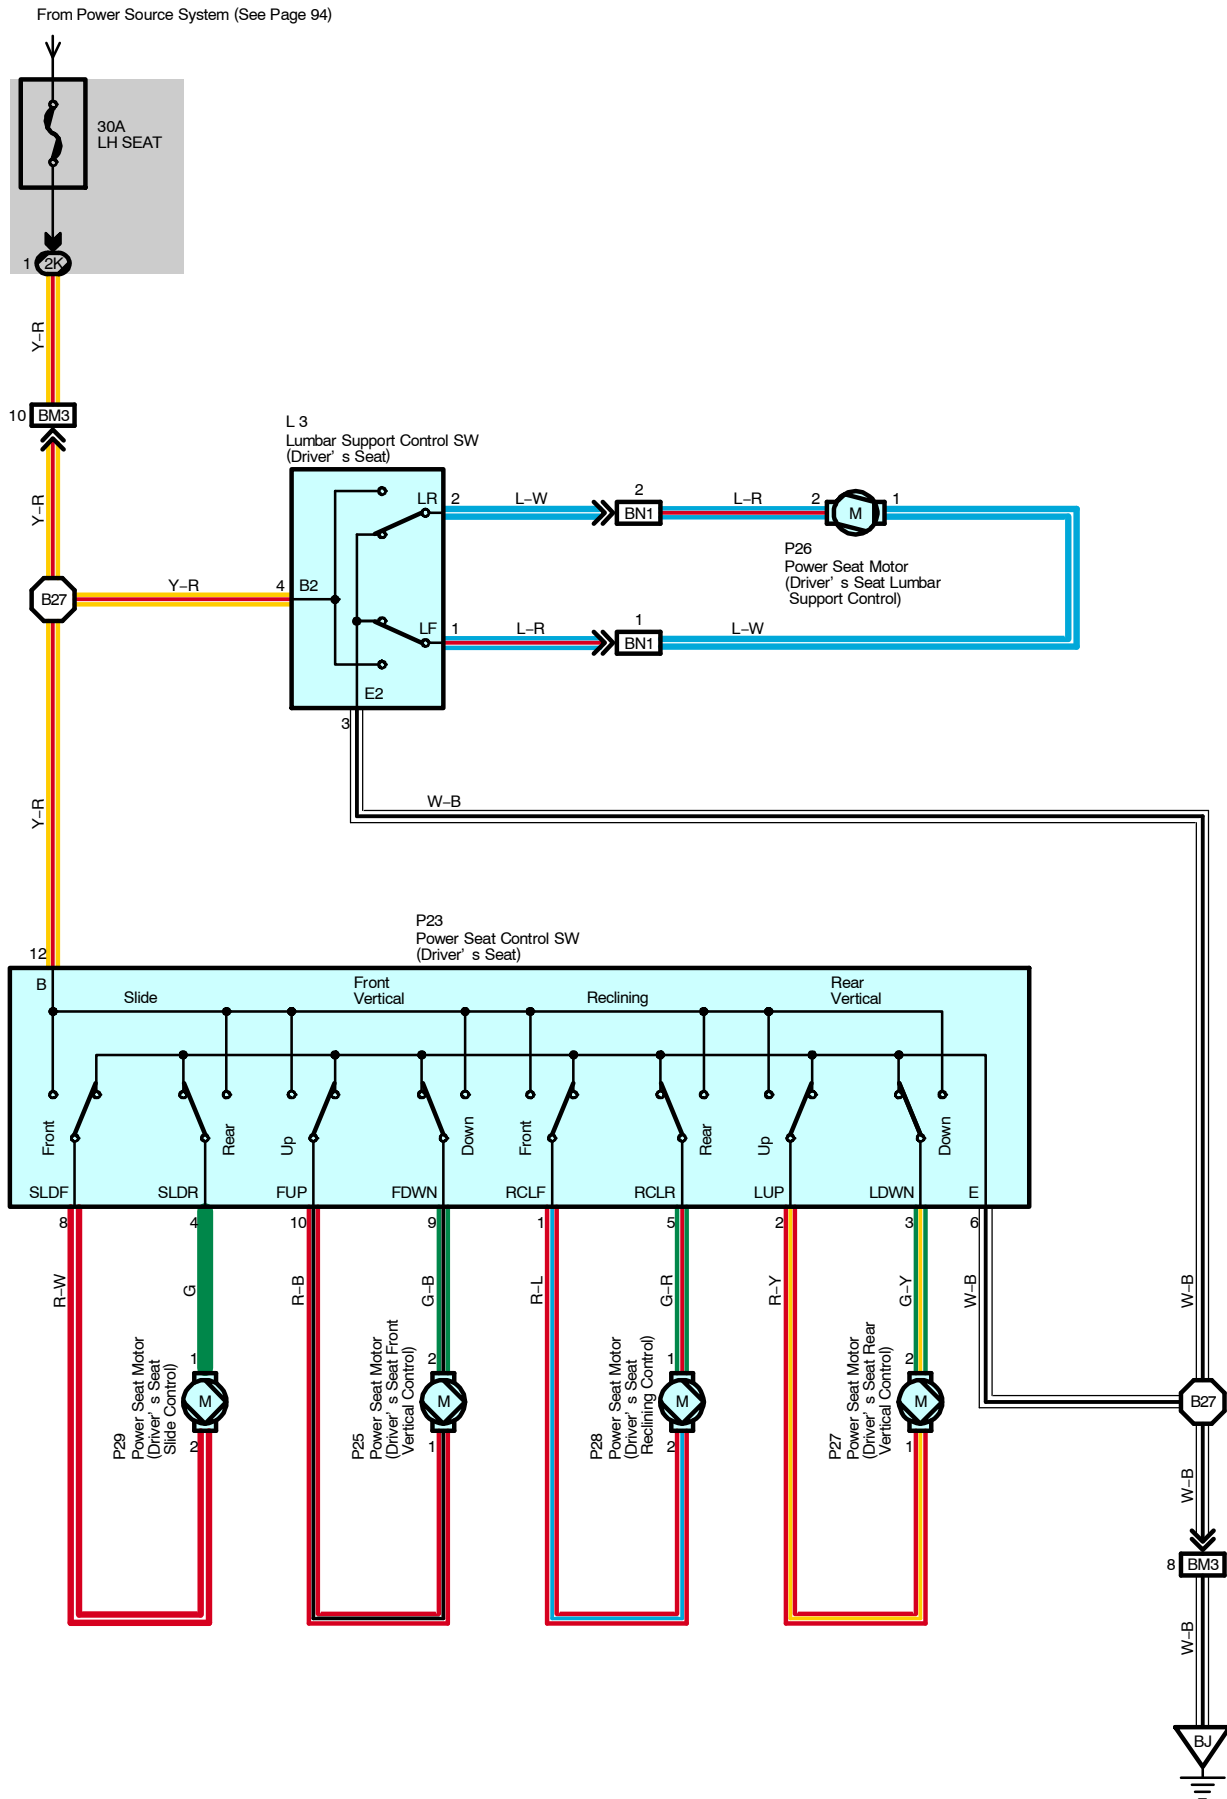

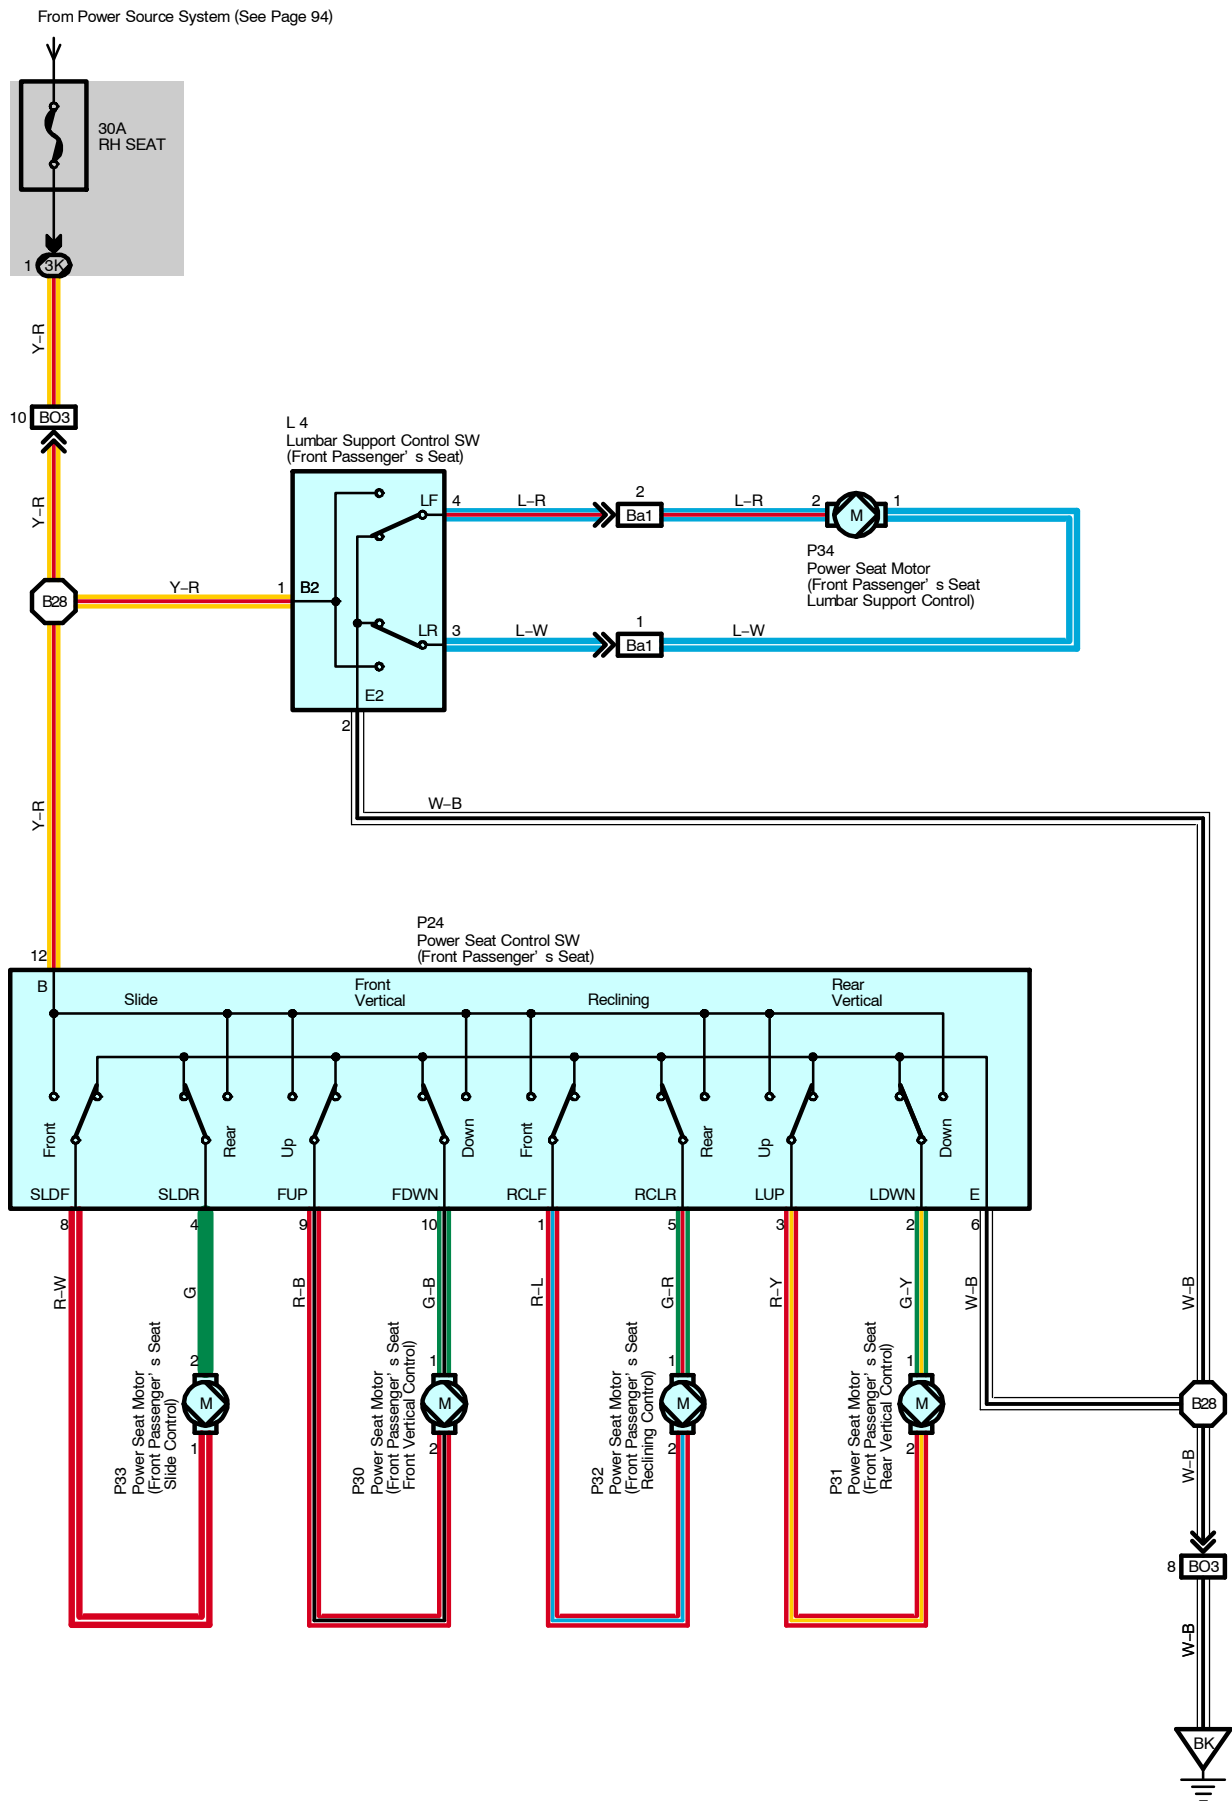

Power Seat

Service Hints

P23 Power Seat Control SW (Driver's Seat)

- 12-1 : Closed with driver's seat at front reclining operation
- 12-5 : Closed with driver's seat at rear reclining operation
- 12-10 : Closed with driver's seat at front vertical up operation
- 12-9 : Closed with driver's seat at front vertical down operation
- 12-2 : Closed with driver's seat at rear vertical up operation
- 12-3 : Closed with driver's seat at rear vertical down operation
- 12-8 : Closed with driver's seat at front slide operation
- 12-4 : Closed with driver's seat at rear slide operation
- 6-Ground : Always continuity

P24 Power Seat Control SW (Front Passenger's Seat)

- 12-1 : Closed with front passenger's seat at front reclining operation
- 12-5 : Closed with front passenger's seat at rear reclining operation
- 12-9 : Closed with front passenger's seat at front vertical up operation
- 12-10 : Closed with front passenger's seat at front vertical down operation
- 12-3 : Closed with front passenger's seat at rear vertical up operation
- 12-2 : Closed with front passenger's seat at rear vertical down operation
- 12-8 : Closed with front passenger's seat at front slide operation
- 12-4 : Closed with front passenger's seat at rear slide operation
- 6-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
L3	74	P26	74	P31	74
L4	74	P27	74	P32	74
P23	74	P28	74	P33	74
P24	74	P29	74	P34	74
P25	74	P30	74		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BM3	90	Floor No.1 Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BN1	90	Seat No.2 Wire and Front Seat LH Wire (Rear Side Under the Driver's Seat)
BO3	90	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
Ba1	90	Seat No.2 Wire and Front Seat RH Wire (Rear Side Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B27	90	Front Seat LH Wire	B28	90	Front Seat RH Wire

