


Rear Window Defogger

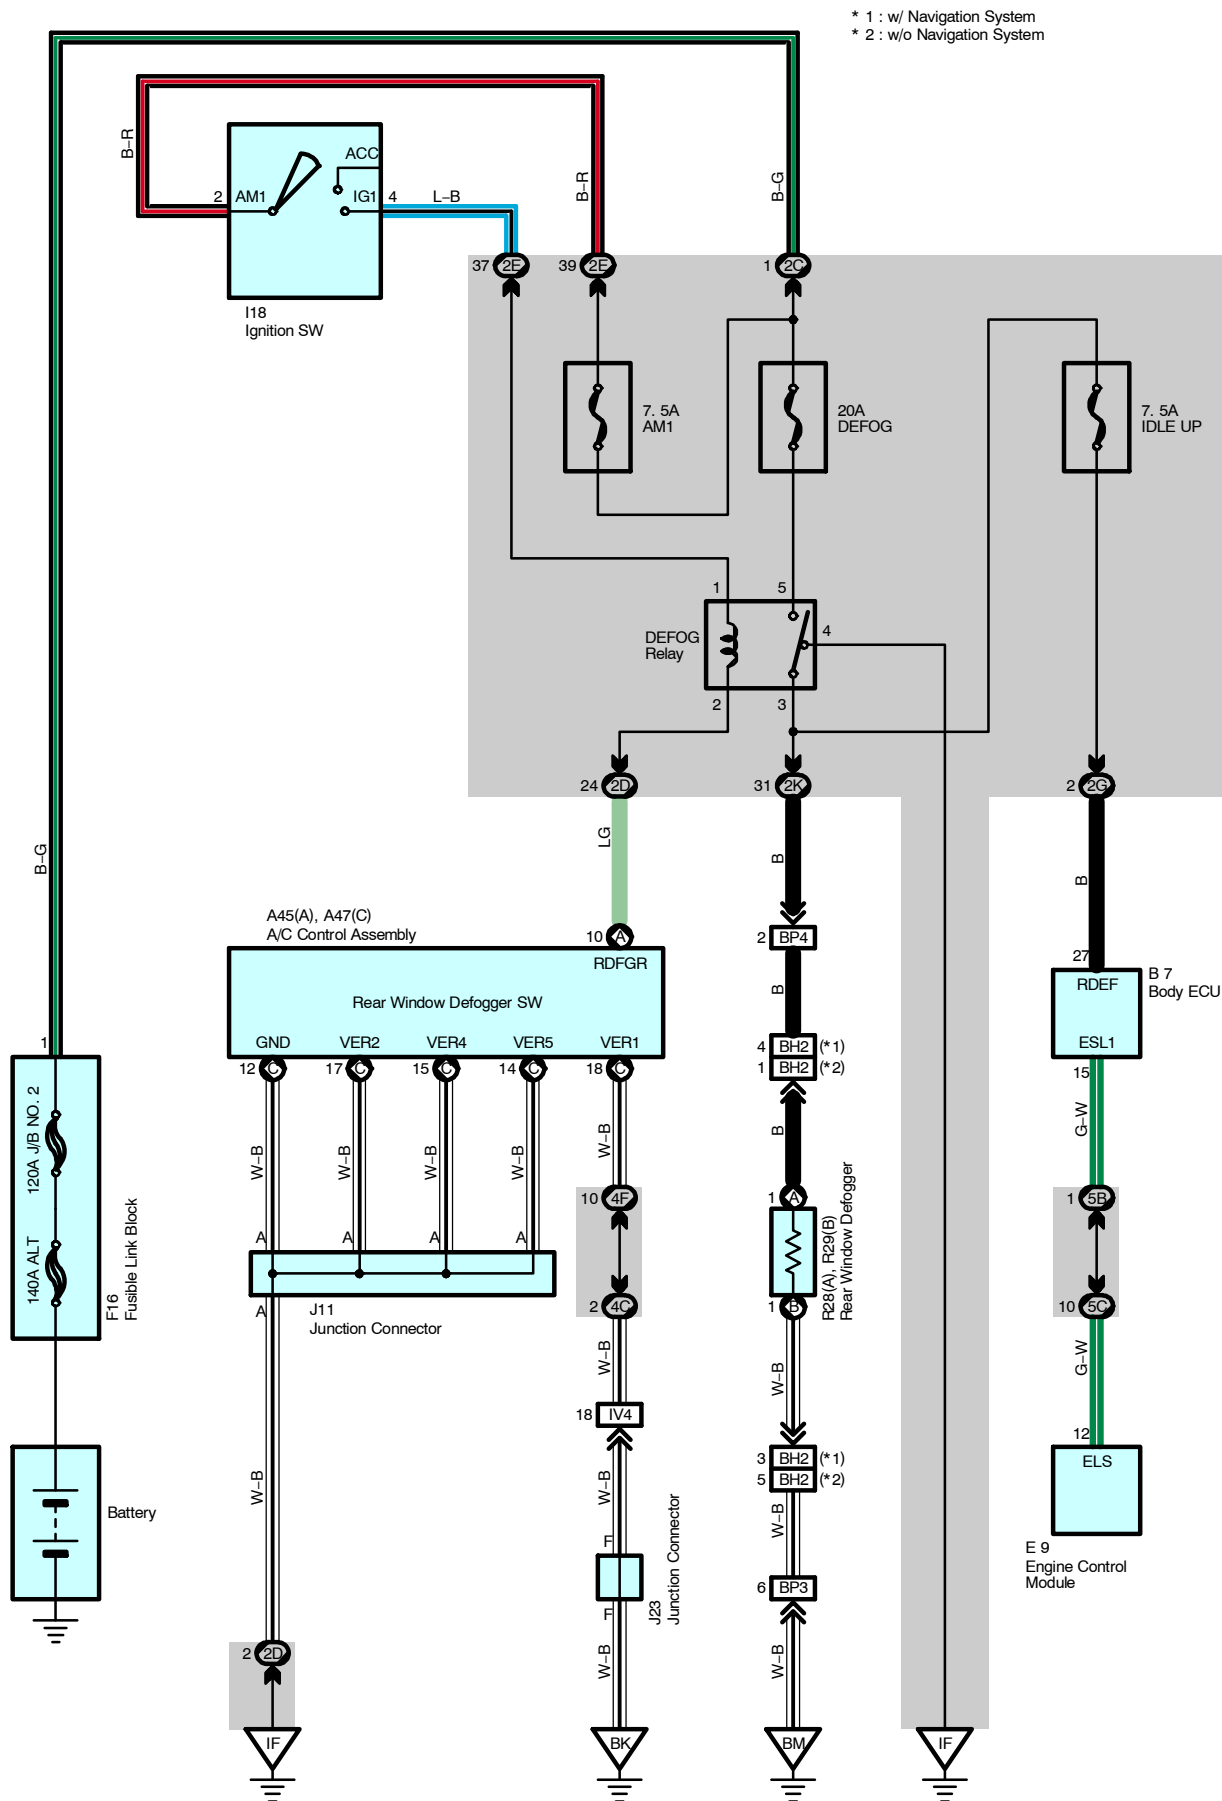

Service Hints

A45 (A), A47 (C) A/C Control Assembly

(A)10–Ground : Approx. 12 volts with ignition SW at ON or ST position

(C)12, (C) 14, (C) 15, (C) 17, (C) 18–Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
A45	A	70	F16	68	R28	A	73
A47	C	70	I18	70	R29	B	73
B7		70	J11	71			
E9		70	J23	72			

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2G		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
4C	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4F		
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IV4	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
BH2	86	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BP3	88	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BP4		

▽ : Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH
BK	86	Front Side Under the Front Passenger's Seat
BM	86	Left Rear Side Quarter Panel