


# Auto Antenna

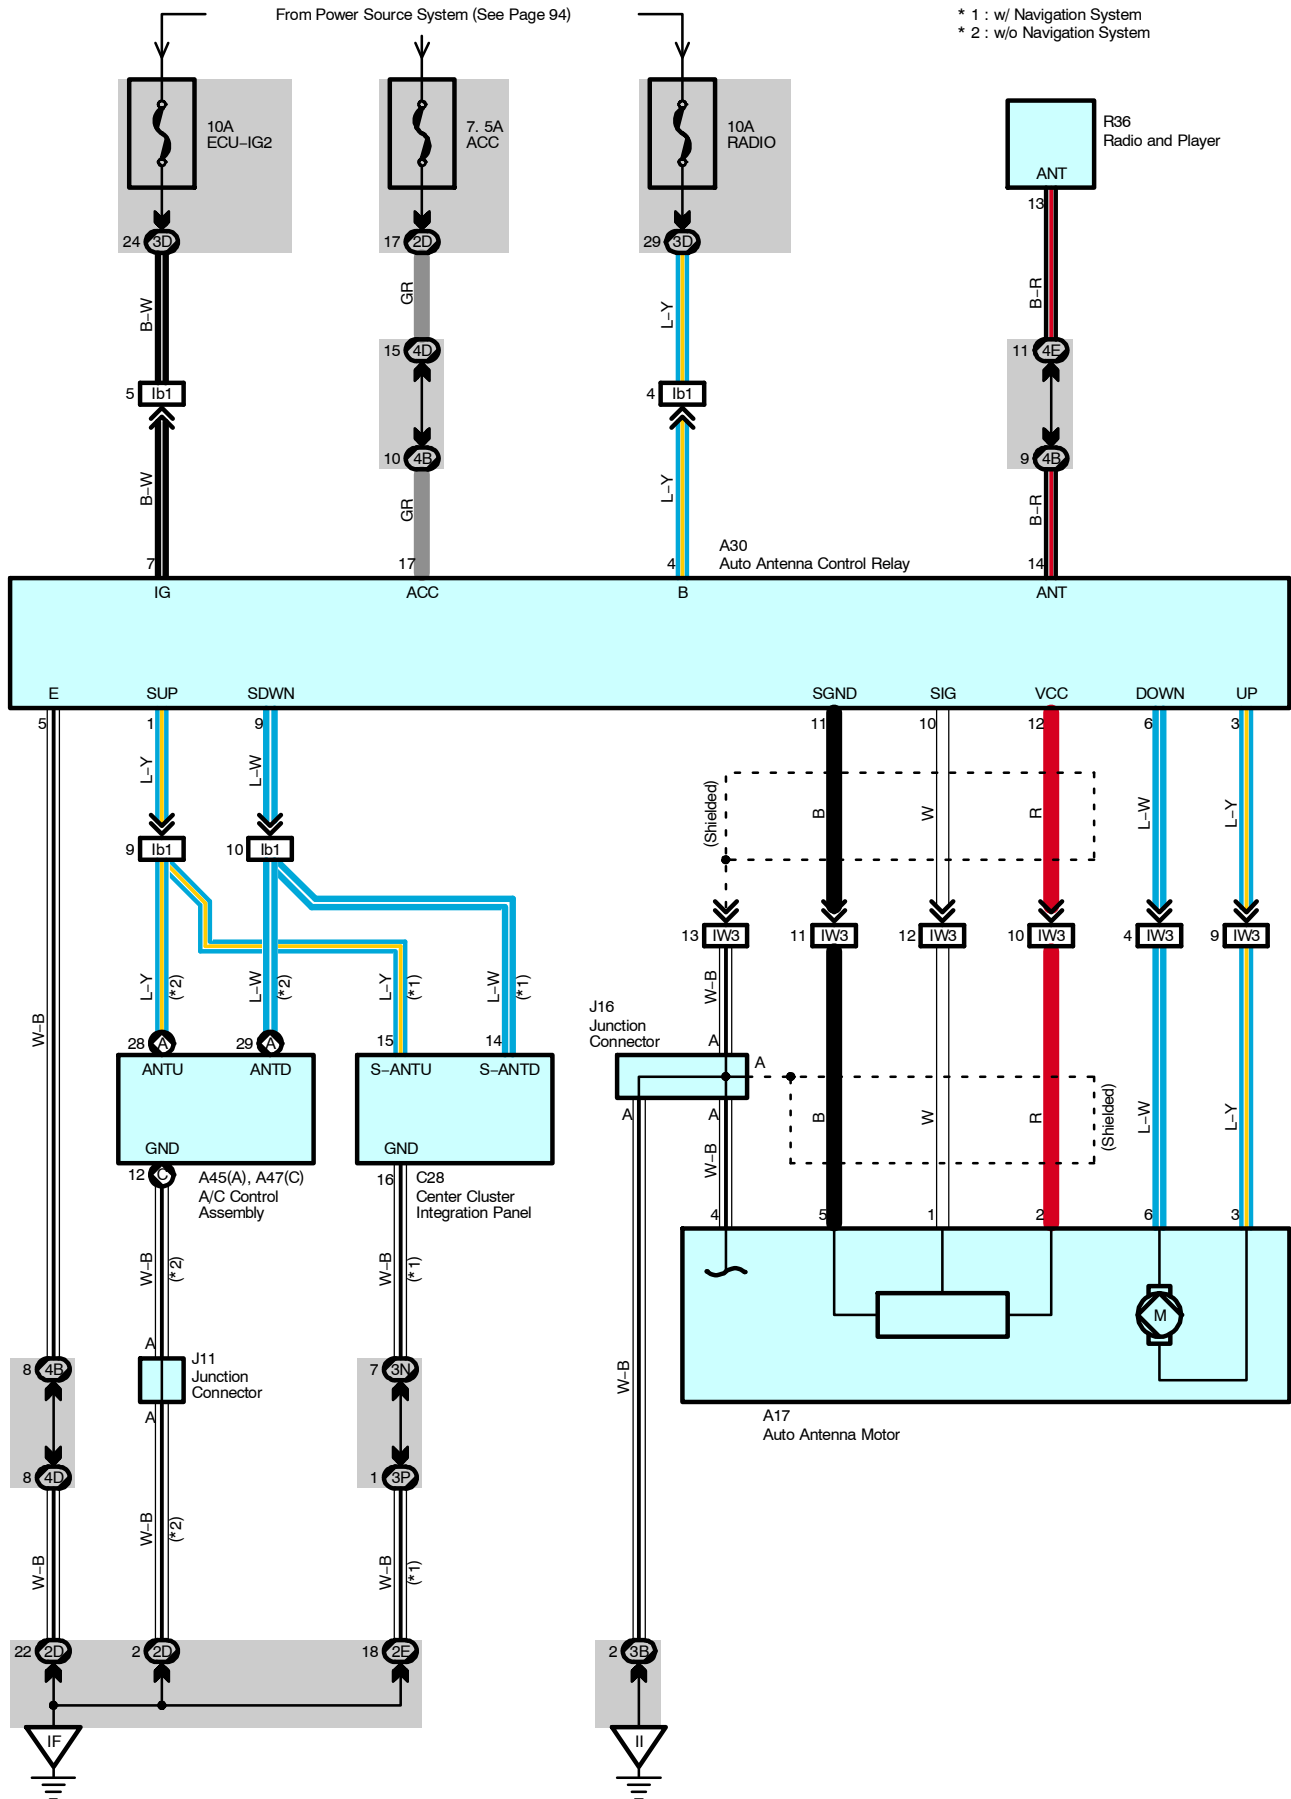

## Service Hints

### A30 Auto Antenna Control Relay

- 4-Ground : Always approx. 12 volts
- 17-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 7-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 5-Ground : Always continuity

## ○ : Parts Location

| Code |   | See Page           |  | Code |   | See Page           |  | Code |                    | See Page |  |
|------|---|--------------------|--|------|---|--------------------|--|------|--------------------|----------|--|
| A17  |   | <a href="#">68</a> |  | A47  | C | <a href="#">70</a> |  | J16  | <a href="#">71</a> |          |  |
| A30  |   | <a href="#">70</a> |  | C28  |   | <a href="#">70</a> |  | R36  | <a href="#">71</a> |          |  |
| A45  | A | <a href="#">70</a> |  | J11  |   | <a href="#">71</a> |  |      |                    |          |  |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page           | Junction Block and Wire Harness (Connector Location)          |
|------|--------------------|---------------------------------------------------------------|
| 2D   | <a href="#">28</a> | Dash Wire and Cowl Side J/B LH (Left Kick Panel)              |
| 2E   |                    |                                                               |
| 3B   | <a href="#">40</a> | Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel) |
| 3D   | <a href="#">40</a> |                                                               |
| 3N   | <a href="#">43</a> | Dash Wire and Cowl Side J/B RH (Right Kick Panel)             |
| 3P   |                    |                                                               |
| 4B   | <a href="#">52</a> | Dash Wire and J/B No.4 (Instrument Panel Center)              |
| 4D   |                    |                                                               |
| 4E   |                    |                                                               |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location) |
|------|--------------------|------------------------------------------------------------|
| IW3  | <a href="#">82</a> | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box) |
| Ib1  | <a href="#">84</a> | Dash Wire and Dash Wire (Behind the Combination Meter)     |

## ▽ : Ground Points

| Code | See Page           | Ground Points Location       |
|------|--------------------|------------------------------|
| IF   | <a href="#">78</a> | Set Bolt of Cowl Side J/B LH |
| II   | <a href="#">78</a> | Set Bolt of Cowl Side J/B RH |