



Combination Meter

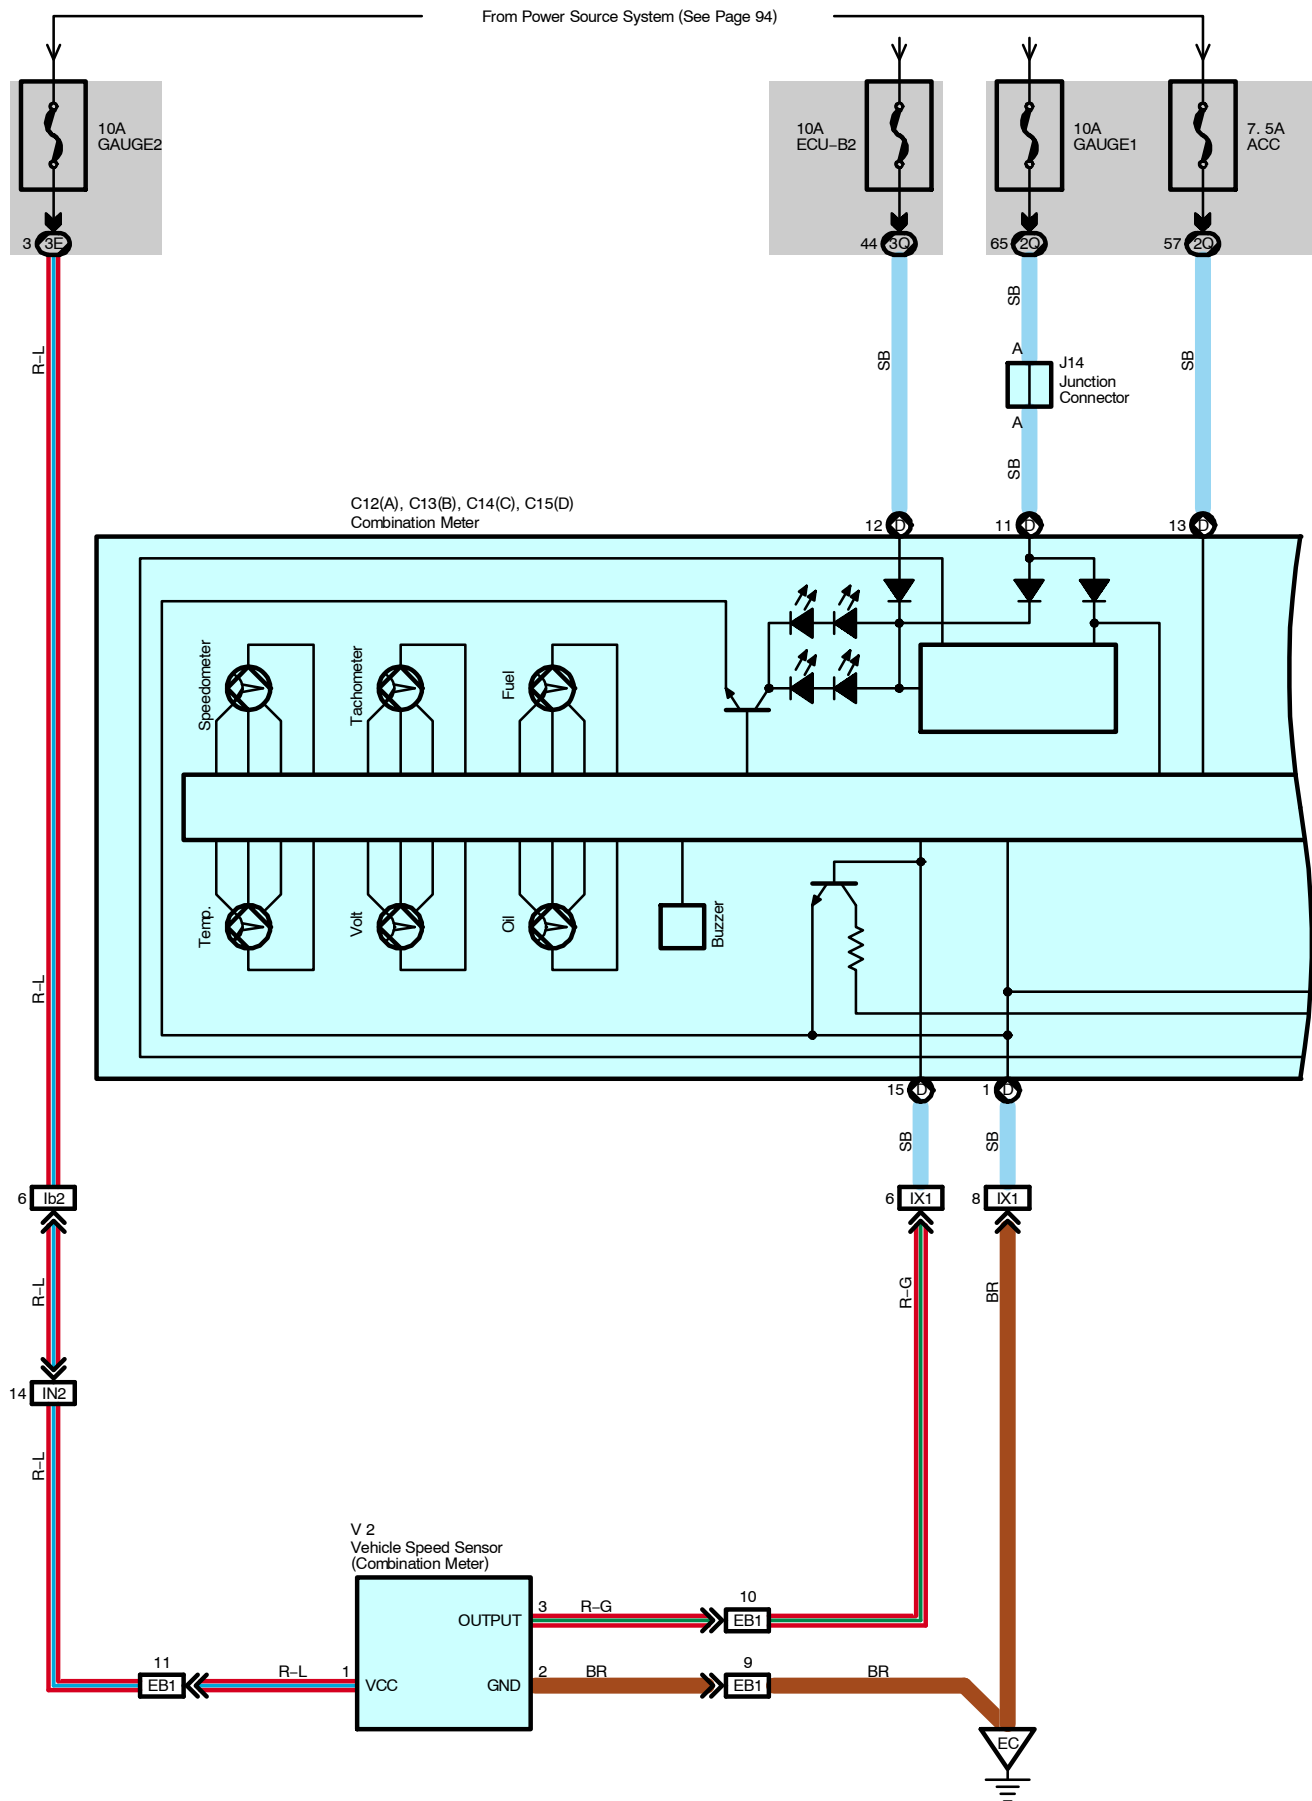


From Power Source System (See Page 94)

* 1 : w/ Navigation System

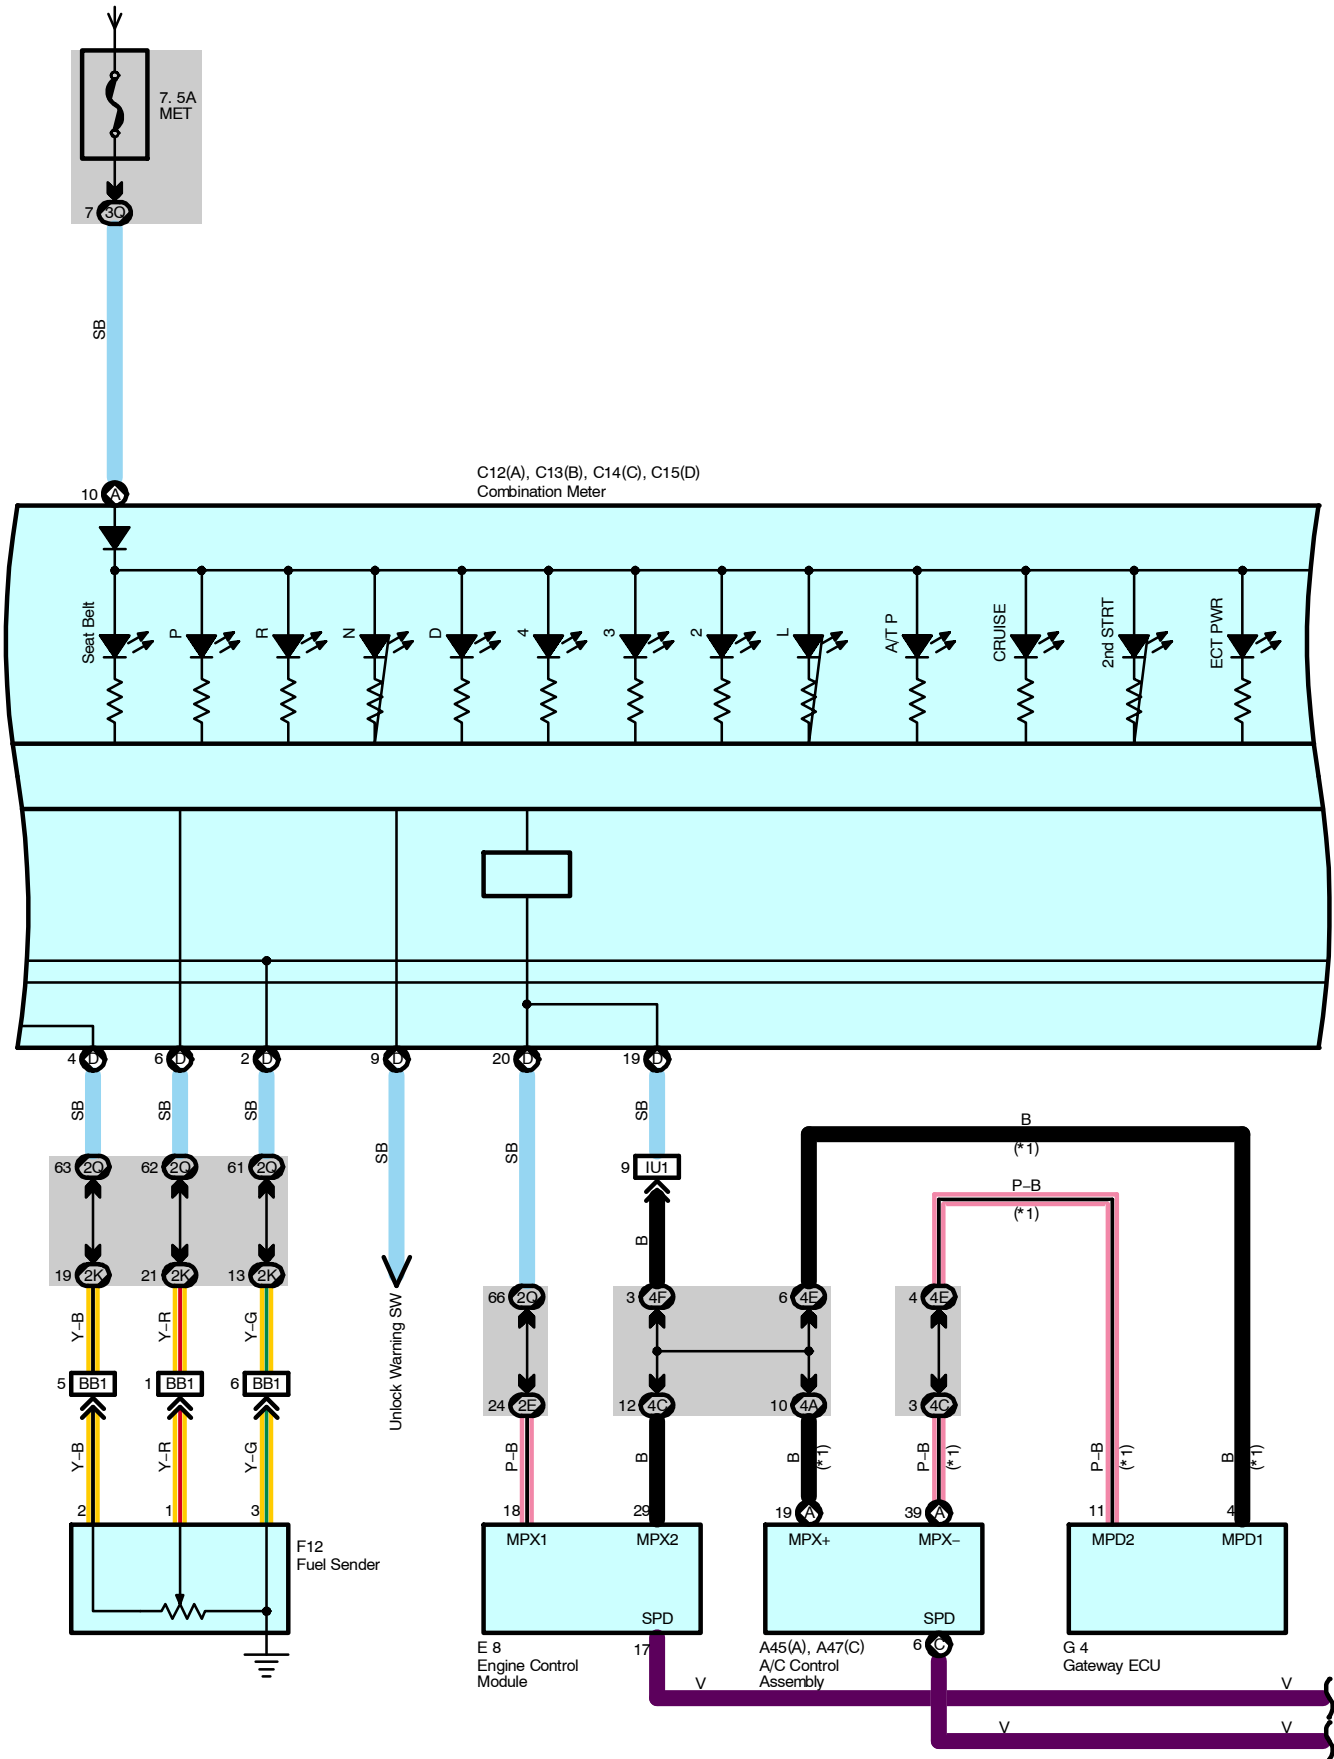


Combination Meter

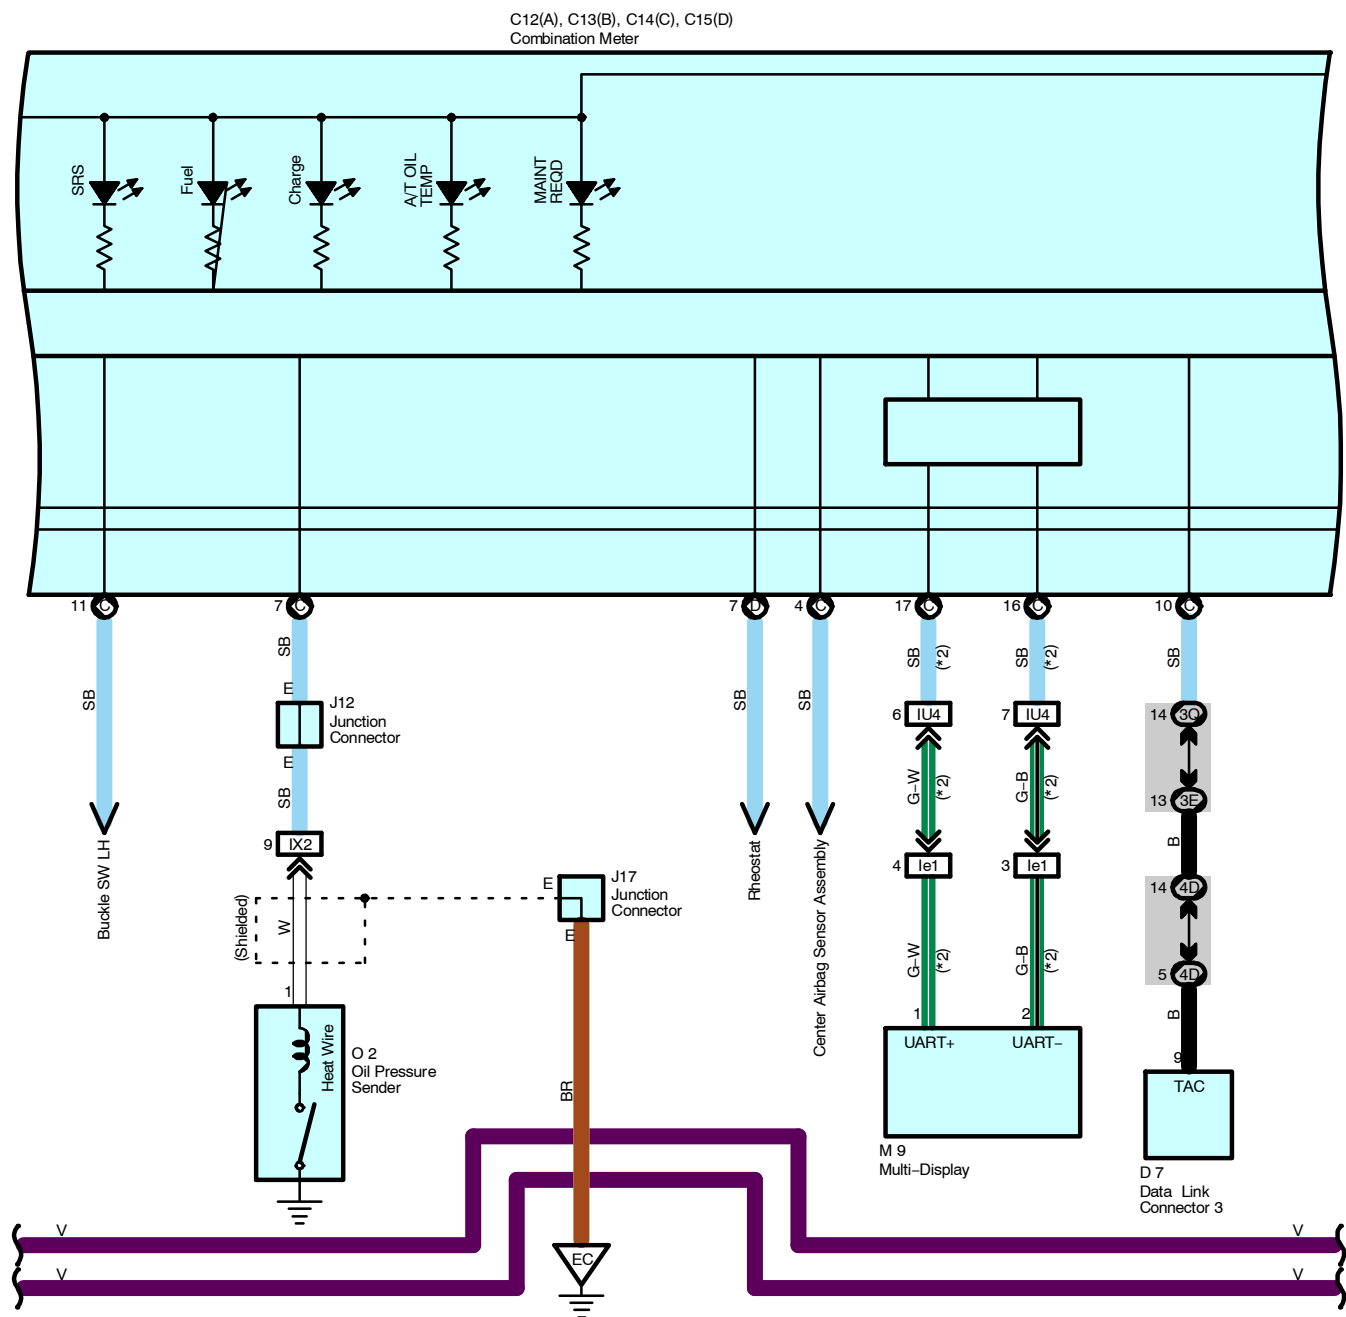



* 3 : USA
* 4 : Except *3

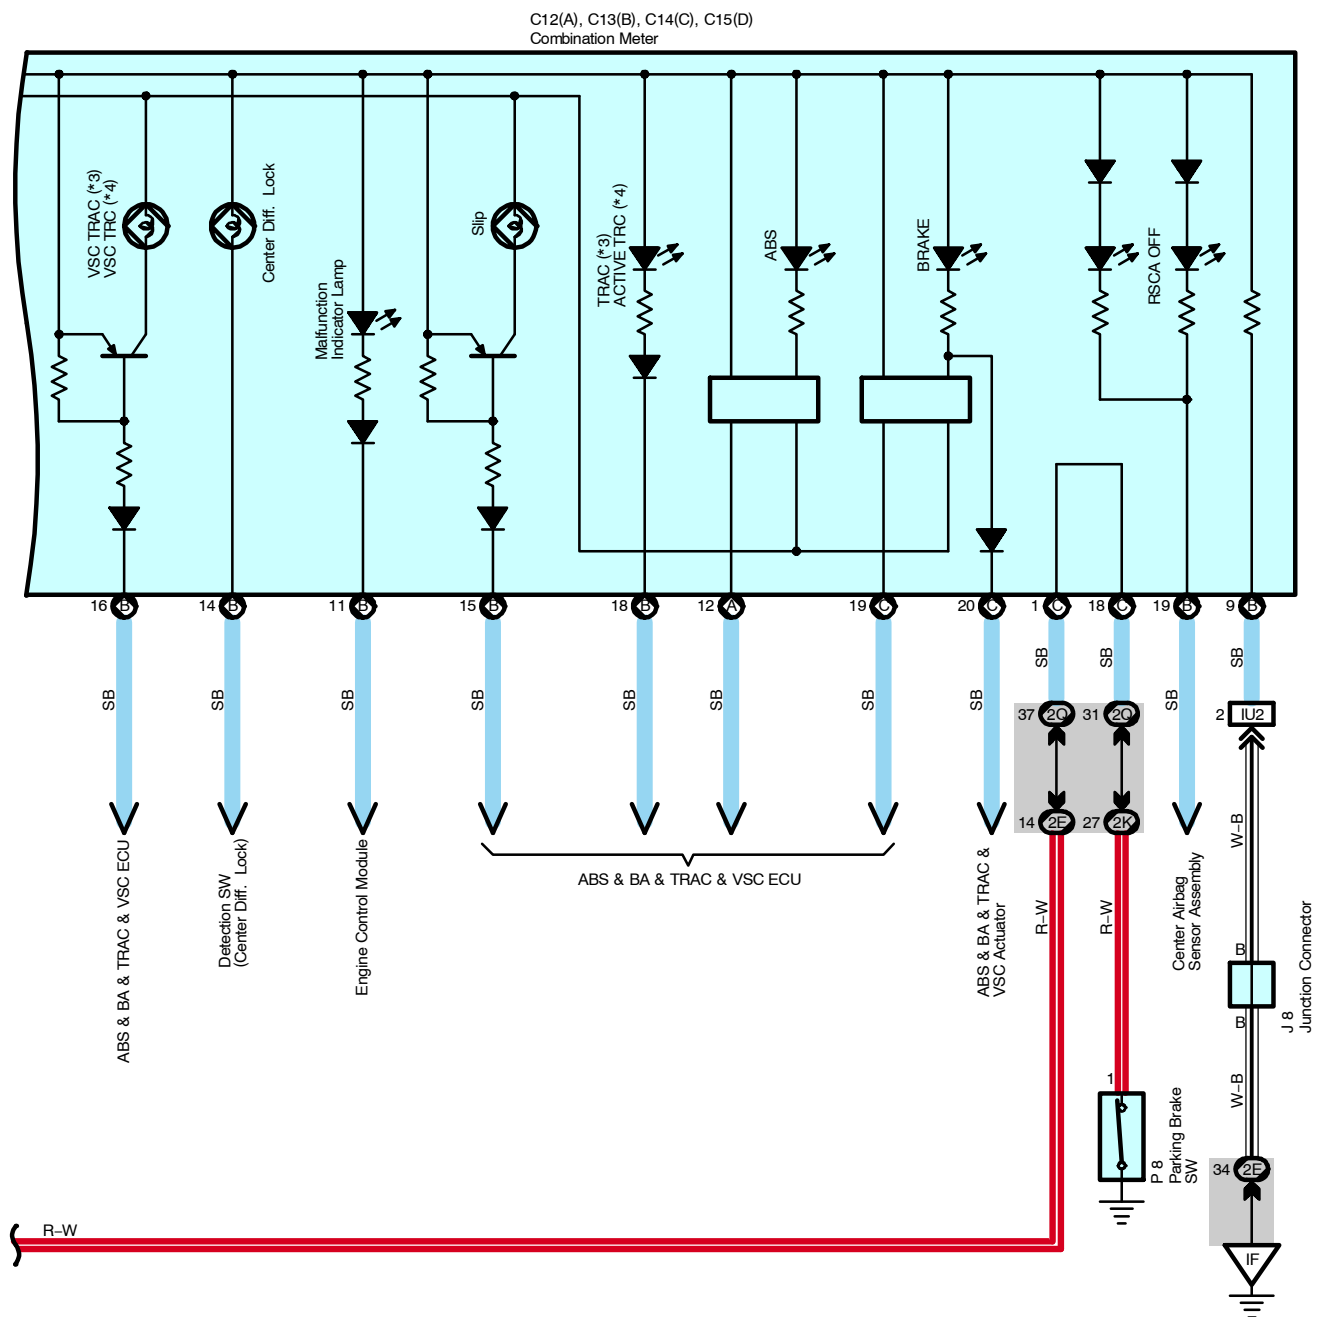

Service Hints

C12 (A), C13 (B), C15 (D) Combination Meter

- (D) 12, (D) 14–Ground : Always approx. 12 volts
 (D) 13–Ground : Approx. 12 volts with ignition SW at ACC or ON position
 (A) 10, (D) 11–Ground : Approx. 12 volts with ignition SW at ON or ST position
 (B) 8–Ground : Approx. 12 volts with light control SW at TAIL or HEAD position
 (B) 9, (D) 1–Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
A45	A	70	D7	70	J25	72
A47	C	70	E8	70	M5	71
B8	B	70	F12	72	M9	71
B9	C	70	G4	70	N2	72
C12	A	70	J8	71	O2	69
C13	B	70	J12	71	P8	73
C14	C	70	J14	71	V2	69
C15	D	70	J17	71		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A		
4C		
4D	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4E		
4F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	76	Engine Wire and Transmission Wire (On the Transmission)
IN2	80	Engine Wire and Dash Wire (Behind the Glove Box)
IU1		
IU2	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IU4		
IX1	82	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2		
Ib2	84	Dash Wire and Dash Wire (Behind the Combination Meter)
Ie1	84	Dash Wire and Dash Wire (Behind the Glove Box)
BB1	86	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	76	Rear Bank of Right Cylinder Head
IF	78	Set Bolt of Cowl Side J/B LH