


Position of Parts in Engine Compartment

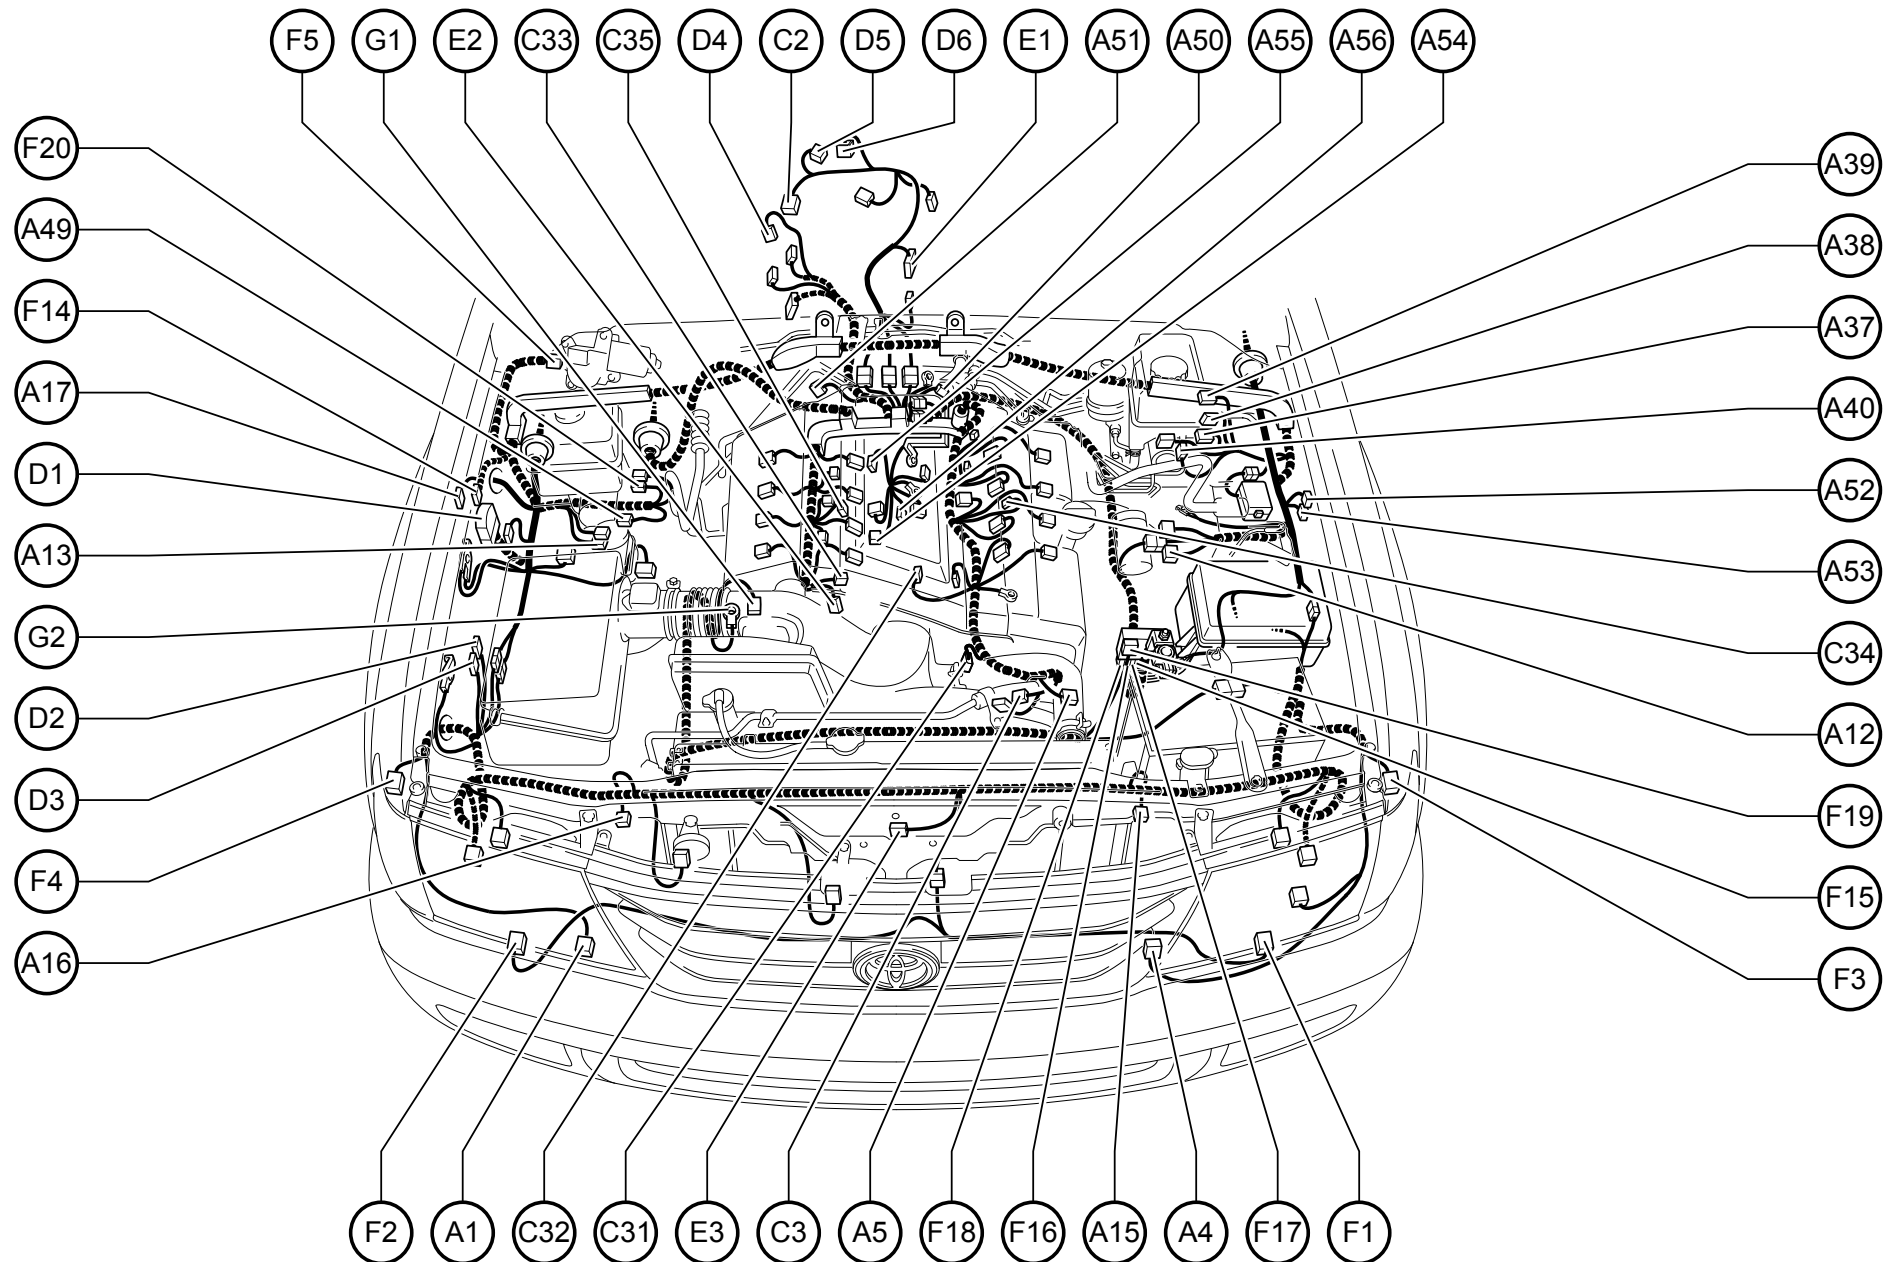

- A 1 A/C Ambient Temp. Sensor
- A 4 Pressure SW
- A 5 A/C Lock Sensor , A/C Magnetic Clutch
- A 12 ABS Speed Sensor Front LH
- A 13 ABS Speed Sensor Front RH
- A 15 Airbag Sensor Front LH
- A 16 Airbag Sensor Front RH
- A 17 Auto Antenna Motor
- A 37 ABS & BA & TRAC & VSC Actuator
- A 38 ABS & BA & TRAC & VSC Actuator
- A 39 ABS & BA & TRAC & VSC Actuator
- A 40 ABS & BA & TRAC & VSC Actuator
- A 49 AHC Pump Motor
- A 50 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 51 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 52 Air Injection Control Driver
- A 53 Air Injection Control Driver
- A 54 Air Pressure Sensor
- A 55 Air Pump
- A 56 Air Switching Valve

- C 2 Center Diff. Lock Control Motor
- C 3 Crankshaft Position Sensor
- C 31 Camshaft Position Sensor
- C 32 Camshaft Timing Oil Control Valve (LH)
- C 33 Camshaft Timing Oil Control Valve (RH)
- C 34 VVT Sensor (Bank 1)
- C 35 VVT Sensor (Bank 2)

















 
- D 1 Data Link Connector 1
- D 2 Daytime Running Light Relay No.3
- D 3 Daytime Running Light Relay No.3
- D 4 Detection SW (Center Diff. Lock)
- D 5 Detection SW (Transfer L Position)
- D 6 Detection SW (Transfer Neutral Position)

- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW

- F 1 Front Fog Light LH
- F 2 Front Fog Light RH
- F 3 Front Turn Signal Light LH , Parking Light LH , Side Marker Light LH
- F 4 Front Turn Signal Light RH , Parking Light RH , Side Marker Light RH
- F 5 Front Wiper Motor
- F 14 Fuel Pump Resistor
- F 15 Fusible Link Block
- F 16 Fusible Link Block
- F 17 Fusible Link Block
- F 18 Fusible Link Block
- F 19 Fusible Link Block
- F 20 Fluid Pressure Sensor

- G 1 Generator
- G 2 Generator

Position of Parts in Engine Compartment

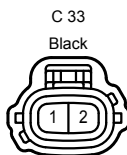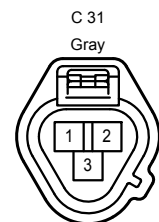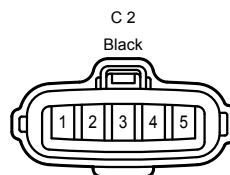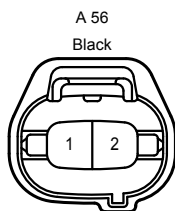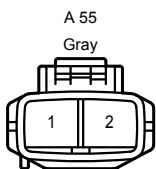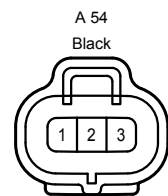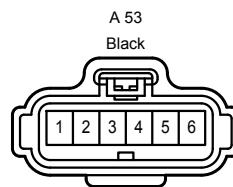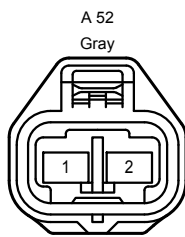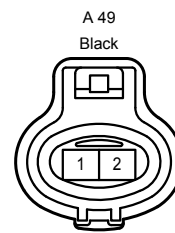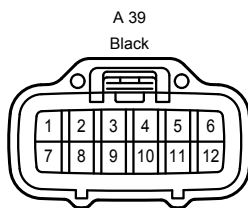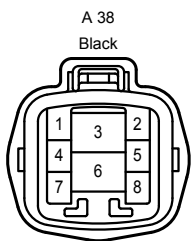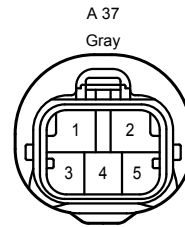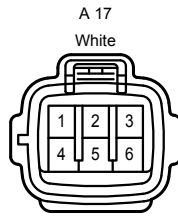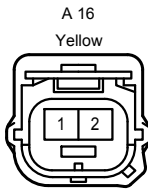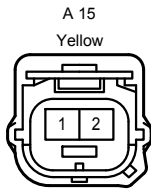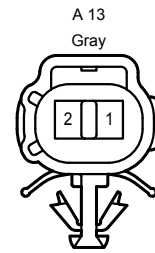

Position of Parts in Engine Compartment

