


Position of Parts in Seat

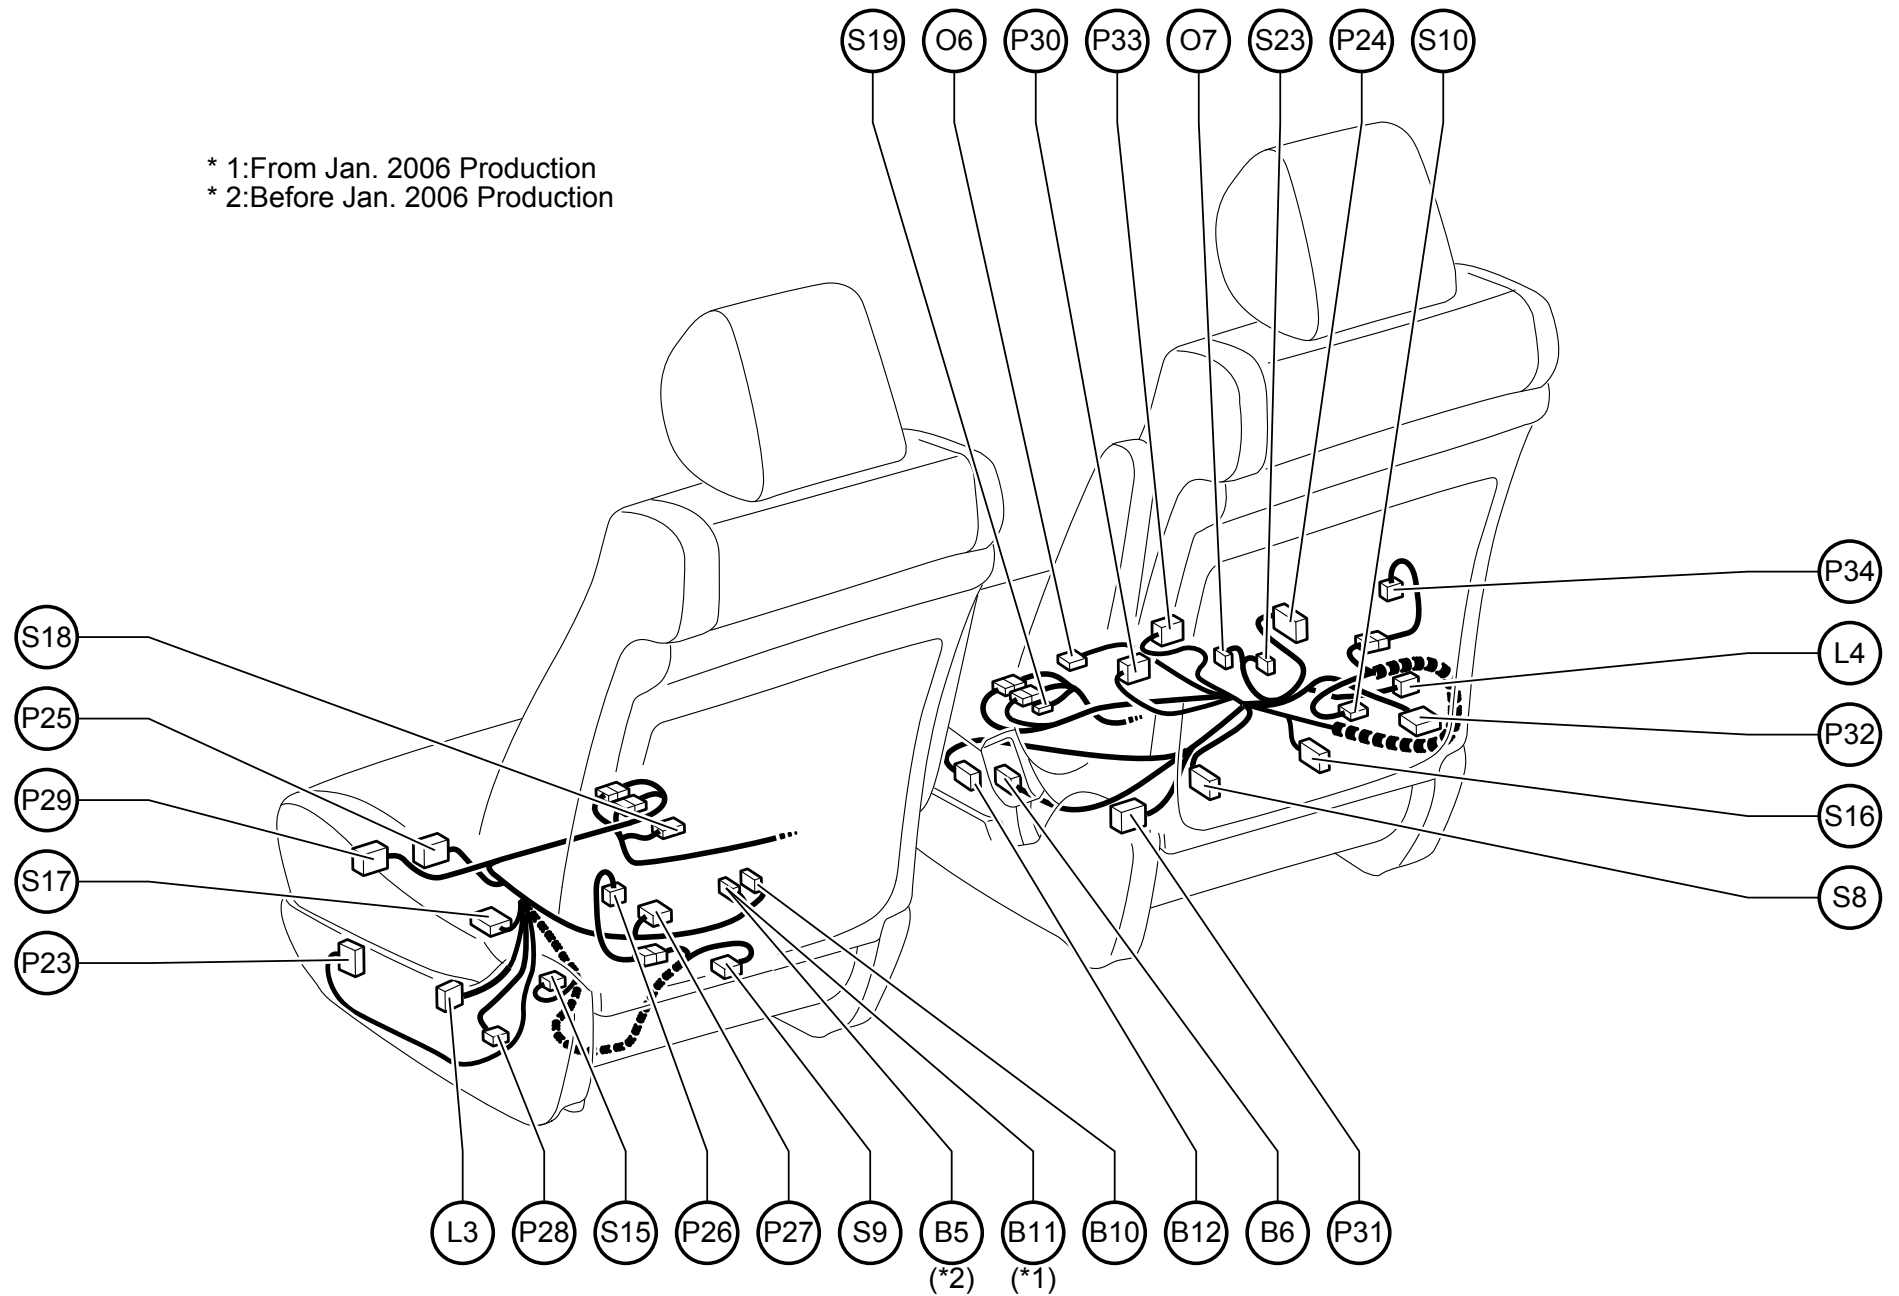

- B 5 Buckle SW LH
- B 6 Buckle SW RH
- B 10 Buckle SW LH
- B 11 Buckle SW LH
- B 12 Buckle SW RH

- L 3 Lumbar Support Control SW (Driver's Seat)
- L 4 Lumbar Support Control SW (Front Passenger's Seat)

- O 6 Occupant Classification ECU
- O 7 Occupant Classification Sensor

- P 23 Power Seat Control SW (Driver's Seat)
- P 24 Power Seat Control SW (Front Passenger's Seat)
- P 25 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 26 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 27 Power Seat Motor (Driver's Seat Lifter Control)
- P 28 Power Seat Motor (Driver's Seat Reclining Control)
- P 29 Power Seat Motor (Driver's Seat Slide Control)
- P 30 Power Seat Motor (Front Passenger's Seat Front Vertical Control)
- P 31 Power Seat Motor (Front Passenger's Seat Lifter Control)
- P 32 Power Seat Motor (Front Passenger's Seat Reclining Control)
- P 33 Power Seat Motor (Front Passenger's Seat Slide Control)
- P 34 Power Seat Motor (Front Passenger's Seat Lumbar Support Control)

- S 8 Seat Belt Warning Occupant Detection Sensor
- S 9 Seat Heater (Driver's Seat)
- S 10 Seat Heater (Front Passenger's Seat)
- S 15 Seat Heater (Driver's Seat Cushion)
- S 16 Seat Heater (Front Passenger's Seat Cushion)
- S 17 Seat Position Sensor
- S 18 Side Airbag Squib LH
- S 19 Side Airbag Squib RH
- S 23 Seat Position Airbag Sensor

Position of Parts in Seat

