


Position of Parts in Engine Compartment

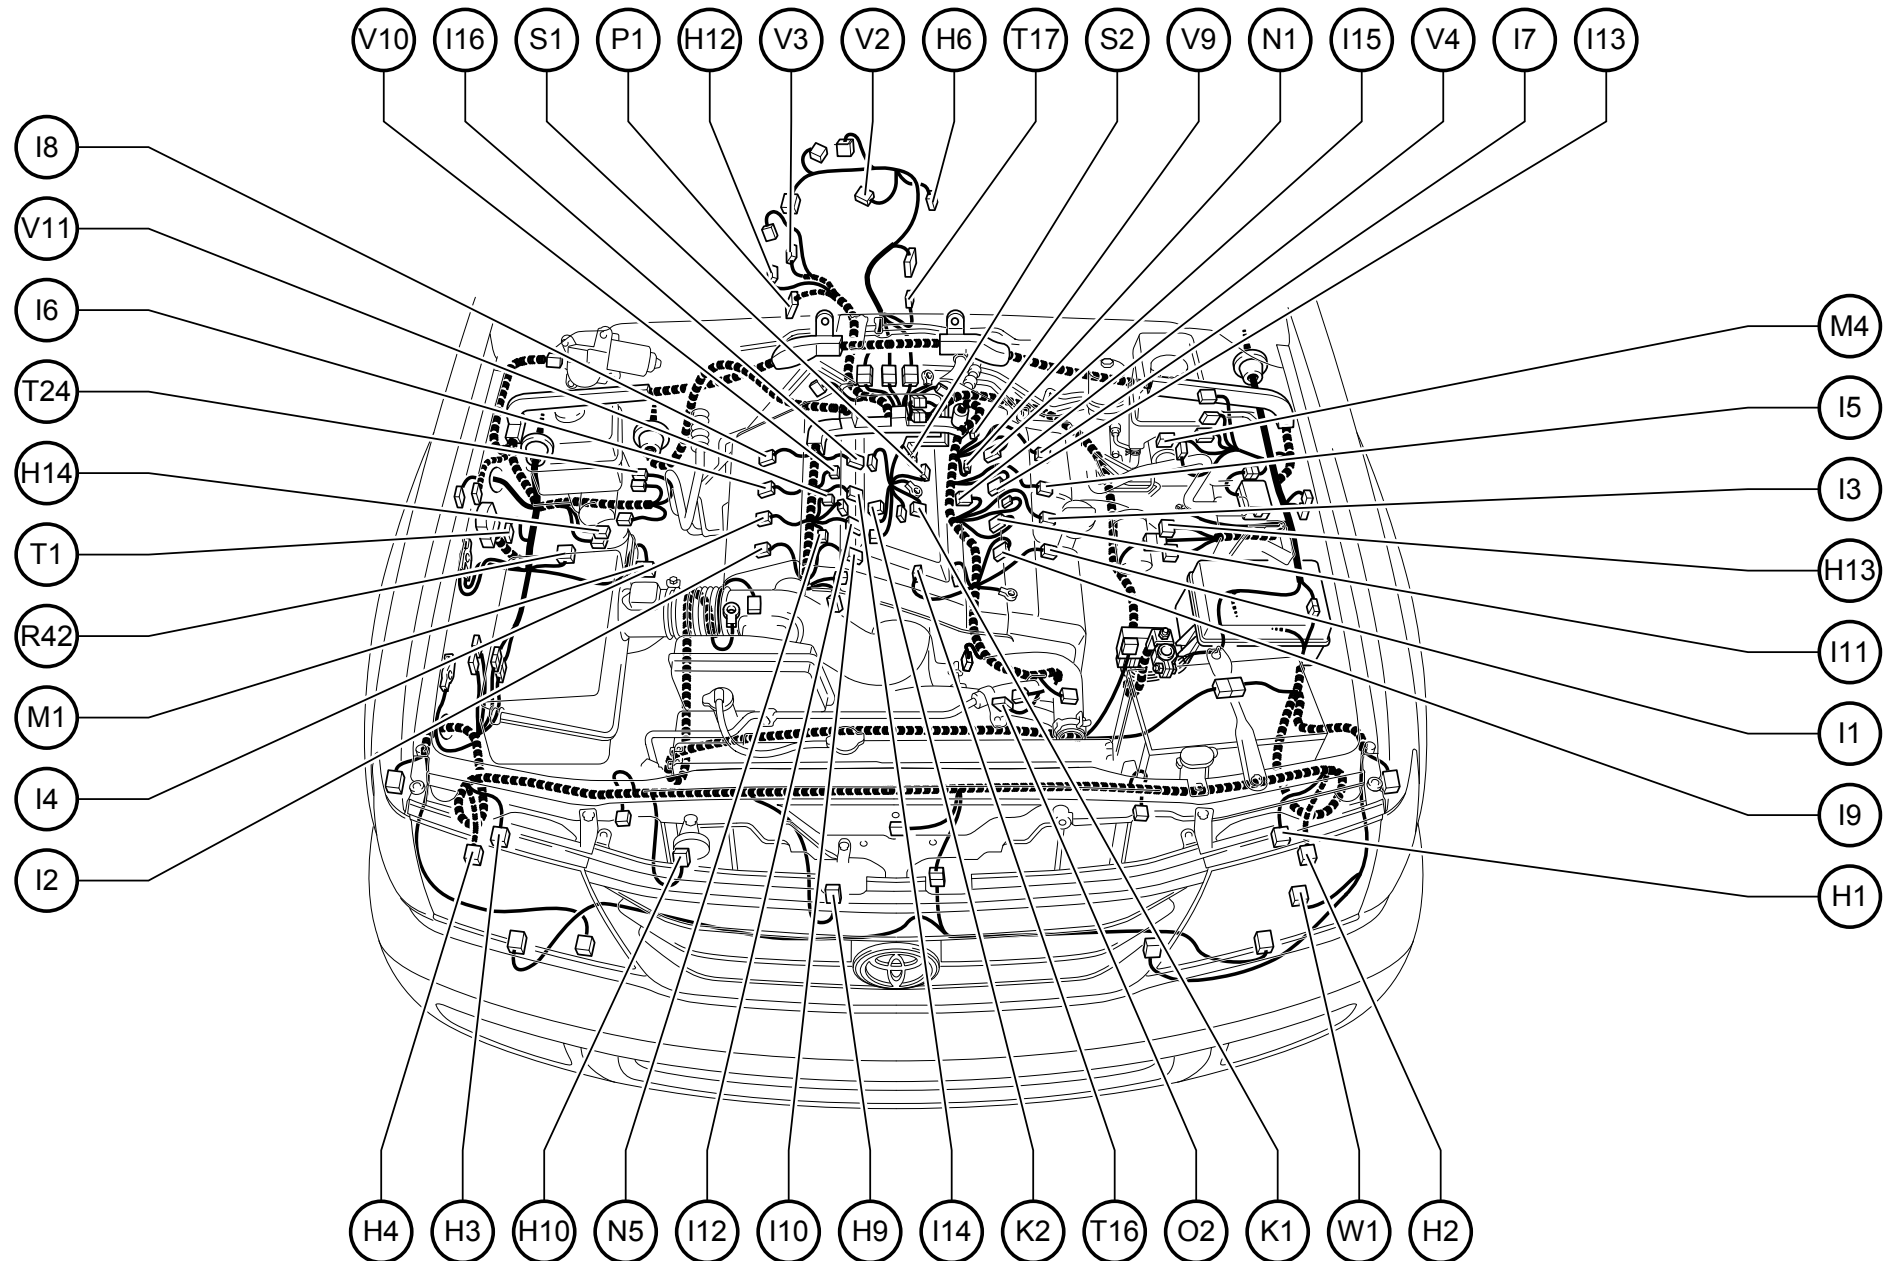

- H 1 Headlight LH (High)
- H 2 Headlight LH (Low)
- H 3 Headlight RH (High)
- H 4 Headlight RH (Low)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 9 Horn LH
- H 10 Horn RH
- H 12 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 13 Height Control Sensor Front LH
- H 14 Height Control Sensor Front RH

- I 1 Ignition Coil and Igniter No.1
- I 2 Ignition Coil and Igniter No.2
- I 3 Ignition Coil and Igniter No.3
- I 4 Ignition Coil and Igniter No.4
- I 5 Ignition Coil and Igniter No.5
- I 6 Ignition Coil and Igniter No.6
- I 7 Ignition Coil and Igniter No.7
- I 8 Ignition Coil and Igniter No.8
- I 9 Injector No.1
- I 10 Injector No.2
- I 11 Injector No.3
- I 12 Injector No.4
- I 13 Injector No.5
- I 14 Injector No.6
- I 15 Injector No.7
- I 16 Injector No.8

- K 1 Knock Sensor (Bank 1)
- K 2 Knock Sensor (Bank 2)

- M 1 Mass Air Flow Meter
- M 4 Master Cylinder Pressure Sensor

- N 1 Noise Filter (Ignition)
- N 5 Noise Filter (Ignition)

- O 2 Oil Pressure Sender

- P 1 Park/Neutral Position SW

- R 42 Running Light Resistor


- S 1 Starter
- S 2 Starter

- T 1 Theft Deterrent Horn
- T 16 Throttle Control Motor and Sensor
- T 17 Turbine Speed Sensor
- T 24 Temp. Sensor (AHC)

- V 2 Vehicle Speed Sensor (Combination Meter)
- V 3 Vehicle Speed Sensor (Electronically Controlled Transmission)
- V 4 VSV (Purge)
- V 9 VSV (ACIS)
- V 10 VSV (Air Switching Valve No.1)
- V 11 VSV (Air Switching Valve No.2)

- W 1 Washer Motor

Position of Parts in Engine Compartment

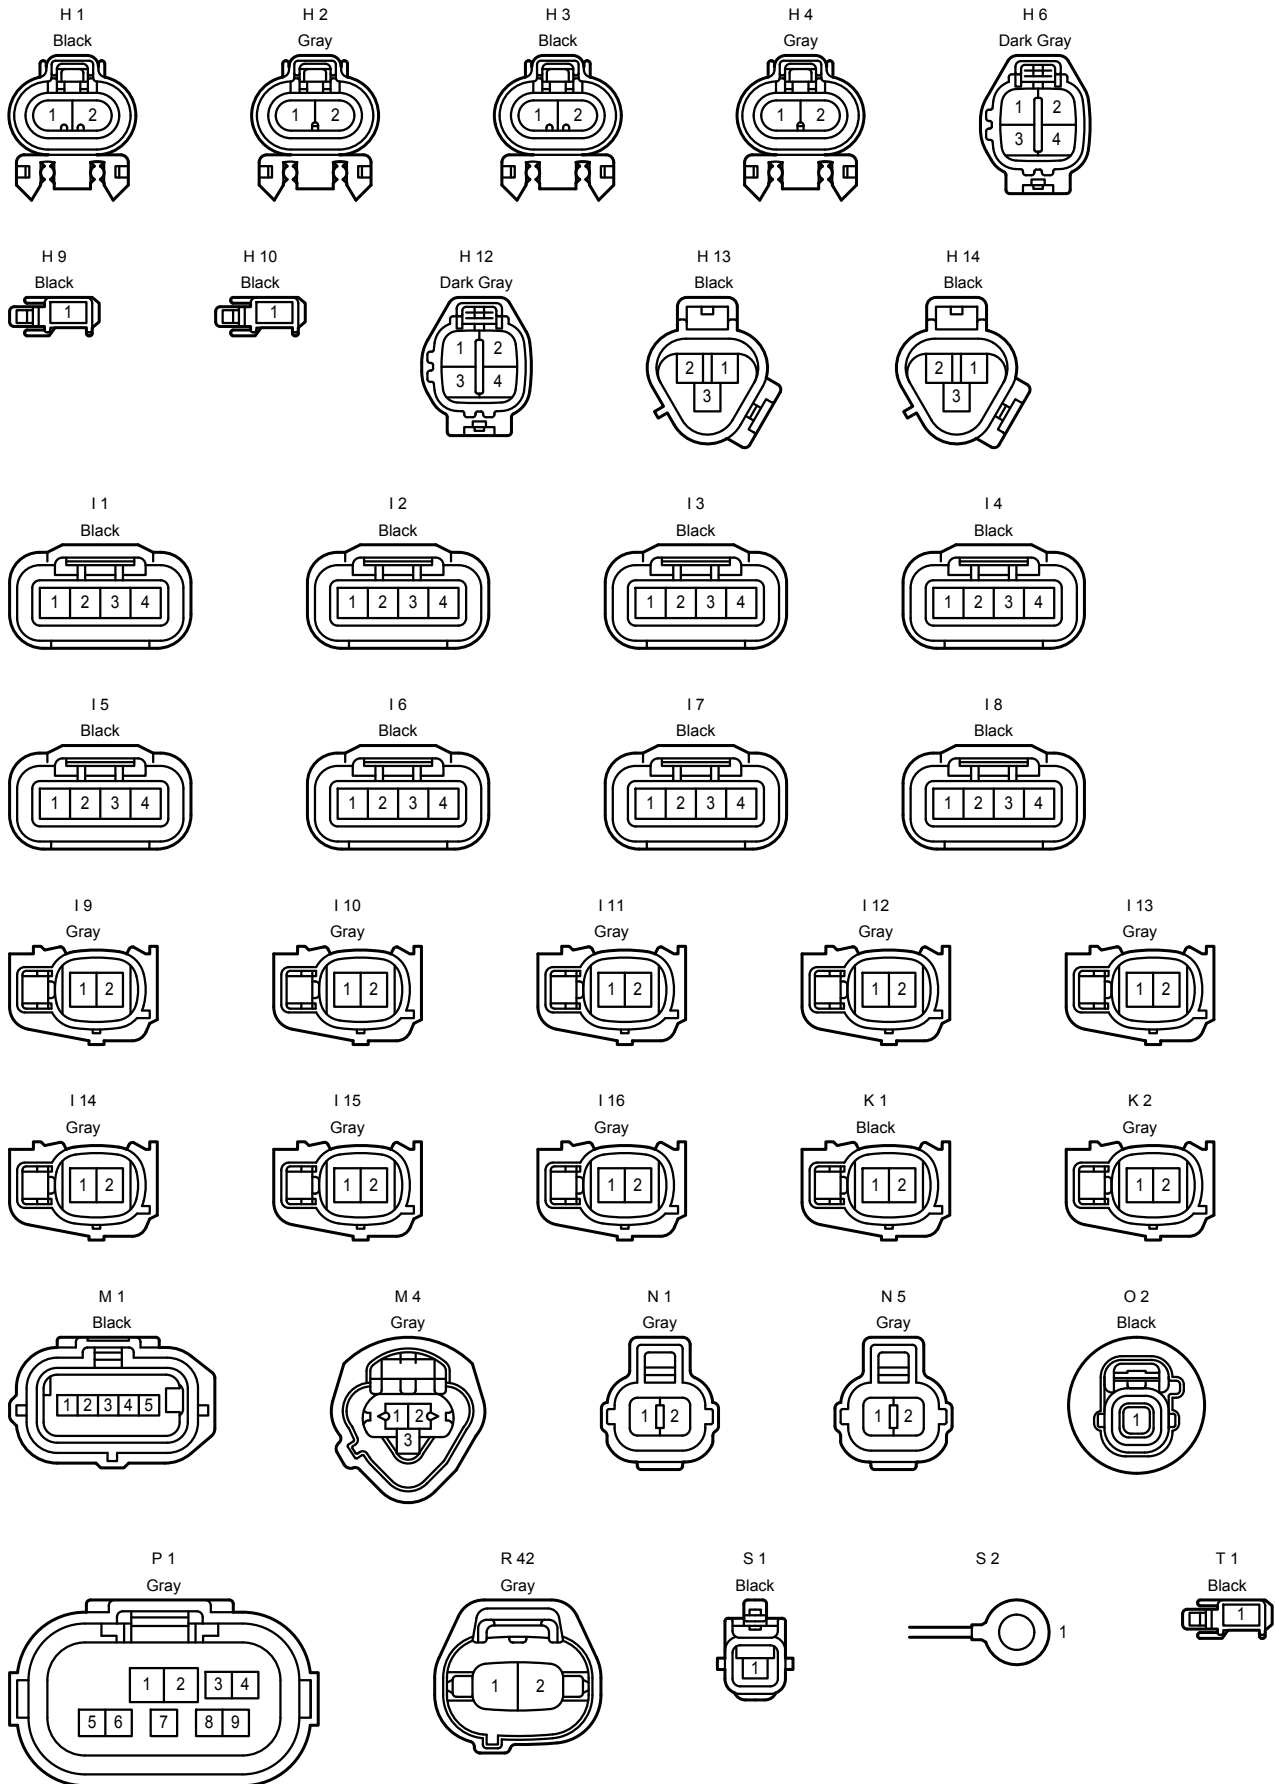

Position of Parts in Engine Compartment

