





















Position of Parts in Instrument Panel

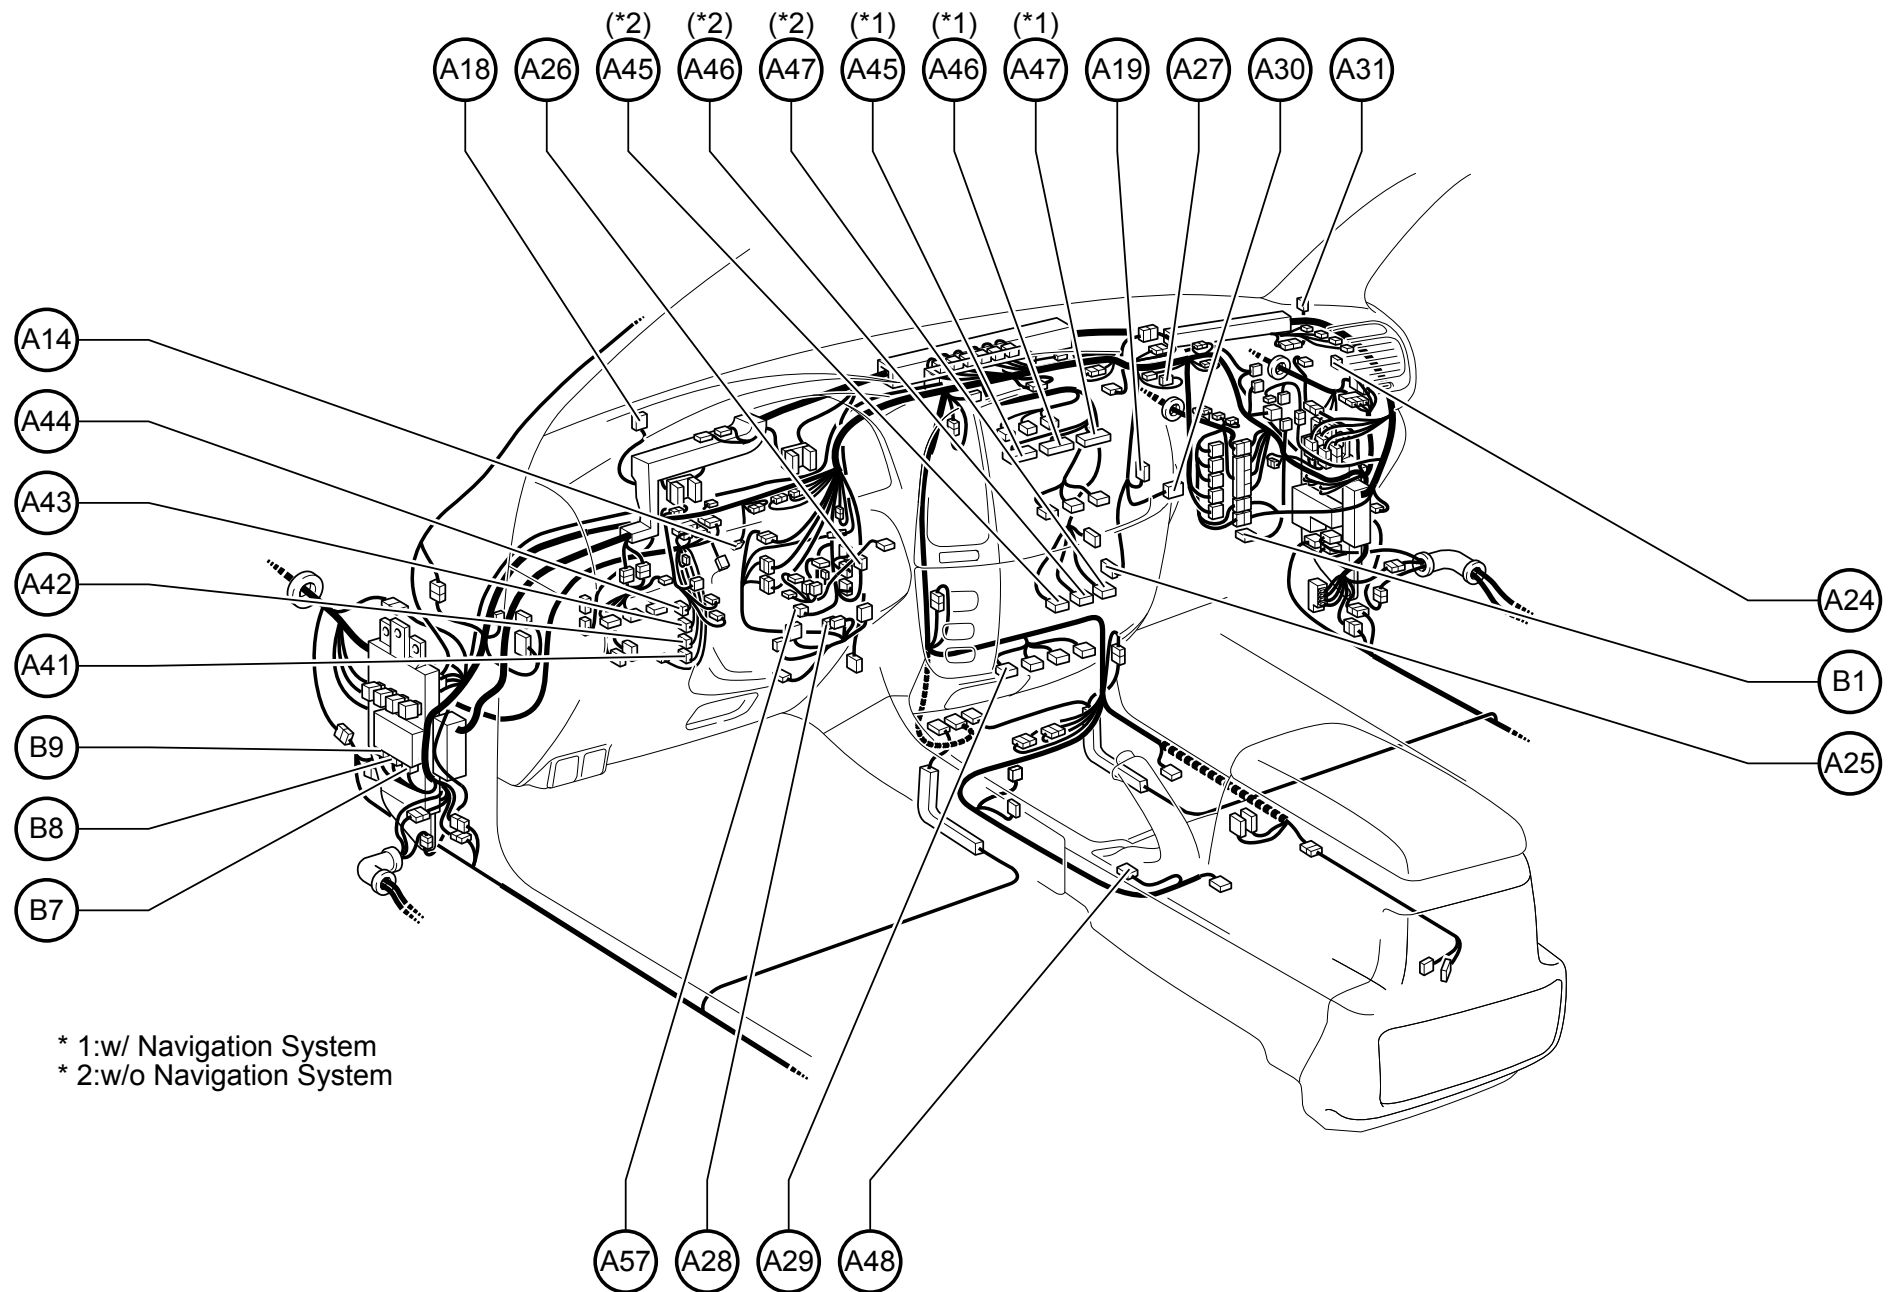

- A 14 Accel Position Sensor
- A 18 A/C Solar Sensor
- A 19 A/C Thermistor
- A 24 Air Inlet Control Servo Motor
- A 25 Air Mix Control Servo Motor
- A 26 Air Vent Mode Control Servo Motor
- A 27 Airbag Squib (Front Passenger Airbag Assembly)
- A 28 Airbag Squib (Steering Wheel Pad)
- A 29 Ashtray Illumination
- A 30 Auto Antenna Control Relay
- A 31 Automatic Light Control Sensor
- A 41 ABS & BA & TRAC & VSC ECU
- A 42 ABS & BA & TRAC & VSC ECU
- A 43 ABS & BA & TRAC & VSC ECU
- A 44 ABS & BA & TRAC & VSC ECU
- A 45 A/C Control Assembly
- A 46 A/C Control Assembly
- A 47 A/C Control Assembly
- A 48 A/T Shift Lever Illumination , Shift Lock Control ECU
- A 57 AHC Main Relay

- B 1 Blower Motor Controller
- B 7 Body ECU
- B 8 Body ECU
- B 9 Body ECU

  Position of Parts in Instrument Panel

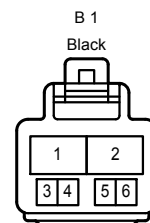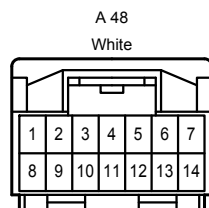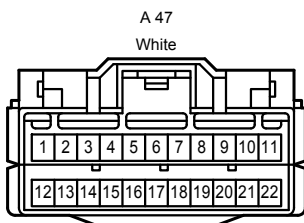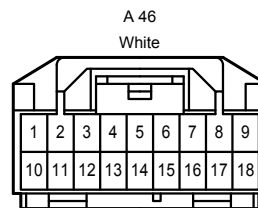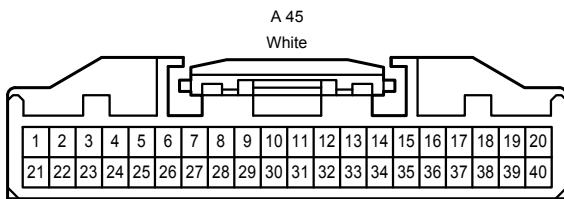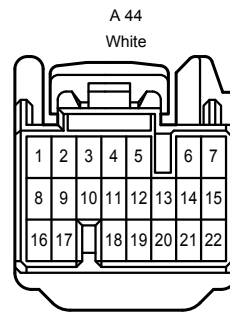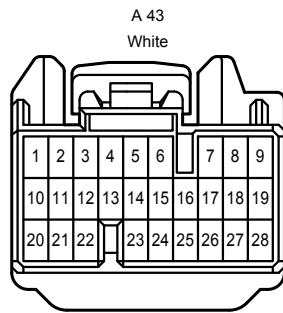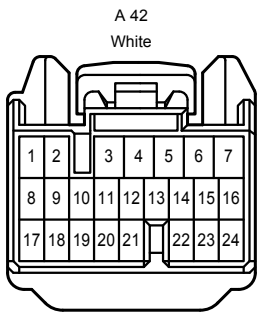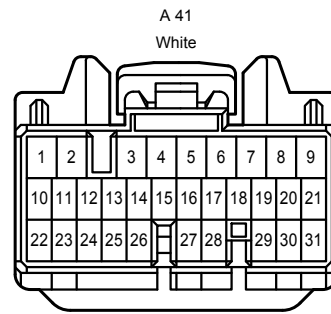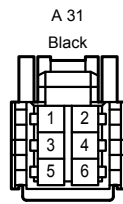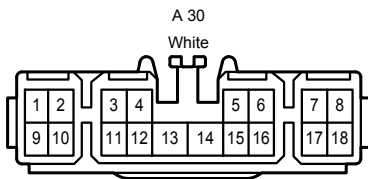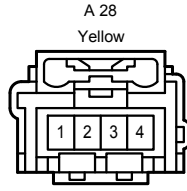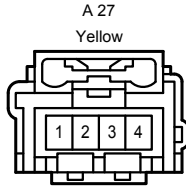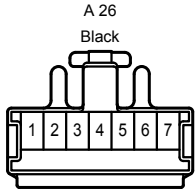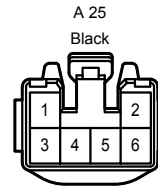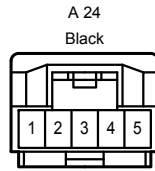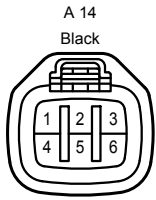

Position of Parts in Instrument Panel

