

ECM

Ce011-01

ECM Power Supply Monitor Description

MONITOR SUMMARY

The battery supplies electricity to the engine control module (ECM) even when the ignition switch is OFF. This electricity allows the ECM store data such as DTC history, freeze-frame data, fuel trim values, and other data. If the battery voltage falls below a minimum level, the ECM will conclude that there is a fault in the power supply circuit. At the next engine start, the ECM will turn on the MIL and a DTC will be set.

RELATED DTC

Previous code:

Related DTCs	P1600	Battery voltage to ECM is low
--------------	-------	-------------------------------

Extended code:

Related DTCs	P0560	Battery voltage to ECM is low
--------------	-------	-------------------------------

MODEL YEAR CHART

Model Year	See Page
1996 to 2004	Ce-84