

Electrical Throttle Control System (ETCS) Power Source Monitor Description

MONITOR SUMMARY

The engine control module (ECM) monitors the battery supply voltage applied to the throttle motor. When the power supply voltage drops below the threshold, the ECM concludes that there is an open in the power supply circuit. A DTC is set and the malfunction indicator lamp (MIL) is turned ON.

RELATED DTC

Previous code:

Related DTCs	P1127	Throttle motor power source voltage is low
--------------	-------	--

Extended code:

Related DTCs	P2118	Throttle motor power source voltage is low
--------------	-------	--

MODEL YEAR CHART

Model Year	See Page
1998 to 2004	Ce-74