

Starter System

Ce00Q-01

Starter Signal Monitor Description

MONITOR SUMMARY

When the engine is being cranked, the battery positive voltage is applied to terminal STA of the engine control module (ECM) (This is how the ECM detects the starter signal).
If the ECM detects that the starter signal remains ON even when the vehicle is being driven, it will conclude that there is a malfunction in the starter circuit. The ECM will turn on the malfunction indicator lamp (MIL) and set a DTC.

RELATED DTC

Related DTCs	P0617	Starter signal is output even when vehicle is being driven
--------------	-------	--

MODEL YEAR CHART

Model Year	See Page
2003 and 2004	Ce-53