

Transmission Control ECU (SMT)

Ce014-01

Transmission Control ECU Monitor Description

MONITOR SUMMARY

If communication between the engine control module (ECM) and the transmission ECU fails, the ECM will illuminate the malfunction indicator lamp (MIL) and set a DTC.

RELATED DTC

Previous code:

Related DTCs	P1647	No communication between ECM and transmission ECU
--------------	-------	---

Extended code:

Related DTCs	P1646	No communication between ECM and transmission ECU
--------------	-------	---

MODEL YEAR CHART

Model Year	See Page
2001 to 2003	Ce-90