

Idle Switch Monitor Description

MONITOR SUMMARY

The idle switch monitors whether or not the throttle valve is in the fully closed position. It switches ON when the throttle valve comes to the fully closed position.
If the idle switch does not switch ON/OFF while the vehicle is driving, the ECM interprets this as a malfunction in the idle switch and sets a DTC.

RELATED DTC

Related DTCs	P0510	Idle switch malfunction
--------------	-------	-------------------------

MODEL YEAR CHART

Model Year	See Page
1996 to 1998	Ce-35