

1996 to 2004 MY Igniter Monitor (P1300 to P1340, P0351 to P0358)

To return to monitor description, see page [Co-4](#).

MONITOR STRATEGY

Required sensors/Components	Main	Ignition coil with ignitor
	Sub	Crankshaft position sensor
Frequency of operation	Continuous	
Duration	Within 5 sec.	
MIL operation	Immediate	
Sequence of operation	None	

TYPICAL ENABLING CONDITIONS

Item	Specification	
	Minimum	Maximum
The monitor will run whenever the following DTCs are not present	See page In-39	
Engine RPM	1,500 rpm	—

TYPICAL MALFUNCTION THRESHOLDS

Detection Criteria	Threshold
IGf signal	No signal