

Output Speed Sensor Monitor Description

MONITOR SUMMARY

The output speed sensor monitors the output shaft speed. The ECM controls the gearshift point and the lock up timing based on the signals from the output speed sensor and throttle position sensor.

If the ECM detects no signal from the output shaft speed sensor even while the vehicle is moving, it will conclude that is a malfunction of the output speed sensor. The ECM will illuminate the MIL and set a DTC.

RELATED DTC

Previous code:

Related DTCs	P1700	Output speed sensor/Verify pulse input
--------------	-------	--

Extended code:

Related DTCs	P0722	Output speed sensor/Verify pulse input
--------------	-------	--

MODEL YEAR CHART

Model Year	DTC	See Page
1996	P1700	Ct-77
1997	P1700	Ct-78
1998	P1700	Ct-79
1999	P1700	Ct-80
2000	P1700	Ct-81
2001	P1700	Ct-82
2002	P1700	Ct-83
2003	P0722	Ct-84