

Rear Wheel Sensor Malfunction (Rear Speed Sensor) Monitor Description

MONITOR SUMMARY

The rear wheel sensor detects the rear drive shaft speed. The ECM controls the center differential clutch based on the signal from the front and rear wheel sensor.

The ECM turns on the MIL and sets a DTC when an open or short circuit is detected in the rear wheel sensor circuit.

RELATED DTC

Related DTCs	P1715	Rear wheel sensor/Verify switch cycling
--------------	-------	---

MODEL YEAR CHART

Model Year	DTC	See Page
1996	P1715	Ct-95
1997	P1715	Ct-95
1998	P1715	Ct-95
1999	P1715	Ct-96
2000	P1715	Ct-96