

EVAP VSV Monitor Description

To return to general description, see page [Ev-2](#).

MONITOR SUMMARY

The engine control module (ECM) controls the opening and closing of the vacuum switching valve (VSV) for EVAP. When the EVAP VSV is opened, the engine speed and the air/fuel ratio should change. The ECM monitors both of the engine RPM and the air/fuel ratio for this EVAP system diagnostic test. If the ECM does not detect any change in the engine RPM or the air/fuel ratio when opening the EVAP VSV, the ECM will determine that there is a malfunction of the EVAP VSV and set a DTC.

RELATED DTC

Related DTCs	P0441	EVAP VSV malfunction
--------------	-------	----------------------

MODEL YEAR CHART

Model Year	See Page
1996 to 1998	Ev-4