

OBD II Monitor Disable Matrix

1. Previous Code (For 1996 to 2002 and a part of 2003 models)

HINT:

While a DTC listed on the left is present, the ECM does not monitor the items listed in the upper column.

[illegible]

DTC	Component/System	Monitor disablement (X: disabled)																													
		P0750-P0770	P0750-P0770	P0753-P0773	P1100	P1120,P1121	P1125,P1128	P1126	P1129	P1130,P1150	P1130,P1150	P1133,P1153	P1135,P1155	P1300-P1340	P1345,P1350	P1349,P1354	P1400,P1401	P1405,P1406	P1410	P1411	P1430	P1511,P1512	P1600	P1605	P1652-P1662	P1656,P1663	P1692,P1693	P1700-P1730	P1755-P1770	P1780	P1780
		Trans solenoid (function)*1	Trans solenoid (function)*2	Trans solenoid (range)	BARO sensor	Accel position sensor	Throttle motor	Electronic magnet clutch	Electronic throttle system	A/F sensor (rationality)	A/F sensor (open)	A/F sensor (slow response)	A/F sensor heater	Ignitor	VVT sensor1,2	VVT system1,2	Sub-TP sensor	Turbo press sensor	Lift sensor	Lift sensor	Pressure sensor (HC adsorber)	Turbo VSV	Battery	Knock control module	Turbo VSV1-4	VVT VSV1,2	VVTL	Output speed sensor	Trans solenoid (SLU-SLD)	Shift lever position switch	PNP switch
P0100, P0101	MAF sensor	X							X	X	X																				
P0105, P0106	MAP sensor	X							X	X	X				X																
P0110	IAT sensor	X							X	X	X															X					
P0115, P0116	ECT sensor	X	X						X	X	X				X				X							X					
P0120, P0121	TP sensor	X							X	X	X																				
P0125	Closed loop	X							X	X	X																				
P0128	Thermostat																														
P0130-P0153	Fr O2S	X																													
P0135-P0161	Fr O2S heater	X																													
P0136, P0156	Rr O2S								X																						
P0141-0167	Rr O2S heater								X																						
P0171-P0174	Fuel system	X							X	X	X																				
P0300-P0308	Misfire	X							X	X	X																				
P0325, P0330	Knock sensor	X																													
P0335, P0336	CKP sensor	X							X	X	X				X								X			X					
P0340	CMP sensor	X							X	X	X				X							X				X					
P0385	CKP sensor 2								X	X	X				X										X						
P0401	EGR system (closed)	X																													
P0402	EGR system (open)	X							X	X	X																				
P0420, P0430	Catalyst																														
P0440-P0446	EVAP system								X	X	X																				
P0450, P0451	EVAP press sensor																														
P0500	VSS	X	X																												

2. Extended Code (For 2003 and later models)

		Monitor disablement (X: disabled)																														
DTC	Component/System	P0010,P0020	P0031-0052	P0031-0052	P0037-0058	P0043-P0064	P0100-P0103	P0101	P0110-P0113	P0115-P0118	P0116	P0120-P2135	P0125	P0128	P0130-P0153	P0134-P0154	P0136,P0156	P0142,P0162	P0171-P0175	P0300,P0308	P0325-P0333	P0335	P0340,P0341	P0340-P0346	P0351-P0358	P0401	P0402	P0405	P0409	P0420,P0430	P0440-P0446	P0450-P0453
		VVT VVS1,2	FrO2S heater sensor 1	A/F sensor heater sensor 1	FrO2S heater sensor 2	FrO2S heater sensor 3	MAF sensor	MAF sensor	IAT sensor	ECT sensor	ECT sensor	TP sensor	Insufficient ECT for CL	Thermostat	O2S Sensor 1	Fr O2S,A/F sensor(No Activity)	O2S Sensor 2	O2S Sensor 3	Fuel system	Misfire	Knock sensor	CKP sensor	CMP sensor	VVT sensor1,2	Ignitor	EGR system (closed)	EGR system (open)	EGR Lift sensor	Catalyst	EVAP system	EVAP press sator	
Monitor detected malfunction	P0010,P0020													X																		
	P0031-0052														X	X	X	X	X							X	X			X		
	P0031-0052														X	X	X	X	X						X	X			X			
	P0037-0058																X	X											X			
	P0043-0064																X													X		
	P0100-P0103										X		X	X	X	X	X	X	X	X	X					X	X			X	X	
	P0110-P0113												X	X	X	X	X	X	X	X	X					X	X			X	X	
	P0115-P0118							X					X	X	X	X	X	X	X	X	X					X	X		X	X	X	
	P0120-P2135							X							X	X	X	X	X	X	X					X	X		X	X	X	
	P0125							X							X	X	X	X	X	X	X					X	X		X	X	X	
	P0128							X							X	X	X	X	X	X	X					X	X		X	X	X	
	P0130-P0153														X	X	X	X	X							X	X		X			
	P0134,P0154		X												X	X	X	X	X	X						X	X		X	X		
	P0136,P0156														X	X	X	X	X	X									X			
	P0142,P0162															X	X	X	X	X												
	P0171-P0172														X	X	X	X	X	X						X	X			X	X	
	P0300-P0308		X												X	X	X	X	X	X										X	X	
	P0325-P0333															X	X	X	X	X						X	X					
	P0335							X							X	X	X	X	X	X	X					X	X			X	X	
	P0340,P0341							X							X	X	X	X	X	X	X					X	X			X	X	
	P0340-P0346														X																	
	P0351-P0358														X					X						X	X			X	X	
	P0401														X					X										X	X	
	P0402														X	X	X	X	X	X										X	X	
	P0405,P0409															X	X	X	X	X												
	P0420,P0430																															
	P0442-P0456															X	X	X	X	X												
	P0450,P0451																															
	P0500														X	X	X	X	X	X	X					X	X			X	X	
	P0505,P0511														X																	
	P0560																															
	P0617																															
	P0705																															
	P0710																															
	P0715-P0717																															
	P0715-P0717																															
	P0724																															
	P0741-P0796																															
	P0748-P0798																															
	P0850																				X											
	P1010														X					X												
	P2120-P2138																															
	P2102,P2103																															
	P1126																															
P1129																																
P0011,P0012														X					X						X	X			X	X		
P1011,P1012														X					X						X	X			X	X		
P1430																																
P2004,P2006																																
P2009,P2010																																
P2014,16,17																																
P2196,P2198														X	X	X	X	X							X	X			X			
P2237,P2240														X	X	X	X	X							X	X			X			
P2423,P2424																																
P2714-P2759																																
P2A00,P2A03														X	X	X	X	X							X	X			X			

A19557

Continued:

DTC	Component/System	Monitor disablement (X: disabled)																							
		P0500	P0500	P0500	P0505,P0511	P0560	P0617	P0705	P0710	P0715-P0717	P0715-P0717	P0724	P0741-P0796	P0741-P0796	P0748-P0798	P0850	P1010,P1020	P1120-P2138	P2102,P2103	P1126	P1129	P0011-P0012	P1011,P1012	P1430	P2004,P2006
		VSS(ECT2sensor)	VSS(ECT1sensor, non-ECT)	VSS(M/T)	ISC valve	Battery	Starter signal	Shift lever position switch	Trans fluid temp sensor	Output speed sensor	Input speed sensor	Stop lamp switch	Trans solenoid (function)*1	Trans solenoid (function)*2	Trans solenoid (range)	PNP switch	WVTL	Accel position sensor	Throttle motor	Electronic magnet clutch	Electronic throttle system	VVT system1,2	VVTL System	Pressure sensor (HC adsorber)	Intake manifold runner control
P0010,P0020	VVT VVS1,2												X												
P0031-0052	FrO2S heater sensor 1				X								X												
P0031-0052	A/F sensor heater sensor 1				X																				
P0037-0058	FrO2S heater sensor 2																								
P0043-0064	FrO2S heater sensor 3																								
P0100-P0103	MAF sensor			X	X								X				X					X	X		X
P0110-P0113	IAT sensor												X									X	X		X
P0115-P0118	ECT sensor			X	X								X	X								X	X		X
P0120-P2135	TP sensor	X		X									X									X	X		X
P0125	ECT sensor			X	X								X	X								X	X		X
P0128	Thermostat																								
P0130-P0153	O2S Sensor 1				X								X												
P0134,P0154	Closed Loop				X								X												X
P0136,P0156	O2S Sensor 2																								
P0142,P0162	O2S Sensor 3																								
P0171-P0172	Fuel system				X								X												X
P0300-P0308	Misfire				X								X												X
P0325-P0333	Knock sensor												X												
P0335	CKP sensor			X									X				X					X	X		X
P0340,P0341	CMP sensor			X									X				X					X	X		X
P0340-P0346	VVT sensor1,2												X									X	X		X
P0351-P0358	Ignitor			X									X												
P0401	EGR system (closed)												X												
P0402	EGR system (open)			X									X												
P0405,P0409	Lift sensor																								
P0420,P0430	Catalyst																								
P0442-P0456	EVAP system			X																					
P0450,P0451	EVAP press sensor																								X
P0500	VSS			X						X	X		X	X											X
P0505,P0511	ISC valve																								X
P0560	Battery																								
P0617	Starter signal																								
P0705	Shift lever position switch																								
P0710	Trans fluid temp sensor																								
P0715-P0717	Output speed sensor												X												
P0715-P0717	Input speed sensor																								
P0724	Stop lamp switch																								
P0741-P0796	Trans solenoid (function)																								
P0748-P0798	Trans solenoid (range)									X	X		X	X											
P0850	PNP switch			X									X												
P1010	OCV for WVTL																								
P2120-P2138	Accel position sensor																								
P2102,P2103	Throttle motor																								
P1126	Electronic magnet clutch																								
P1129	Electronic throttle system																								
P0011,P0012	VVT system1,2			X																					
P1011,P1012	VVTL System			X																					
P1430	Pressure sensor (HC adsorber)																								X
P2004,P2006	Intake manifold runner control																								
P2009,P2010	Intake manifold runner circuit																								
P2014,16,17	Intake manifold runner sensor																								
P2196,P2198	A/F sensor (rationality)			X									X												X
P2237,P2240	A/F sensor (open)			X									X												X
P2423,P2424	HC adsorption catalyst																								X
P2714-P2759	Trans solenoid(SLU-SLD)												X												
P2A00,P2A03	A/F sensor (slow response)			X									X												

T

A19558

Note *1: Without input speed sensor

Note *2: With input speed sensor