

OBD II Monitor Strategies Chart

Section	Document	Contents	Extended Code	Previous Code	See Page
Components Engine Inputs	Components Engine Inputs Introduction	Components Engine Inputs Monitor Summary	–	–	Ce-1
	MAF sensor	MAF Sensor Monitor Description	P0100	P0100	Ce-4
			P0102		
			P0103		
	MAP Sensor	MAP Sensor Range/Performance Monitor Description	P0101	P0101	Ce-6
		MAP Sensor Monitor Description	–	P0105	Ce-12
	IAT Sensor	IAT Sensor Monitor Description	–	P0106	Ce-14
			–		
			–		
	ECT Sensor	ECT Sensor Monitor Description	P0110	P0110	Ce-16
			P0112		
			P0113		
		ECT Sensor Range/Performance Monitor Description	P0115	P0115	Ce-18
			P0117		
			P0118		
	Throttle Position Sensor (1–Sensor Type)	Throttle Position Sensor Monitor Description	P0116	P0116	Ce-20
			P0125		
			–		
		Throttle Position Sensor Range/Performance Monitor Description	P0120	P0120	Ce-23
			P0122		
			P0123		
	Throttle Position Sensor (2–Sensor Type)	Throttle Position Sensor Range/Performance Monitor Description	P0121	P0121	Ce-32
			–		
			–		
		Throttle Position Sensor Monitor Description	P0510	P0510	Ce-34
			–		
			–		
	Knock Sensor	Knock Sensor Monitor Description	P0120	P0120	Ce-36
			P0122		
			P0123		
		Throttle Position Sensor Range/Performance Monitor Description	P0220	P0121	Ce-38
			P0222		
			P0223		
	Camshaft Position Sensor	Camshaft Position Sensor Monitor Description	P0121	P0121	Ce-40
			P2135		
			–		
		Camshaft Position Sensor Monitor Description	P0325	P0325	Ce-40
			P0327		
			P0328		
	Camshaft Position Sensor	Camshaft Position Sensor Monitor Description	P0330	P0330	Ce-40
			P0332		
			P0333		
		Camshaft Position Sensor Monitor Description	P0340	P0340	Ce-43
			P0341		
			P1340 (3UZ–FE)		
		Camshaft Position Sensor Monitor Description	P1341 (3UZ–FE)	P0340	Ce-43
			P1341 (3UZ–FE)		
			P1341 (3UZ–FE)		

Section	Document	Contents	Extended Code	Previous Code	See Page
Components Engine Inputs	VVT Sensor	VVT Sensor Monitor Description	P0345	P1350	Ce-45
			P0346		
			P0347		
			P0348		
			P0340 (3UZ-FE)	P1345	
			P0341 (3UZ-FE)		
			P0345 (3UZ-FE)	P1350	
			P0346 (3UZ-FE)		
	Crankshaft Position Sensor	Crankshaft Position Sensor Monitor Description	P0335	P0335	Ce-47
				P0336	
			-	P0385 (No. 2)	
	Vehicle Speed Sensor	Vehicle Speed Sensor Monitor Description	P0500	P0500	Ce-50
		No Signal from Vehicle Speed Sensor Monitor Description	P0717	P1705	Ct-62
	Starter System	Starter Signal Monitor Description	P0617	-	Ce-52
	Barometric Pressure Sensor	Barometric Pressure Sensor Monitor Description	-	P1100	Ce-54
	Accelerator Pedal Position Sensor	Accelerator Position Sensor Monitor Description	P2120	P1120	Ce-56
			P2122		
			P2123		
			P2125		
			P2127		
			P2128		
			P2138		
		Accelerator Position Sensor Range/Performance Monitor Description	P2121	P1121	Ce-61
	Electric Throttle Control System (ETCS)	Motor Current Monitor Description	P2102	P1125	Ce-69
			P2103		
		Motor Clutch Monitor Description	P1126	P1126	Ce-71
		ETCS Power Source Monitor Description	P2118	P1127	Ce-73
		Motor Lock Monitor Description	P2111	P1128	Ce-75
			P2112		
	ETCS Monitor Description	P2119	P1129	Ce-77	
	Sub-throttle Position Sensor	Sub-throttle Position Sensor Monitor Description	-	P1400	Ce-79
		Sub-throttle Position Sensor Range/Performance Monitor Description	-	P1401	Ce-81
	Brake Switch	Brake Switch "B" Circuit High Monitor Description	P0724	P1520	Ct-97

Section	Document	Contents	Extended Code	Previous Code	See Page
	ECM	ECM Power Supply Monitor Description	P0560	P1600	Ce-83
		Knock Control Module Monitor Description	—	P1605	Ce-85
		ECM Monitor Description	P0604	P1633	Ce-87
			P0606		
	P0657				
Transmission Control ECU (SMT)	Transmission Control ECU Monitor Description	P1646	P1647	Ce-89	
Components Engine Outputs	Components Engine Outputs Introduction	Components Engine Outputs Monitor Summary	—	—	Co-1
	Idle Speed Control System	Idle Speed Control System Monitor Description	P0505	P0505	Co-2
			P0511		
	Igniter	Igniter Monitor Description	P0351	P1300	Co-4
			P0352	P1305	
			P0353	P1310	
			P0354	P1315	
			P0355	P1320	
			P0356	P1325	
			P0357	P1330	
			P0358	P1340	
	VVT System	Valve Timing Monitor Description	P0011	P1349	Co-6
			P0012		
			P0021	P1354	
			P0022		
		VVT System Monitor Description	P0016	P1346	Co-8
			P0018	P1351	
		OCV for VVT Monitor Description	P0010	P1656	Co-13
			P0020	P1663	
	VVTL System	OCV for VVTL Monitor Description	P1010	P1690	Co-13
		VVTL System Monitor Description	P1011	P1692	Co-17
			P1012	P1693	

Section	Document	Contents	Extended Code	Previous Code	See Page
Heated Oxygen Sensor	Heated Oxygen Sensor Monitor Introduction	Heated Oxygen Sensor Monitor Summary	–	–	Ho-1
	Oxygen Sensor Heater	Oxygen Sensor Heater Monitor Description	P0031	P0135	Ho-5
			P0032		
			P0037	P0141	
			P0038		
			P0051	P0155	
			P0052		
			P0057	P0161	
			P0058		
			–	P0147	
			–	P0167	
	Oxygen Sensor	Front Heated Oxygen Sensor Monitor Description	P2195	P0130	Ho-7
			P2196		
			P0130		
			P2197	P0150	
			P2198		
			P0150		
		Front Heated Oxygen Sensor Slow Response Monitor Description	P0133	P0133	Ho-9
			P0153	P0153	
		Rear Oxygen Sensor Monitor Description	P0136	P0136	Ho-12
			P0156	P0156	

Section	Document	Contents	Extended Code	Previous Code	See Page
A/F Sensor	A/F Sensor Monitor Introduction	A/F Sensor Monitor Summary	–	–	As–1
	A/F Sensor Heater	A/F Sensor Heater Monitor Description	P0031	P1135	As–5
			P0032		
			P0135		
			P0051	P1155	
			P0052		
			P0155		
	A/F Sensor	A/F Sensor Monitor Description	P2195	P1130	As–12
			P2196		
			P2237		
			P2238		
			P2239		
			P2252		
			P2253		
			P2197	P1150	
			P2198		
			P2240		
			P2241		
			P2242		
			P2255		
			P2256		
		A/F Sensor Slow Response Monitor Description	P2A00	P1133	
			P2A03	P1153	
Thermostat	Thermostat	Thermostat Monitor Description	P0128	P0128	Th–1
Fuel System	Closed Loop Control	Closed Loop Monitor Description	P0134	P0125	Fu–1
			P0154		
	Fuel Trim	Fuel Trim Monitor Description	P0171	P0171	Fu–4
			P0172	P0172	
			P0174	P0174	
P0175			P0175		
Misfire	Misfire Detected	Misfire Monitor Description	P0300	P0300	Mi–1
			P0301	P0301	
			P0302	P0302	
			P0303	P0303	
			P0304	P0304	
			P0305	P0305	
			P0306	P0306	
			P0307	P0307	
			P0308	P0308	

Section	Document	Contents	Extended Code	Previous Code	See Page
EGR System	EGR Monitor Introduction	EGR Monitor Summary	–	–	Eg-1
	EGR Lift Sensor	EGR Lift Sensor Monitor Description	P0405	P1410	Eg-2
			P0406		
		EGR Lift Sensor Range/Performance Monitor Description	P0409	P1411	Eg-4
	EGR Gas Temperature and EGR Lift Monitor	EGR Gas Temperature and EGR Lift Monitor General Description	–	–	Eg-6
		EGR Flow Insufficient Monitor Description	P0401	P0401	Eg-8
		EGR Flow Excessive Monitor Description	P0402	P0402	Eg-11
	EGR Gas Temperature and Misfire Monitor	EGR Gas Temperature and Misfire Monitor General Description	–	–	Eg-13
		EGR Flow Insufficient Monitor Description	P0401	P0401	Eg-15
		EGR Flow Excessive Monitor Description	P0402	P0402	Eg-25
	Stepper Motor Type (EGR Gas Temperature and Misfire Monitor)	Stepper Motor Type General Description	–	–	Eg-38
		EGR Flow Insufficient Monitor Description	–	P0401	Eg-39
		EGR Flow Excessive Monitor Description	–	P0402	Eg-42
		EGR Valve Monitor Description	–	P0403	Eg-44
	Vacuum and Misfire Monitor	Vacuum and Misfire Monitor General Description	–	–	Eg-46
		EGR Flow Insufficient Monitor Description	–	P0400	Eg-48
			–	P0401	
		EGR Flow Excessive Monitor Description	–	P0402	Eg-50
Catalyst	Catalyst Monitor	Catalyst Deterioration Monitor Description	P0420	P0420	Ca-1
			P0430	P0430	

Section	Document	Contents	Extended Code	Previous Code	See Page
EVAP System	EVAP Monitor Introduction	EVAP Monitor Summary	–	–	Eg-1
	Engine RPM Monitor	Engine RPM Monitor General Description	–	–	Ev-2
		EVAP VSV Monitor Description	P0441	P0441	Ev-3
	Fuel Tank Pressure Monitor	Fuel Tank Pressure Monitor General Description	–	–	Ev-5
		EVAP Leak Monitor Description	P0440	P0440	Ev-7
		EVAP VSV Monitor Description	P0441	P0441	Ev-9
		VSV for Vapor Pressure Sensor Monitor Description	P0446	P0446	Ev-24
	Vacuum Monitor	Vacuum Monitor General Description	–	–	Ev-43
		EVAP Leak Monitor Description	P0442	P0440	Ev-50
			P0456	P0442	
		EVAP VSV Monitor Description	P0441	P0441	Ev-59
		CCV and VSV for Bypass Valve Monitor Description	P0446	P0446	Ev-71
	Vacuum Monitor (LEV II)	Vacuum Monitor (LEV II) General Description	–	–	Ev-74
		EVAP Leak Monitor Description	P0442	–	Ev-85
			P0456	–	
		EVAP VSV Monitor Description	P0441	–	Ev-88
		CCV Monitor Description	P0446	–	Ev-91
	Vapor Pressure Sensor	Vapor Pressure Sensor Monitor Description	P0452	P0450	Ev-94
			P0453		
		Vapor Pressure Sensor Range/Performance Monitor Description	P0451	P0451	Ev-96
Turbocharging System	Turbo Pressure Sensor	Turbo Pressure Sensor Monitor Description	–	P1405	Tu-1
		Turbo Pressure Sensor Range/Performance Monitor Description	–	P1406	Tu-3
	Turbo Pressure Control	Turbo Pressure Monitor Description	–	P1511	Tu-5
			–	P1512	
		Turbo VSV Monitor Description	–	P1652	Tu-7
			–	P1658	
			–	P1661	
			–	P1662	
CNG Engine	Fuel Temperature Sensor	Fuel Temperature Sensor Monitor Description	–	P0180	Cn-1
	Fuel Pressure Sensor	Fuel Pressure Sensor Monitor Description	–	P0190	Cn-3

Section	Document	Contents	Extended Code	Previous Code	See Page
Component Transmission Input	Components Transmission Inputs Introduction	Components Transmission Inputs Monitor Summary	–	–	Ct-1
	Shift Range	Transmission Range Sensor Circuit Malfunction (PRNDL Input) Monitor Description	P0705	P1780	Ct-2
		Park/Neutral Switch Input Circuit Monitor Description	P0850		
		1-2 Shift Monitor Description	P0781	–	Ct-26
		Driveline Disconnect Switch Input Circuit Monitor Description	P0818	P1783	Ct-29
		T/F L4 Range Position Switch Performance Monitor Description	P1782	P1782	Ct-32
	Transmission Temp. Sensor	Transmission Fluid Temp. Sensor "A" Circuit Monitor Description	P0710	P0710	Ct-38
			P0712		
			P0713		
		Transmission Fluid Temp. Sensor "A" Performance Monitor Description	P0711	P0711	Ct-47
		Transmission Fluid Temp. Sensor "B" Circuit Monitor Description	P2740	–	Ct-60
			P2742		
			P2743		
	Speed Sensor	Input/Turbine Speed Sensor Circuit No Signal Monitor Description	P0717	P0715	Ct-62
				P1725	
		Output Speed Sensor Monitor Description	P0722	P1700	Ct-76
		Intermediate Shaft Speed Sensor "A" Monitor Description	P0793	P1705	Ct-85
				P1730	
	Brake Switch	Brake Switch "B" Circuit High Monitor Description	–	P1715	Ct-94
	Brake Switch	Brake Switch "B" Circuit High Monitor Description	P0724	P1520	Ct-97

Section	Document	Contents	Extended Code	Previous Code	See Page
Component Transmission Output	Components Transmission Outputs Introduction	Components Transmission Outputs Monitor Summary	—	—	Cm-1
	Solenoid	Pressure Control Solenoid "A" Performance (Shift Solenoid Valve SL1) Monitor Description	P0746	P0750	Cm-2
		Shift Solenoid "A" Performance (Shift Solenoid Valve S1) Monitor Description	P0751		
		Pressure Control Solenoid "A" Electrical (Shift Solenoid Valve SL1) Monitor Description	P0748	P0753	Cm-142
		Shift Solenoid "A" Electrical (Shift Solenoid Valve S1) Monitor Description	P0973 P0974		
		Shift Solenoid "B" Performance (Shift Solenoid Valve S2) Monitor Description	P0756	P0755	Cm-158

Section	Document	Contents	Extended Code	Previous Code	See Page
Component Transmission Output	Solenoid	Pressure Control Solenoid "B" Performance (Shift Solenoid Valve SL2) Monitor Description	P0776	P0755	Cm-158
		Shift Solenoid "B" Electrical (Shift Solenoid Valve S2) Monitor Description	P0976	P0758	Cm-271
			P0977		
		Pressure Control Solenoid "B" Electrical (Shift Solenoid Valve SL2) Monitor Description	P0778		
		Shift Solenoid "C" Performance (Shift Solenoid Valve S3) Monitor Description	P0761	P0760	Cm-288
		Pressure Control Solenoid "C" Performance (Shift Solenoid Valve SL3) Monitor Description	P0796	P0760	Cm-288
		Shift Solenoid "D" Performance (Shift Solenoid Valve S4) Monitor Description	P0766	P0765	Cm-320
		Shift Solenoid "E" Performance (Shift Solenoid Valve SR) Monitor Description	P0771	P1815	Cm-342
		Shift/Timing Solenoid (Shift Solenoid Valve ST) Monitor Description	P0785	P1790	Cm-354
		Pressure Control Solenoid "C" Electrical (Shift Solenoid Valve SL3) Monitor Description	P0798	P0763	Cm-359
		Shift Solenoid "C" Control Circuit (Shift Solenoid Valve S3) Monitor Description	P0979		
			P0980		
		Shift Solenoid "D" Control Circuit (Shift Solenoid Valve S4) Monitor Description	P0768	P0768	Cm-368
			P0982		
			P0983		
		Shift Solenoid "E" Control Circuit (Shift Solenoid Valve SR) Monitor Description	P0985	P1818	Cm-377
			P0986		
		Pressure Control Solenoid "D" Performance (Shift Solenoid Valve SLT) Monitor Description	P2714	—	Cm-380
		Pressure Control Solenoid "D" Electrical (Shift Solenoid Valve SLT) Monitor Description	P2716	P1760	Cm-383

Section	Document	Contents	Extended Code	Previous Code	See Page
Component Transmission Output	Solenoid	Pressure Control Solenoid "E" Electrical (Shift Solenoid Valve SLN) Monitor Description	P2725	P1765	Cm-392
		Differential Lock Solenoid No.1 Circuit Malfunction (Shift Solenoid Valve SLD) Monitor Description	–	P1770	Cm-402
		Torque Converter Clutch Solenoid Performance (Shift Solenoid Valve DSL) Monitor Description	P0741	P0770	Cm-405
		Torque Converter Clutch Circuit Electrical (Shift Solenoid Valve DSL) Monitor Description	P0743	P0773	Cm-471
			P2769		
			P2770		
		Torque Converter Clutch Pressure Control Solenoid Performance (Shift Solenoid Valve SLU) Monitor Description	P2757	–	Cm-489
		Torque Converter Clutch Pressure Control Solenoid Circuit Electrical (Shift Solenoid Valve SLU) Monitor Description	P2759	P1755	Cm-493
Sequential Manual Transmission (SMT)	Shift Change	Shift Change Monitor Description	P0896	P0780	Sm-1
	Shift Lever Switch	Shift Lever Switch Monitor Description	P0820	P1781	Sm-3
	CAN Communication	CAN Communication Monitor Description	P0860	P1810	Sm-7
			P0863		
	Master Pressure Sensor	Master Pressure Sensor Monitor Description	P0847	P1860	Sm-10
			P0848		