

Shift Change

Sm001-01

Shift Change Monitor Description

MONITOR SUMMARY

The transmission electronic control unit (ECU) changes gears in response to the request for a shift-change from the ECM.

If a gear does not change into a given gear twice during 1 driving cycle, the transmission ECU will conclude that there is a mechanical malfunction in the transmission system, and illuminate the malfunction indicator lamp (MIL) and set a DTC.

RELATED DTC

Previous code:

Related DTCs	P0780	Shift change is disable
--------------	-------	-------------------------

Extended code:

Related DTCs	P0896	Shift change is disable
--------------	-------	-------------------------

MODEL YEAR CHART

Model Year	See Page
2001 to 2003	Sm-2