


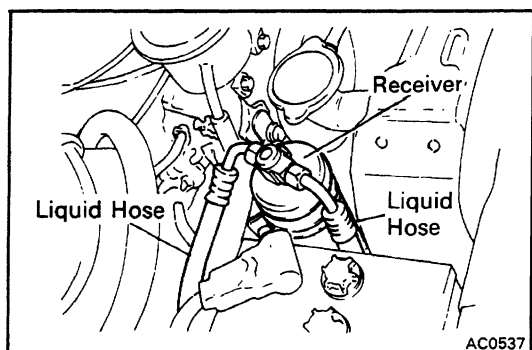

RECEIVER

ON-VEHICLE INSPECTION

CHECK SIGHT GLASS, FUSIBLE PLUG AND FITTINGS FOR LEAKAGE (See page AC-5)

Use a gas leak tester. Repair as necessary.

REMOVAL OF RECEIVER

(See pages AC-5) '

1. DISCHARGE REFRIGERATION SYSTEM

(See page AC-14)

2. DISCONNECT TWO LIQUID TUBES FROM RECEIVER

HINT: Cap the open fittings immediately to keep moisture out of the system.

3. REMOVE RECEIVER FROM RECEIVER HOLDER

INSTALLATION OF RECEIVER

(See pages AC-5)

1. INSTALL RECEIVER IN RECEIVER HOLDER

HINT: Do not remove the caps until ready for connection.

2. CONNECT TWO LIQUID TUBES TO RECEIVER

Torque: 135 kg-cm (10 ft-lb, 13 N-m)

3. IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR

Add 20 cc (0.7 oz)

Compressor oil: DENSO OIL 6,

SUNISO No. 5GS or equivalent

4. EVACUATE AIR FROM AIR CONDITIONING SYSTEM

5. CHARGE AIR CONDITIONING SYSTEM WITH REFRIGERANT AND CHECK FOR GAS LEAKAGE

Specified amount: 800 – 900 g (1.8 – 2.0 lb)