


ON-VEHICLE REPAIR

HINT: The components mentioned below can be replaced on the vehicle as they do not require removal of the transmission. For the respective operating procedures refer to the following pages:

Components	Removal	Installation	Remarks
Valve Body	Steps 9 to 14 on pages AT-32 to 34	Steps 31 to 36 on pages AT-135 to 137	
Throttle Cable	Steps 14 and 16 on page AT-34	Steps 29 and 31 on page AT-135	- Adjust the throttle cable after installing. (See page AT-12) - If the throttle cable is new, see the note below.

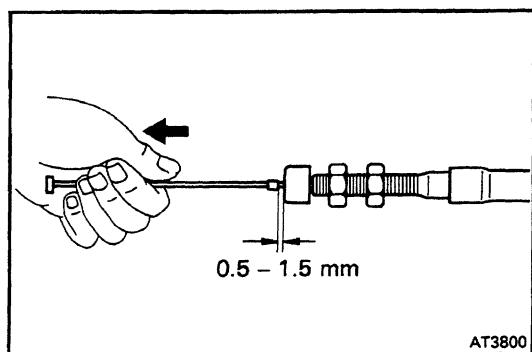

HINT: New cables do not have a cable stopper staked.

- Pull the inner cable lightly until a slight resistance is felt, and hold it.
- Stake the stopper, 0.5 – 1.5 mm (0.020 – 0.059 in.) from the end of outer cable.