


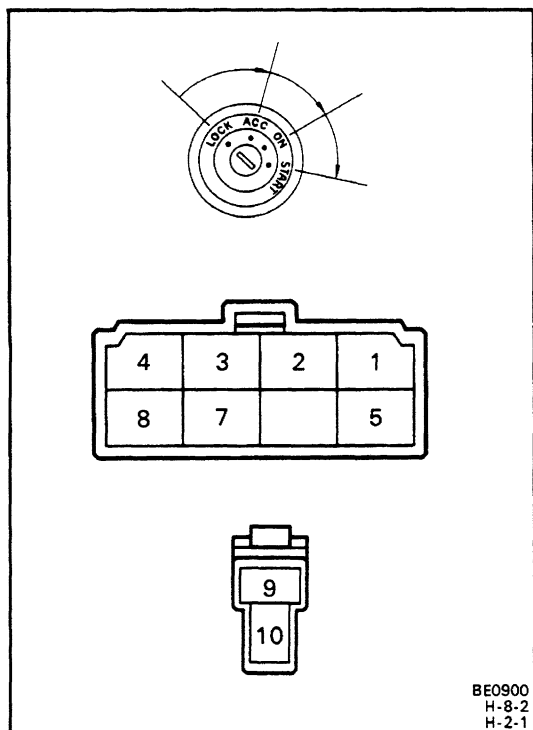

IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH

Parts Inspection

INSPECT SWITCHES

(Ignition Switch/ Continuity)

Terminals	1	2	3	4	5	6	7	8
Switch position								
LOCK								
ACC			○	○				
ON		○	○	○			○	○
START	○	○		○	○		○	○

(Key Unlock Warning Switch/ Continuity)

Terminals	9	10
Switch pin position		
Released (Ignition key removed)		
Pushed in (Ignition key set)	○	○

If continuity is not as specified, replace the switch.