

REMOTE CONTROL MIRROR SYSTEM

Parts Inspection

1. INSPECT CONTROL SWITCH

(Continuity)

Mirror	LH					RH				
	1	2	3	6	7	1	2	3	4	5
UP	○	○	○		○	○	○	○		
DOWN	○	○	○		○	○	○	○		
LEFT	○	○	○			○	○			○
RIGHT	○	○	○			○	○			○

If continuity is not as specified, replace the switch.

2. INSPECT MIRROR

(Operation)

Connect the positive (+) lead from the battery to terminal in column A and the negative (–) lead to terminal in column B, check the mirror operates in column C.

A (+)	B (–)	C
2	3	Mirror moves upward
3	2	Mirror moves downward
1	3	Mirror moves to the rightward
3	1	Mirror moves to the leftward

If operation is not as specified, replace the mirror.

