



BACK DOOR GLASS COMPONENTS

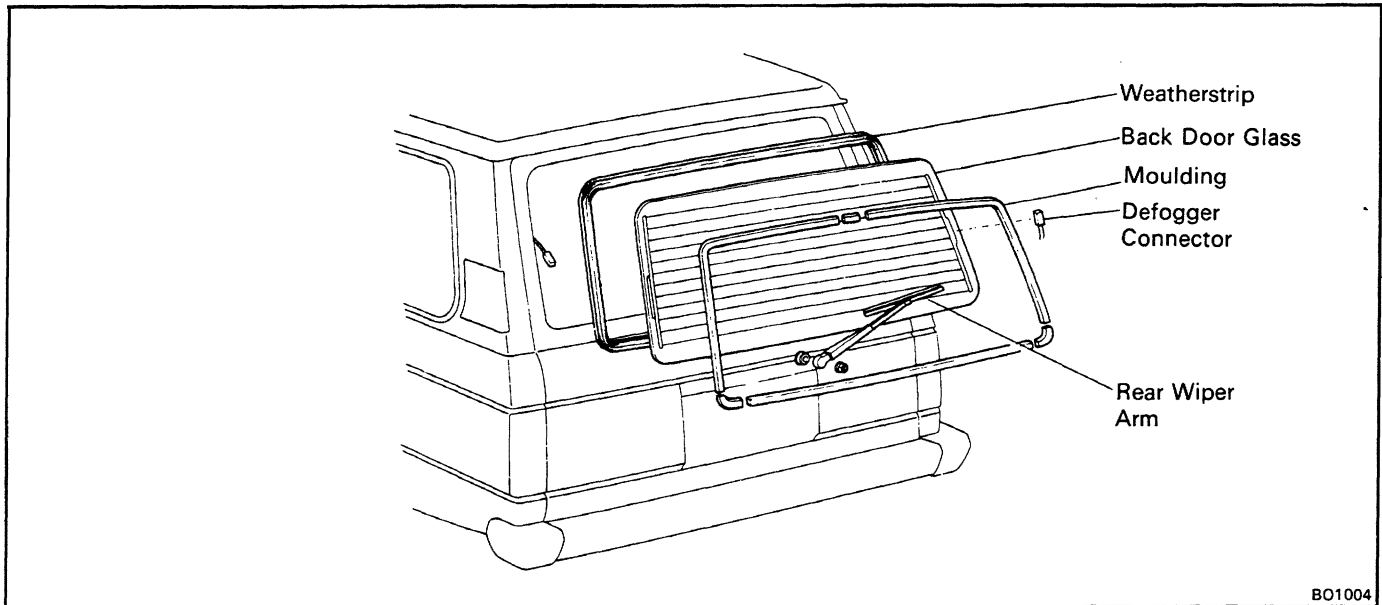

REMOVAL OF BACK DOOR GLASS

1. REMOVE FOLLOWING PARTS:


- (a) Rear wiper arm
- (b) Back door mouldings (See page [BO-23](#))
- (c) Two defogger connectors

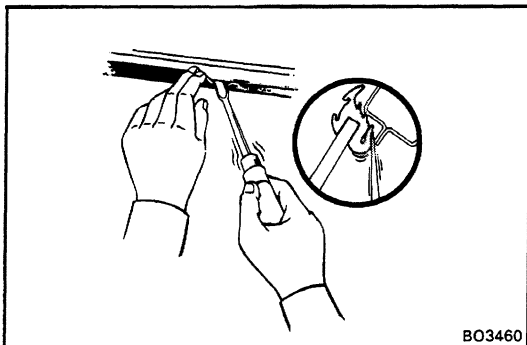

2. REMOVE BACK DOOR GLASS


If reusing the weatherstrip:

- (a) From inside of vehicle, stuff lip of weatherstrip under flange with screwdriver.
- (b) Push the glass out to remove.

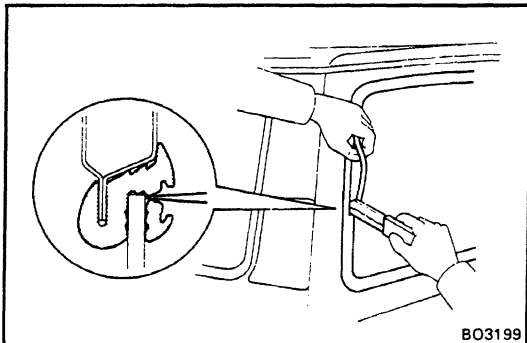

If using a new weatherstrip:

- (a) From outside of the vehicle, cut off the weatherstrip lip with a knife.
- (b) Push the back door glass outwards and remove the back door glass.
- (c) Remove the remaining weatherstrip.

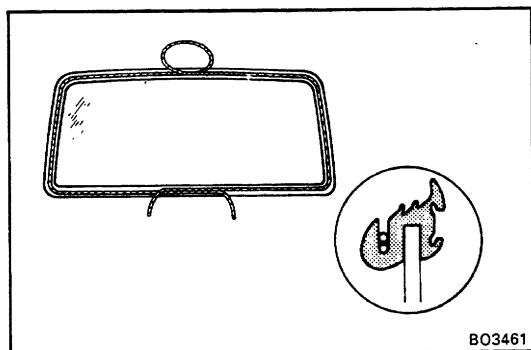

INSTALLATION OF BACK DOOR GLASS


(See page [BO-29](#))

1. INSTALL WEATHERSTRIP ON GLASS

(a) Attach the weatherstrip to the glass.


NOTICE: If the weatherstrip has hardened, it may develop leaks. Use a new one if possible.

(b) Insert a cord into the groove of the weatherstrip all the way around with the ends overlapping.

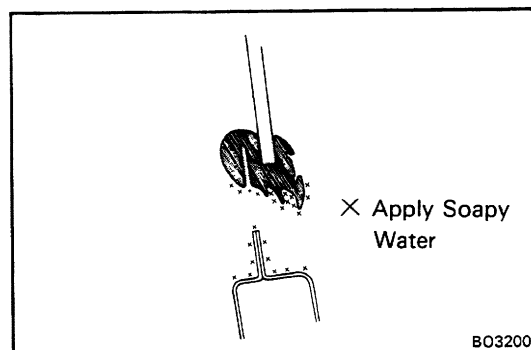


2. INSTALL BACK DOOR GLASS

(a) Apply soapy water to the contact surface of the weatherstrip lip and to the body flange.

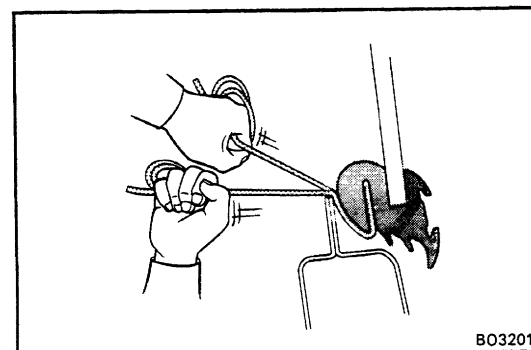

HINT: Begin installation in the middle of the lower part of the back door glass.

(b) Hold the glass in position on the body.

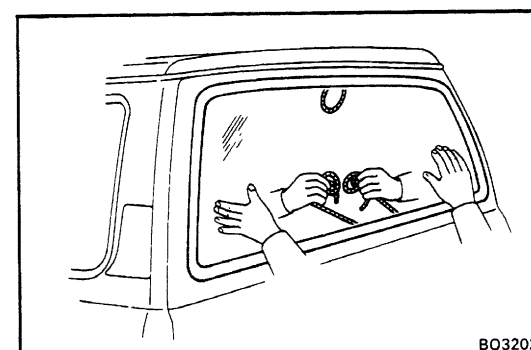

(c) From the inside, pull on one cord at an angle so it pulls the lip over the flange. From the outside, press the glass along the weatherstrip until the glass is installed.

3. SNUG DOWN GLASS

To snug down the glass, tap from the outside with your open hand.

4. INSPECT FOR LEAKS AND REPAIR

(a) Perform a leak test.

(b) Seal any leak with auto glass sealer.

Part No. 08833-00030 or equivalent

5. INSTALL FOLLOWING PARTS:

(a) Two defogger connectors

(b) Back door mouldings (See page [BO-23](#))

(c) Rear wiper arm

