


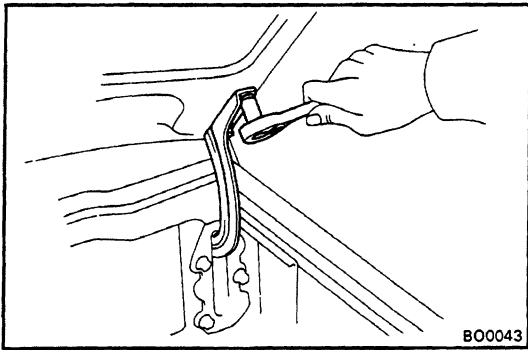


HOOD

ADJUSTMENT OF HOOD


1. ADJUST HOOD IN FORWARD/REARWARD AND LEFT /RIGHT DIRECTIONS

Adjust the hood by loosening the hood side hinge bolts.

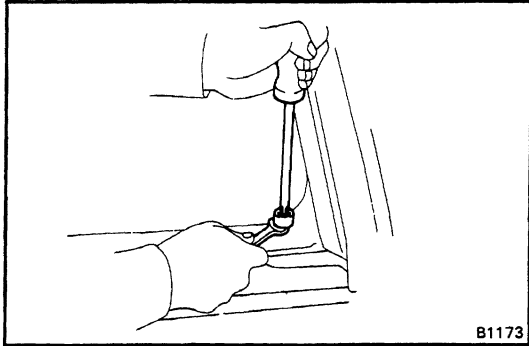


2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the hood cushions.

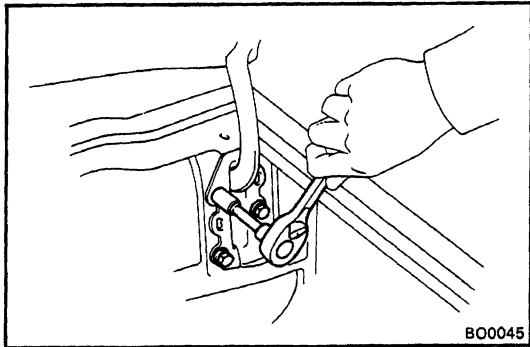

3. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by loosening the body side hinge bolts.

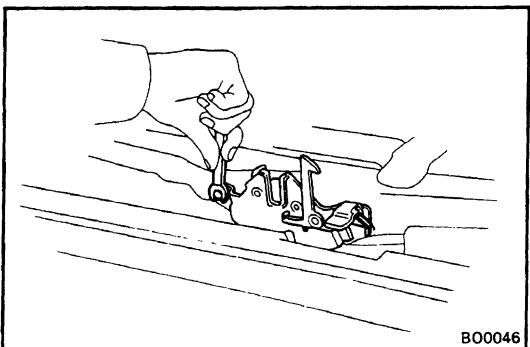

4. ADJUST HOOD LOCK

Adjust the hood lock by loosening the mounting bolts.