



MOULDING

Windshield Outside Moulding COMPONENTS

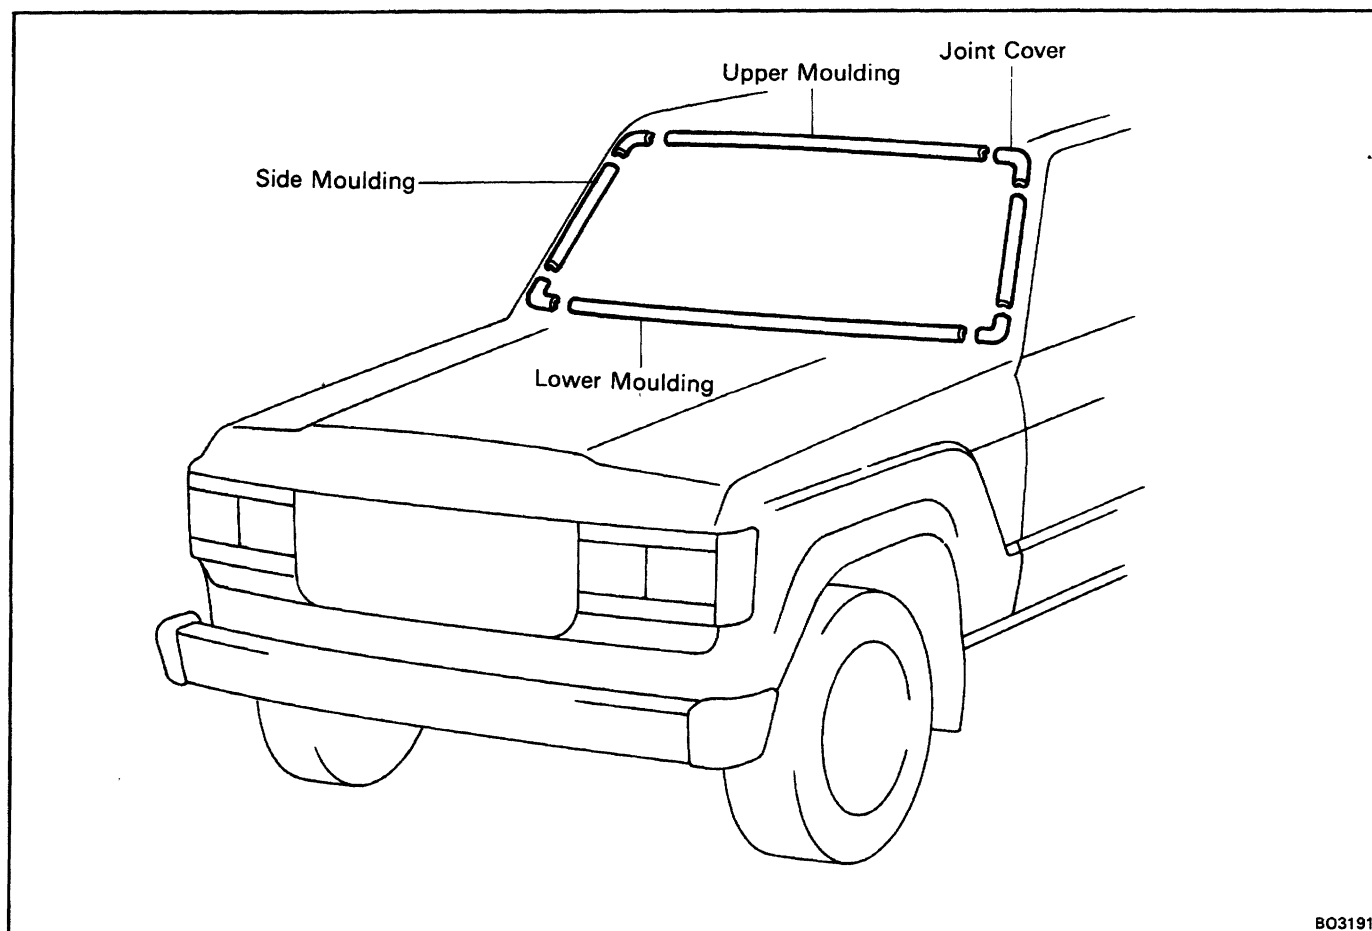


B03191

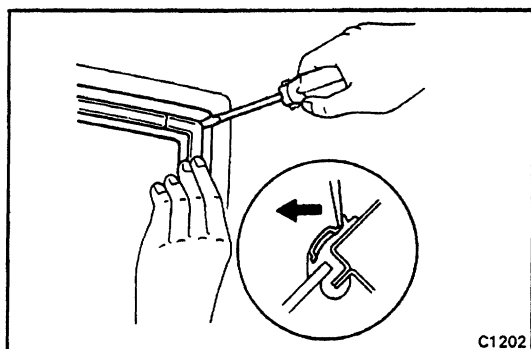

REMOVAL OF MOULDING

REMOVE WINDSHIELD OUTSIDE MOULDING

- (a) Using a screwdriver, pull off the joint cover.
 - (b) Using a screwdriver, pull off the moulding from the end.
- HINT: Tape the screwdriver tip before use.


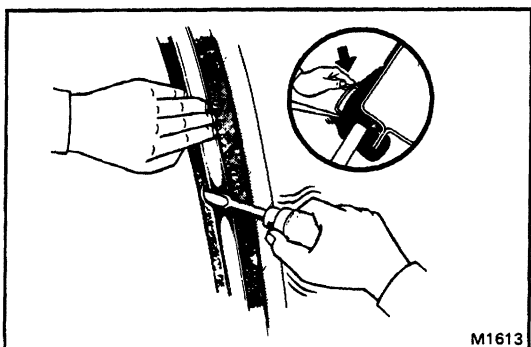


INSTALLATION OF MOULDING

INSTALL WINDSHIELD OUTSIDE MOULDING

Using a screwdriver, install the moulding and joint cover.


Body Outside Moulding COMPONENTS

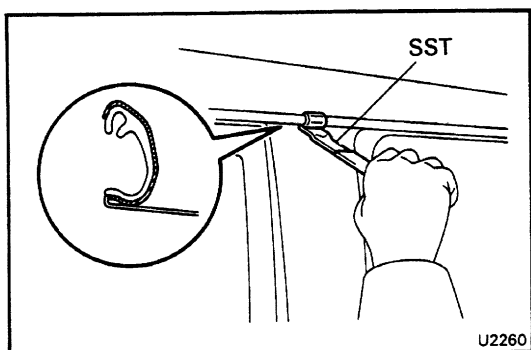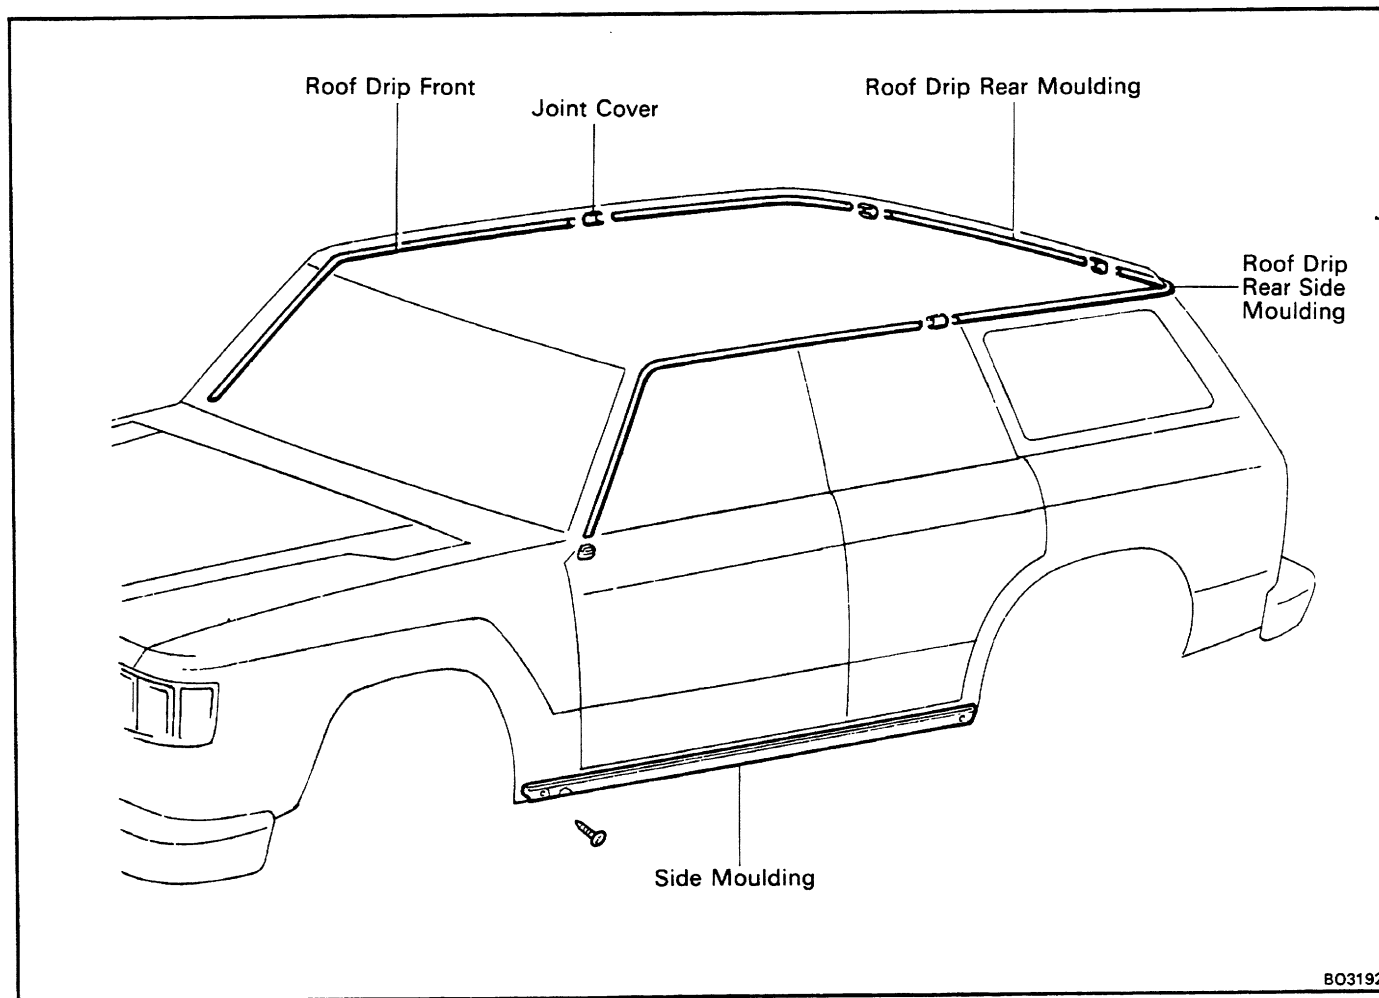

REMOVAL OF MOULDING

REMOVE ROOF DRIP MOULDING

- (a) Using SST, pull off the joint cover.
SST 09806-30010
- (b) Using SST, pull off the roof drip moulding from both ends.
SST 09806-30010

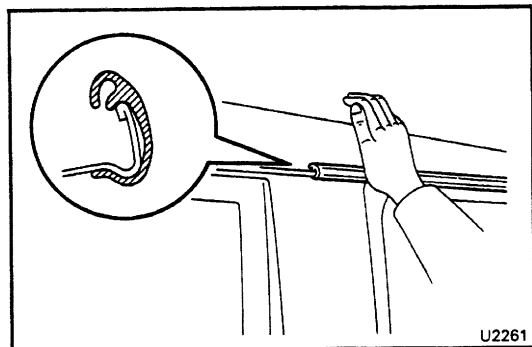


INSTALLATION OF MOULDING

INSTALL ROOF DRIP MOULDING BY HAND

Attach the upper edge of the moulding and joint cover to the body flange. Tap on the moulding by hand.

Back Door Moulding COMPONENTS

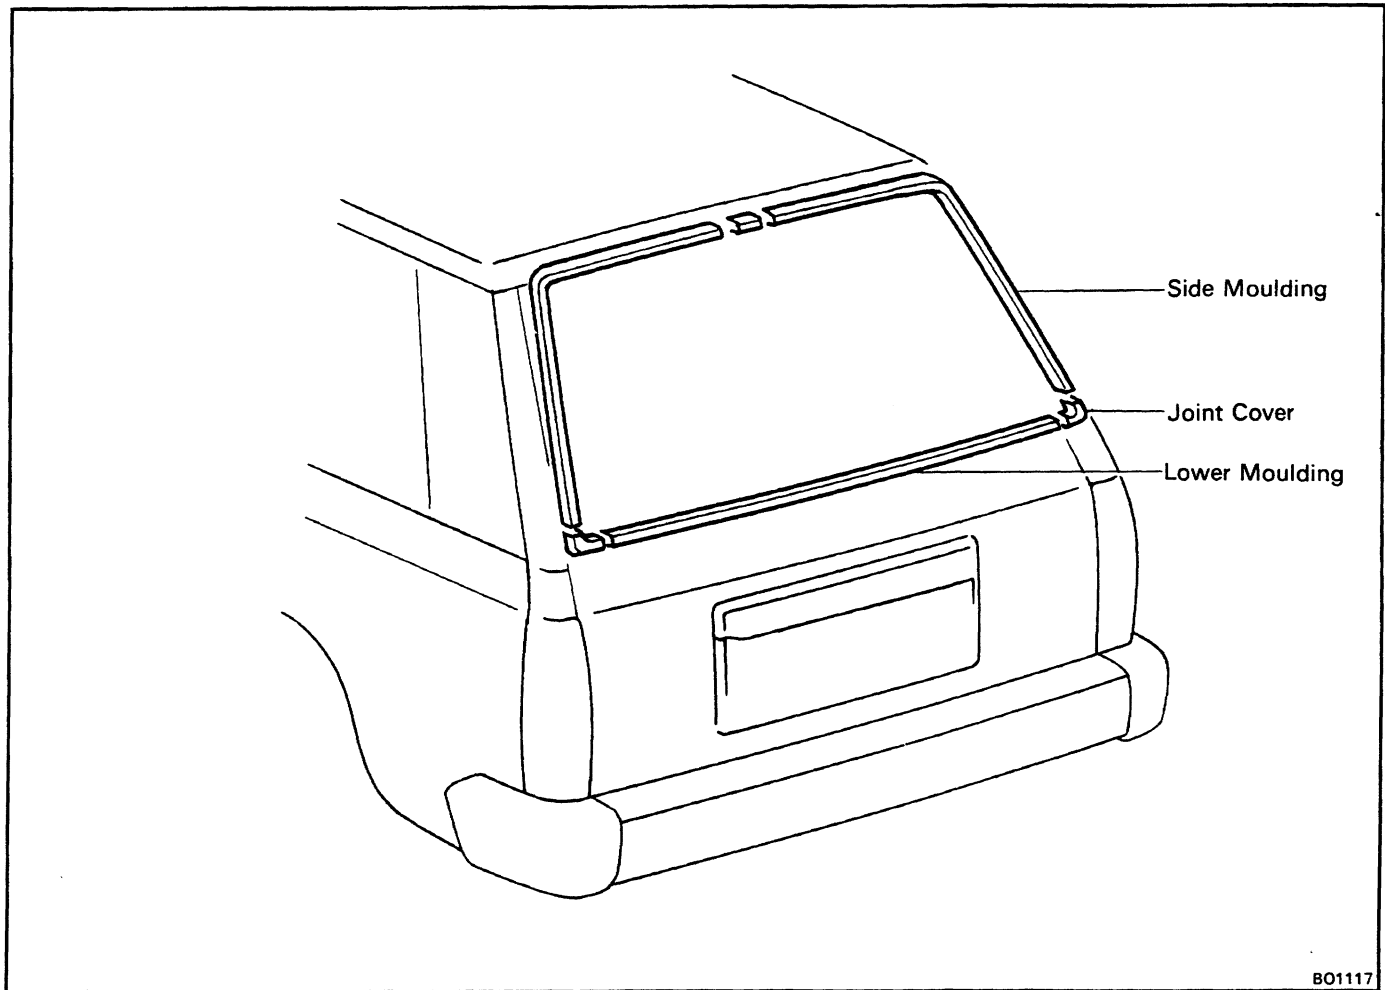

HINT: Remove and install the back door moulding on the windshield outside moulding with the same procedure.

(See page [BO-21](#))