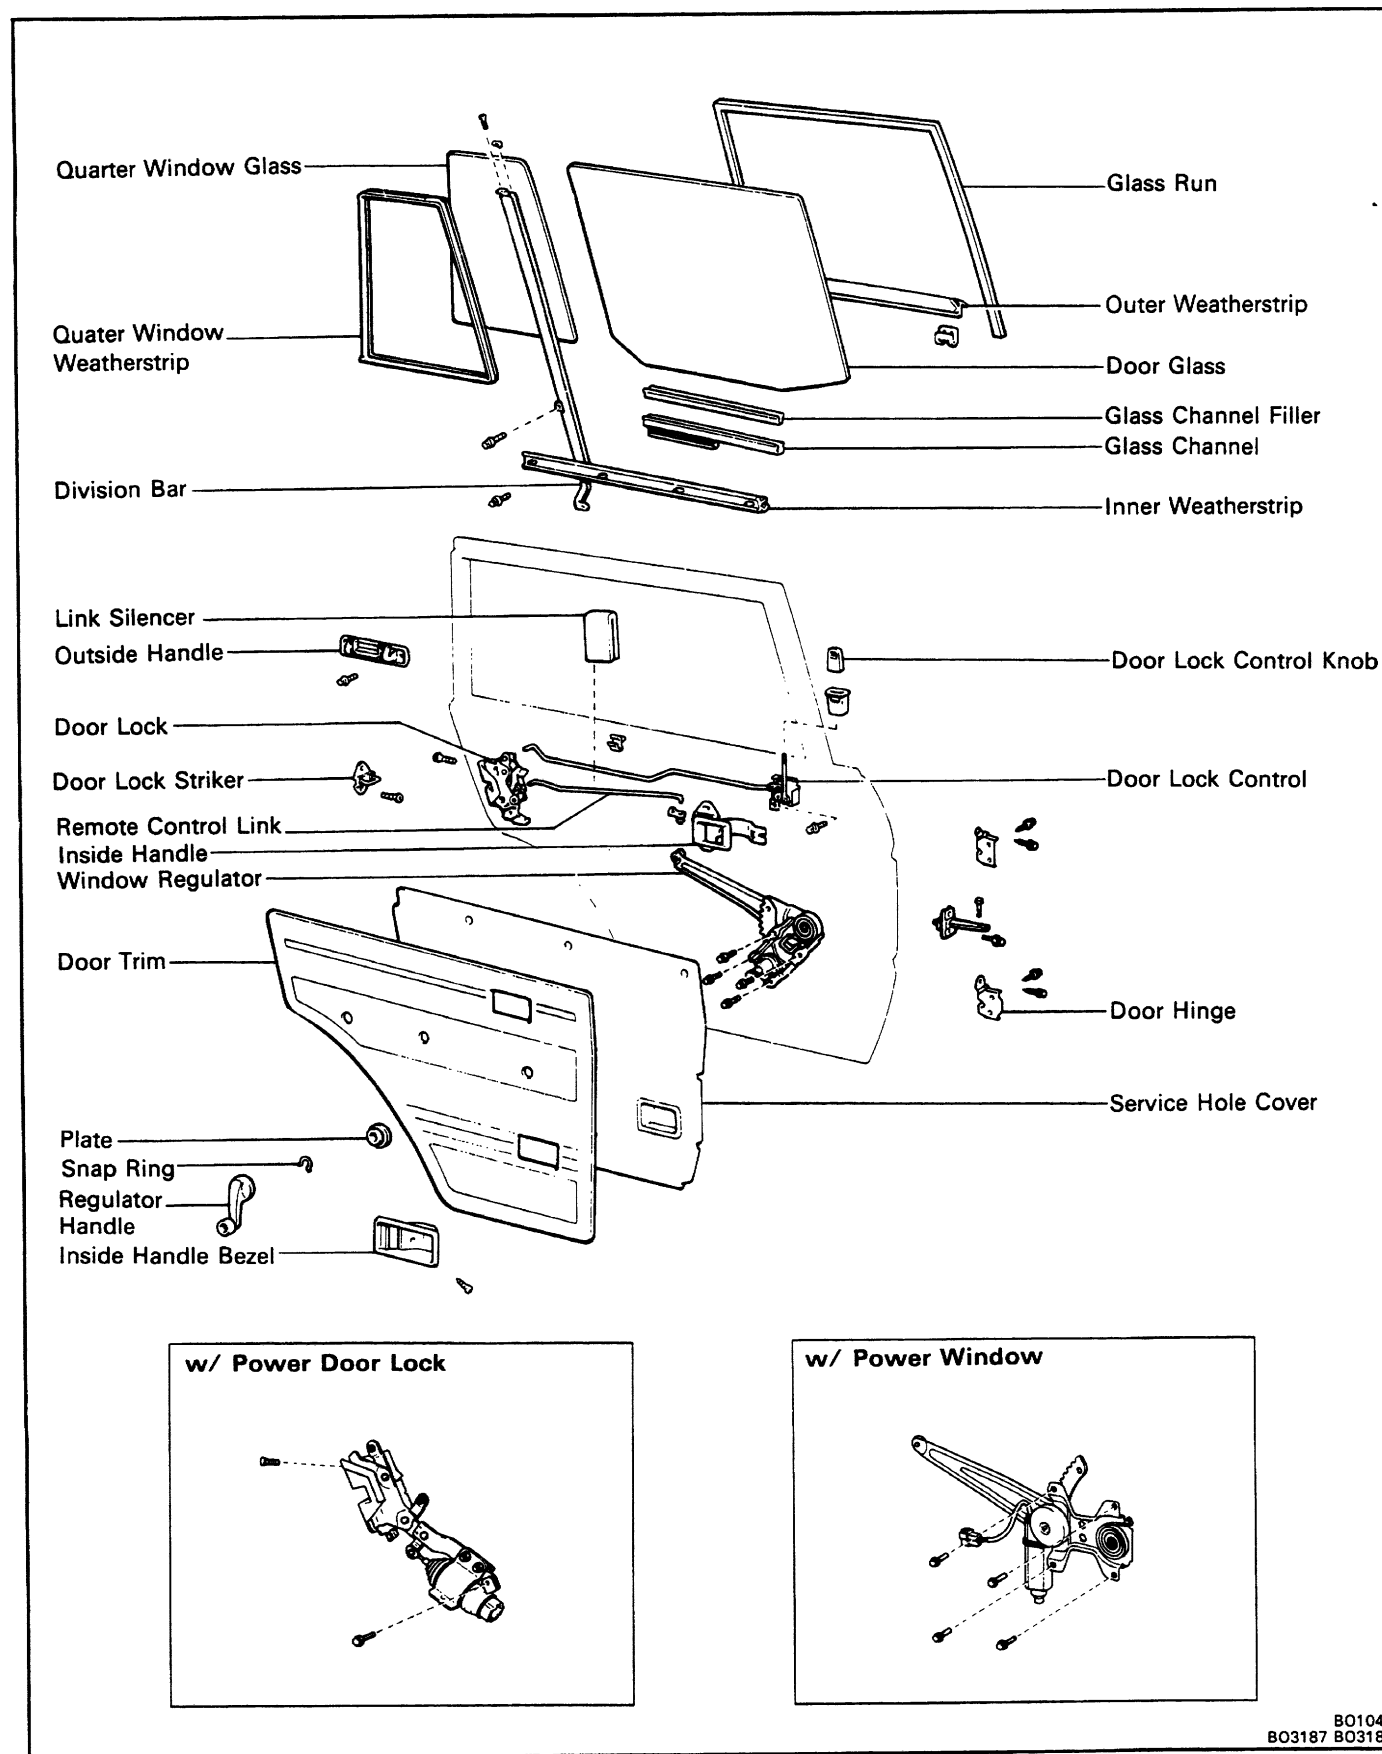
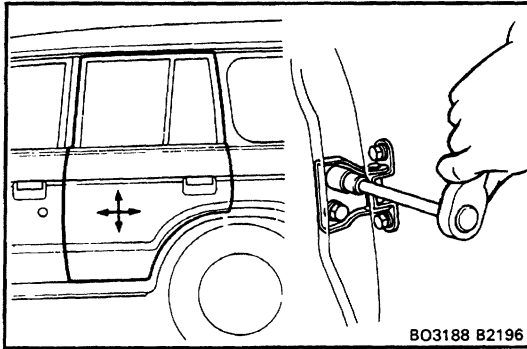


REAR DOOR COMPONENTS

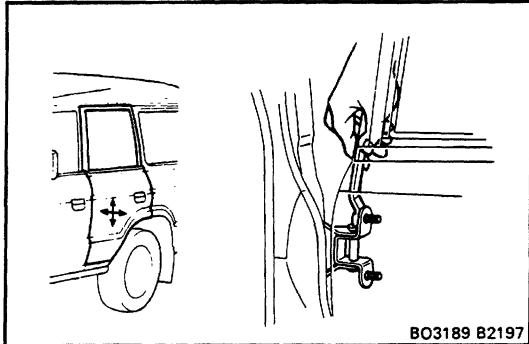




ADJUSTMENT OF REAR DOOR

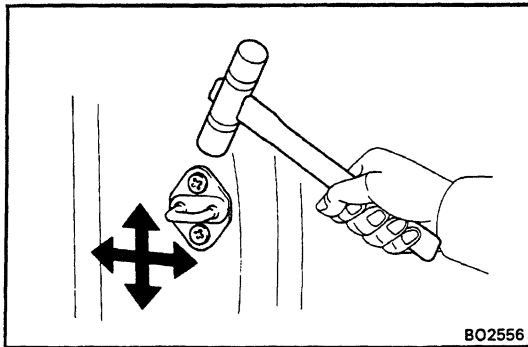
1. ADJUST DOOR IN FORWARD/ REARWARD AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.



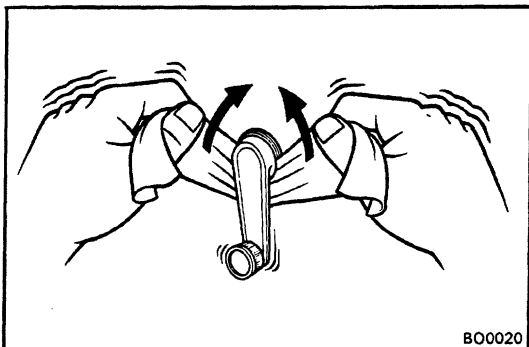
2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the door side hinge bolts.



3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screws again.



DISASSEMBLY OF REAR DOOR

1. (w/o POWER WINDOW)

REMOVE REGULATOR HANDLE

Pull off the snap ring with a cloth and remove the regulator handle and plate.

2. REMOVE INSIDE HANDLE BEZEL

Remove the screw and slide the inside handle bezel forward.

3. REMOVE ARMREST

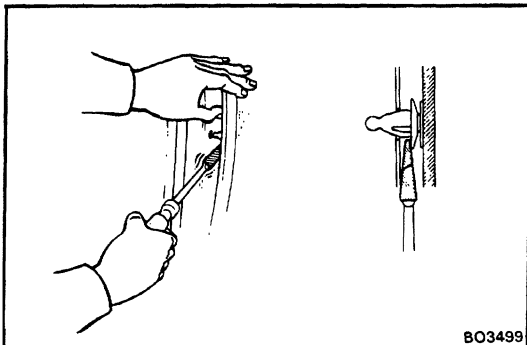
4. REMOVE DOOR TRIM

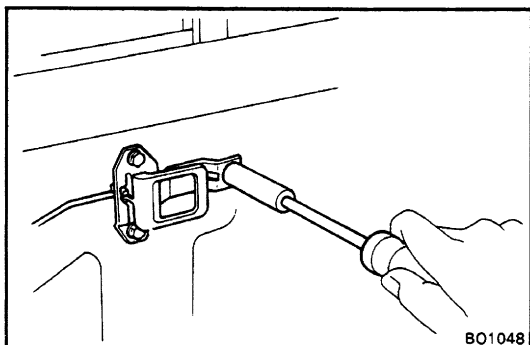
- Insert a screwdriver between the trim retainers and door panel to pry it loose.

HINT: Tape the screwdriver tip before use.

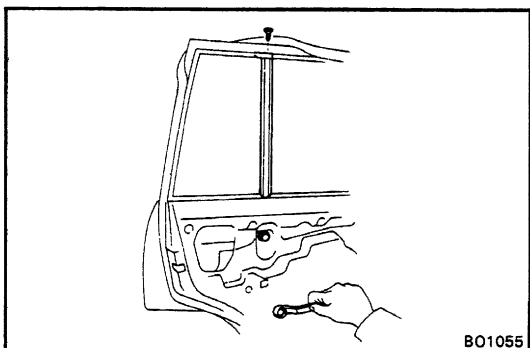
- (w/ power window)

Disconnect the connector from the switch.

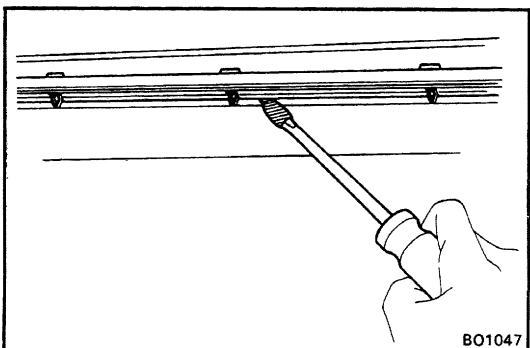


**5. REMOVE INSIDE HANDLE**

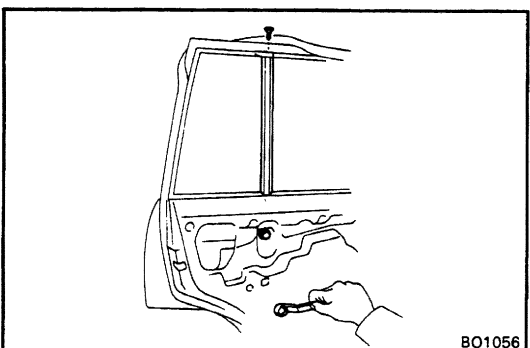
- (a) Remove three screws.
- (b) Partly tear off the service hole cover and disconnect the remote control link from the door lock.

6. REMOVE SERVICE HOLE COVER**7. REMOVE INSIDE DOOR LOCK CONTROL**

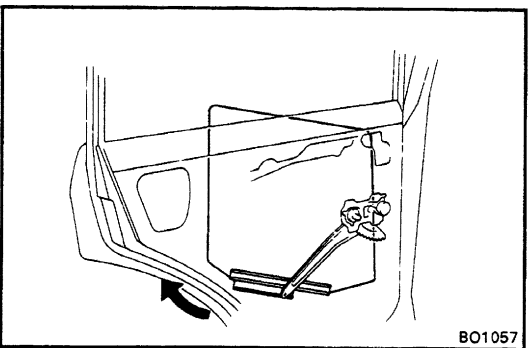
- (a) Disconnect the link from the door lock control.
- (b) Remove the door lock knob.
- (c) Remove the bolt and door lock control.

**8. REMOVE OUTER AND INNER WEATHERSTRIP**

- (a) Pull off the outer weatherstrip.
 - (b) Using a screwdriver, remove the inner weatherstrip.
- HINT: Tape the screwdriver tip before use.

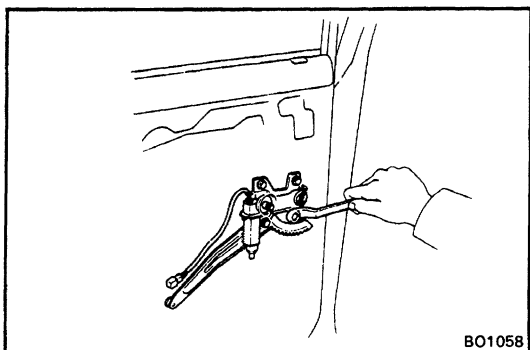
9. REMOVE GLASS RUN**10. REMOVE DIVISION BAR**

- (a) Peel off the weatherstrip on the upper side of the quarter window and remove the screw.
- (b) Remove two bolts.
- (c) Remove the division bar by pulling it upward.

**11. REMOVE DOOR GLASS**

- (a) Incline the door glass and remove the door glass from the regulator roller.
- (b) Remove the door glass by pulling it upward.

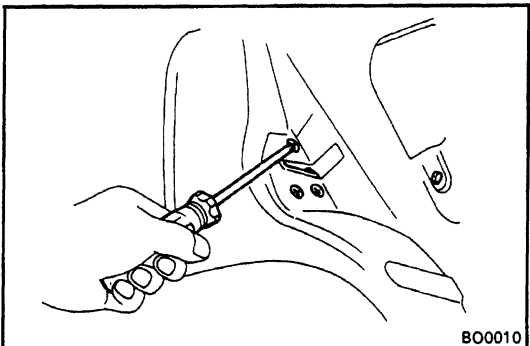
12. REMOVE QUARTER WINDOW



BO1058

13. REMOVE WINDOW REGULATOR

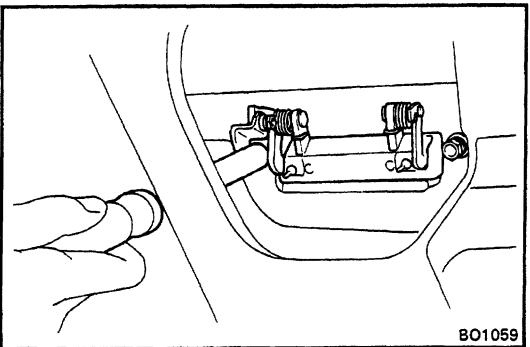
- (a) (w/ power window)
Remove four bolts and window regulator.
- (w/o power window)
Remove three bolts and window regulator.
- (b) (w/ power window)
Disconnect the connector from the motor.



BO0010

14. REMOVE DOOR LOCK

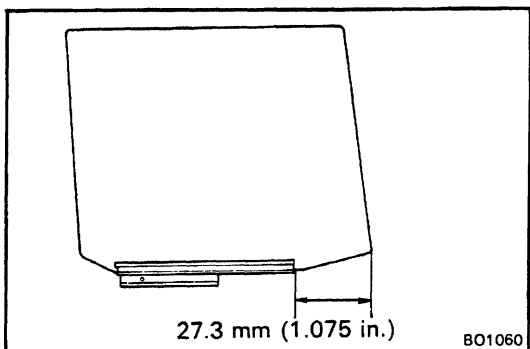
- (w/ power door lock)
(a) Remove the bolt, three screws and door lock.
- (b) Disconnect the connector from the solenoid.
- (w/o power door lock)
Remove three screws and door lock.



BO1059

15. REMOVE OUTSIDE HANDLE

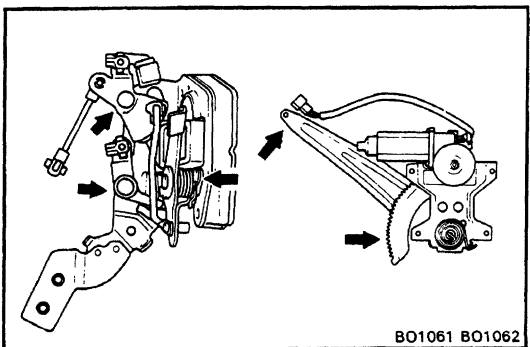
Remove two bolts and outside handle.



BO1060

REPLACEMENT OF GLASS

1. REMOVE GLASS CHANNEL WITH SCREWDRIVER OR LINK OBJECT
2. APPLY SOAPY WATER TO INSIDE OF WEATHERSTRIP
3. TAP ON CHANNEL WITH PLASTIC HAMMER



BO1061 BO1062

ASSEMBLY OF REAR DOOR

1. BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE

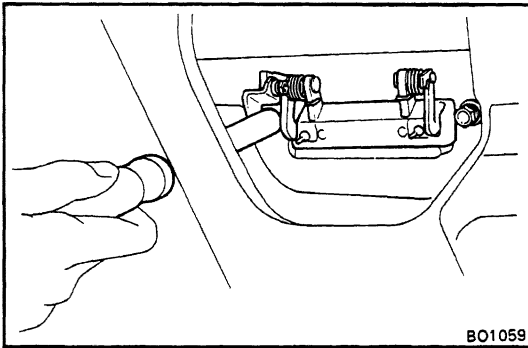
- (a) Apply MP grease to the sliding surface and gears of the window regulator.

NOTICE: Do not apply MP grease to the spring of the window regulator.

- (b) Apply MP grease to the sliding surface of the door lock.

2. INSTALL OUTSIDE HANDLE

Install the outside handle with two bolts.

**3. INSTALL DOOR LOCK**

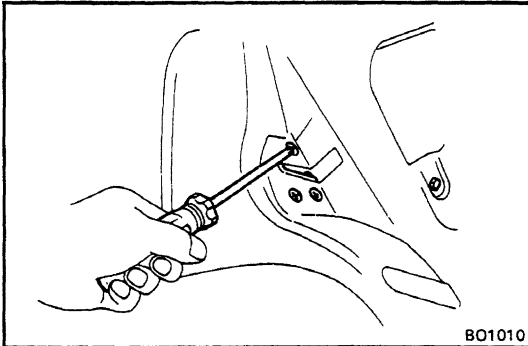
(w/ power door lock)

(a) Connect the connector to the solenoid.

(b) Install the door lock with three screws and the bolt.

(w/o power door lock)

Install the door lock with three screws.

**4. INSTALL WINDOW REGULATOR**

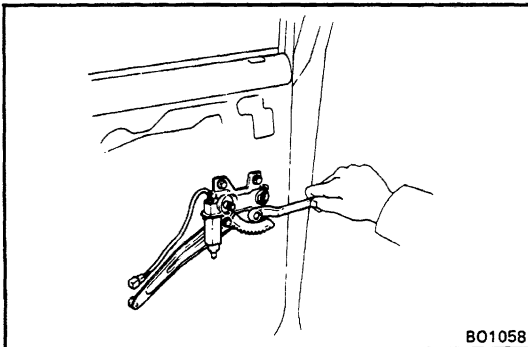
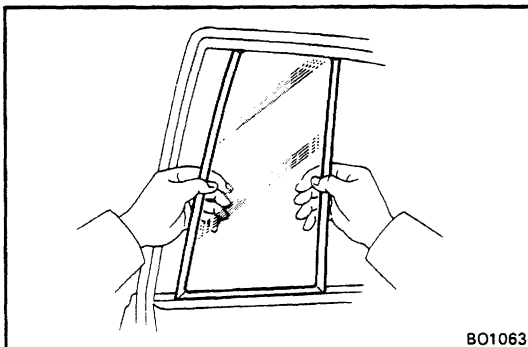
(w/ power window)

(a) install the regulator with four bolts.

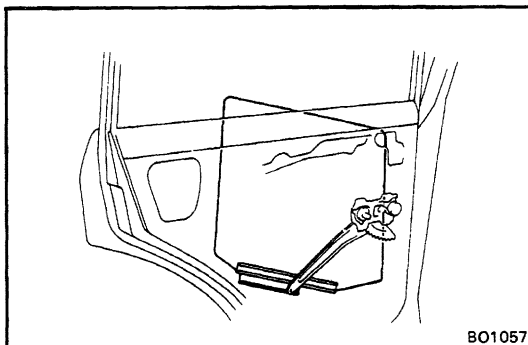
(b) Connect the connector to the motor.

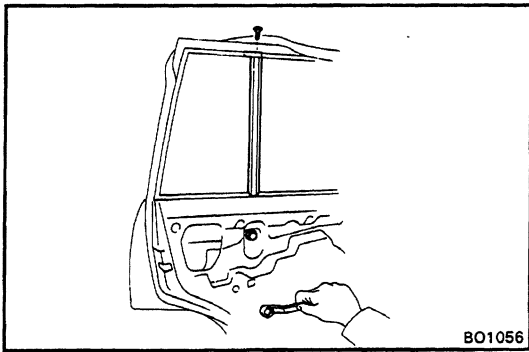
(w/o power window)

Install the regulator with three bolts.

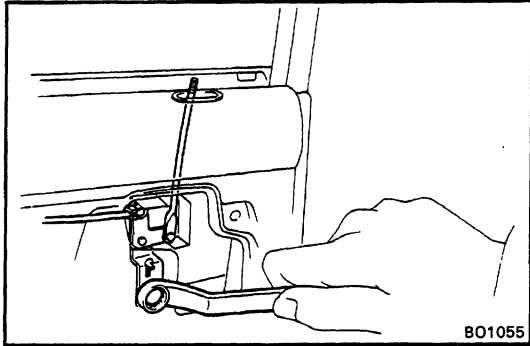
**5. INSTALL QUARTER WINDOW****6. INSTALL DOOR GLASS**

Install the door glass to the regulator roller.

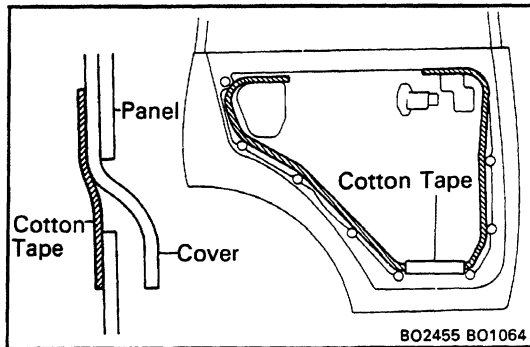


**7. INSTALL DIVISION BAR**

Install the division bar with two bolts and the screw.

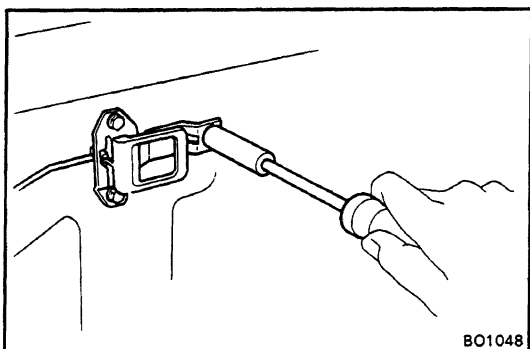
8. INSTALL INNER AND OUTER WEATHERSTRIP**9. INSTALL GLASS RUN****10. INSTALL INSIDE DOOR LOCK CONTROL**

- (6) Install the door lock control with the bolt.
- (b) Install the door lock control knob.
- (c) Connect the link to the door lock.

**11. INSTALL SERVICE HOLE COVER**

- (a) Seal the service hole cover with adhesive.
- (b) Insert the lower edge of the service hole cover into the panel slit.
- (c) Seal the panel slit with cotton tape.

NOTICE: Do not block the trim clip seating with the tape.

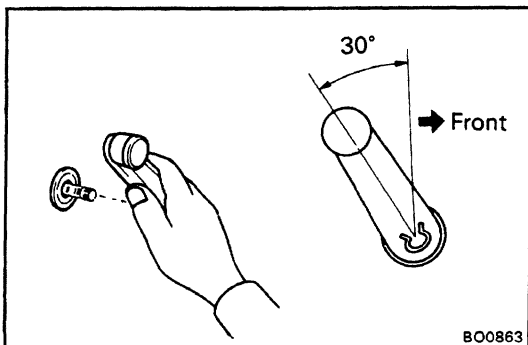
**12. INSTALL INSIDE HANDLE**

- (a) Connect the link to the door lock.
- (b) Install the inside handle with three screws.

13. INSTALL DOOR TRIM**(a) (w/ power window)**

Connect the connector to the switch.

- (b) Tap on the door trim with clips to the inside door panel.

**14. (w/o POWER WINDOW)****INSTALL REGULATOR HANDLE**

With the door glass fully closed, install the plate and regulator handle with a snap ring as shown.

15. INSTALL INSIDE HANDLE BEZEL**16. INSTALL ARMREST**