



SEAT BELT COMPONENTS

Front Seat Belt

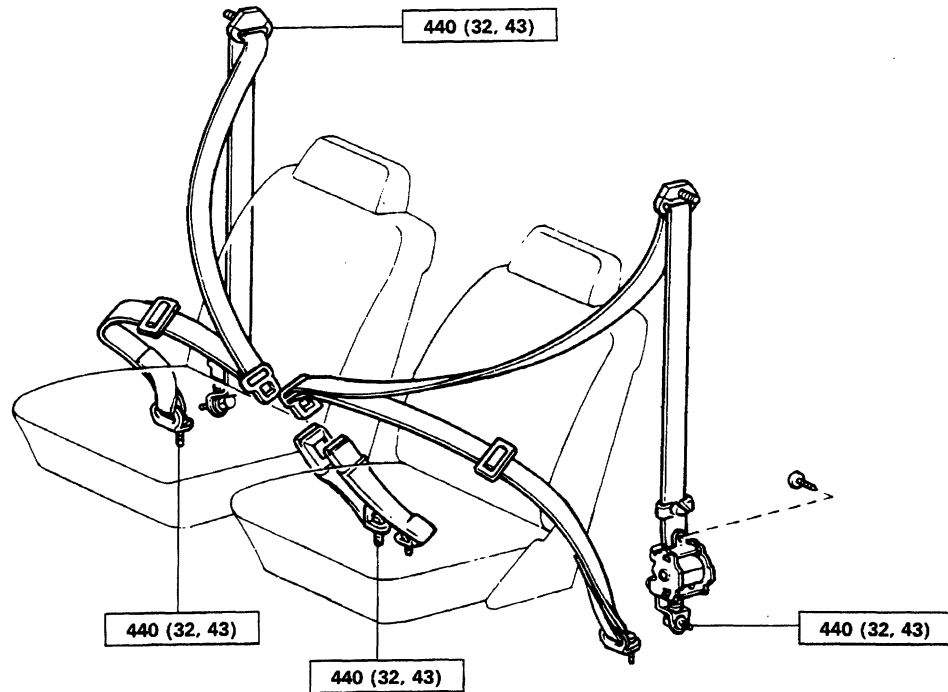


Rear Seat Belt

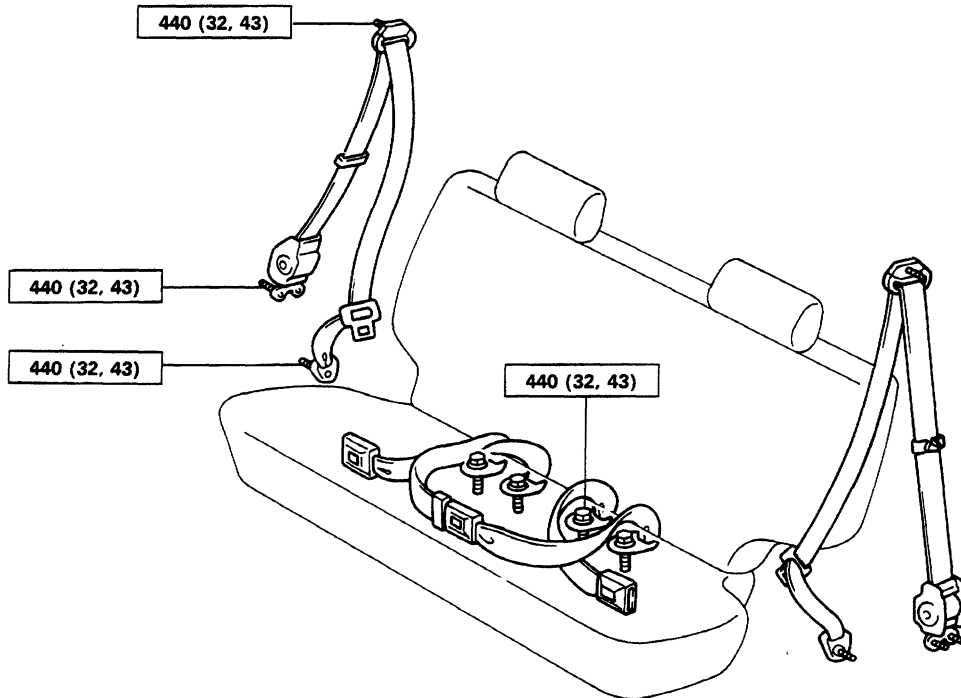

kg-cm (ft-lb, N·m) : Specified torque

BO1124
BO3205

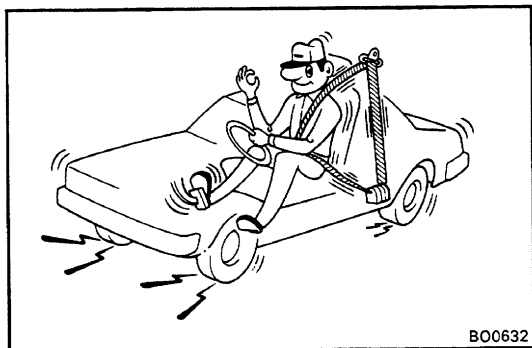


BO0632

FRONT AND REAR OUTSIDE SEAT BELT [Emergency Locking Retractor (ELR) Type]

1. RUNNING TEST (IN SAFE AREA)

- (a) Fasten the front seat belt.
- (b) Drive the car at 10 mph (16 km/h) and make a very hard stop.
- (c) Check that the belt is locked and cannot be extended at this time.


HINT: Conduct this test in safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

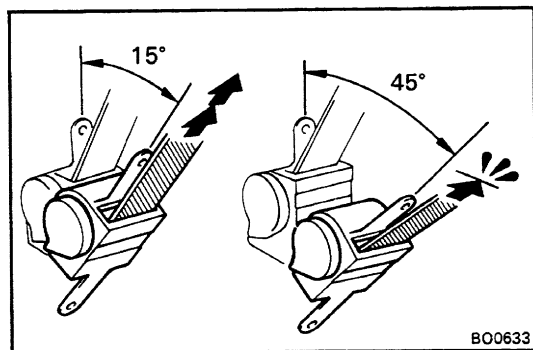

BO0633

2. STATIC TEST

- (a) Remove the locking retractor assembly.
 - (b) Tilt the retractor slowly.
 - (c) Verify that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.
- If a problem is found, replace the assembly.

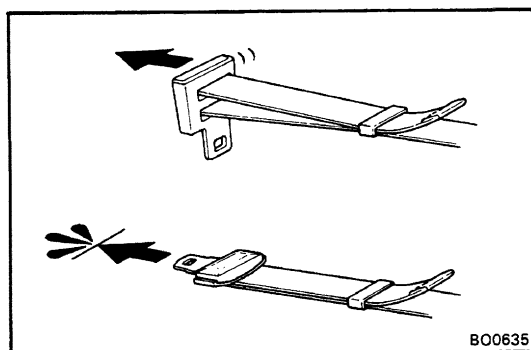

BO0635

CENTER SEAT BELT (Manual Type)

TESTING

- (a) Adjust the belt to the proper length.
- (b) Apply a firm load to the belt.
- (c) Verify that the belt does not extend.