


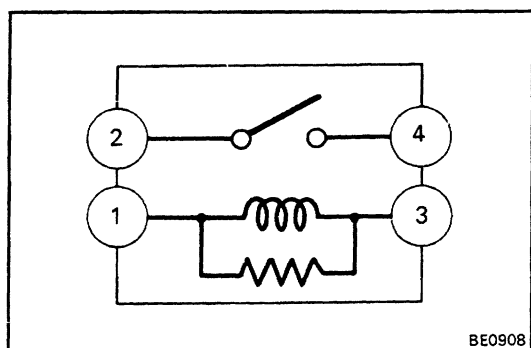


IGNITION MAIN RELAY

INSPECTION OF IGNITION MAIN RELAY

1. INSPECT IGNITION MAIN RELAY


HINT: The relay located in relay block of the left cowl side.

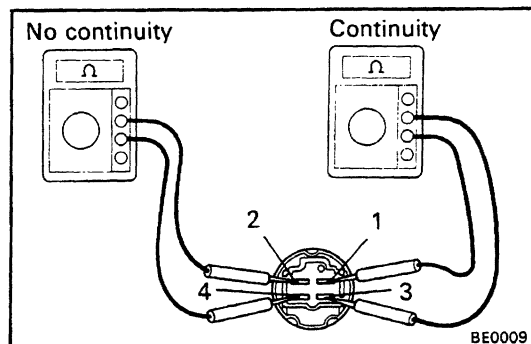

2. INSPECT RELAY CONTINUITY –

- Check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4.


If continuity is not as specified, replace the relay.

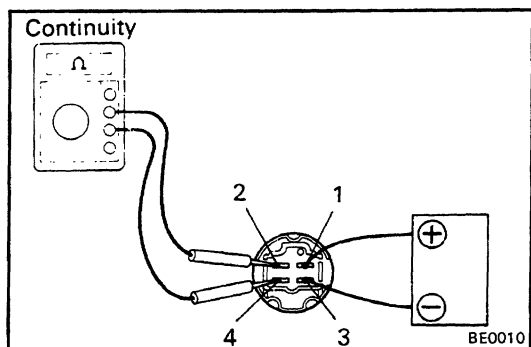

3. INSPECT RELAY OPERATION

- Apply battery voltage across terminals 1 and 3.
- Check that there is continuity between terminals 2 and 4.


If operation is not as described, replace the relay.

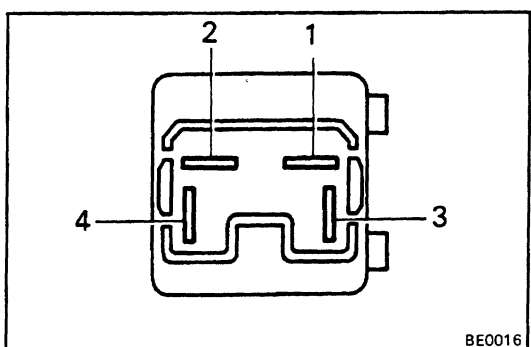

CHARGE LIGHT RELAY

INSPECTION OF CHARGE LIGHT RELAY

LOCATION: Inside of the passenger's cowl side trim.

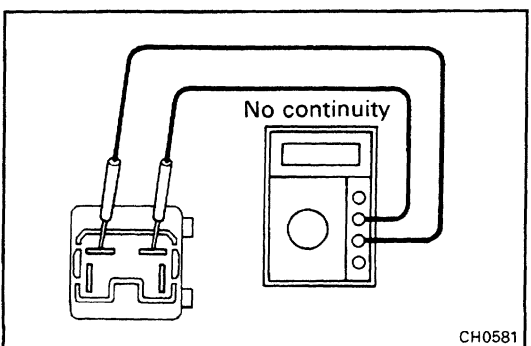

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is no continuity between terminals 1 and 2.