

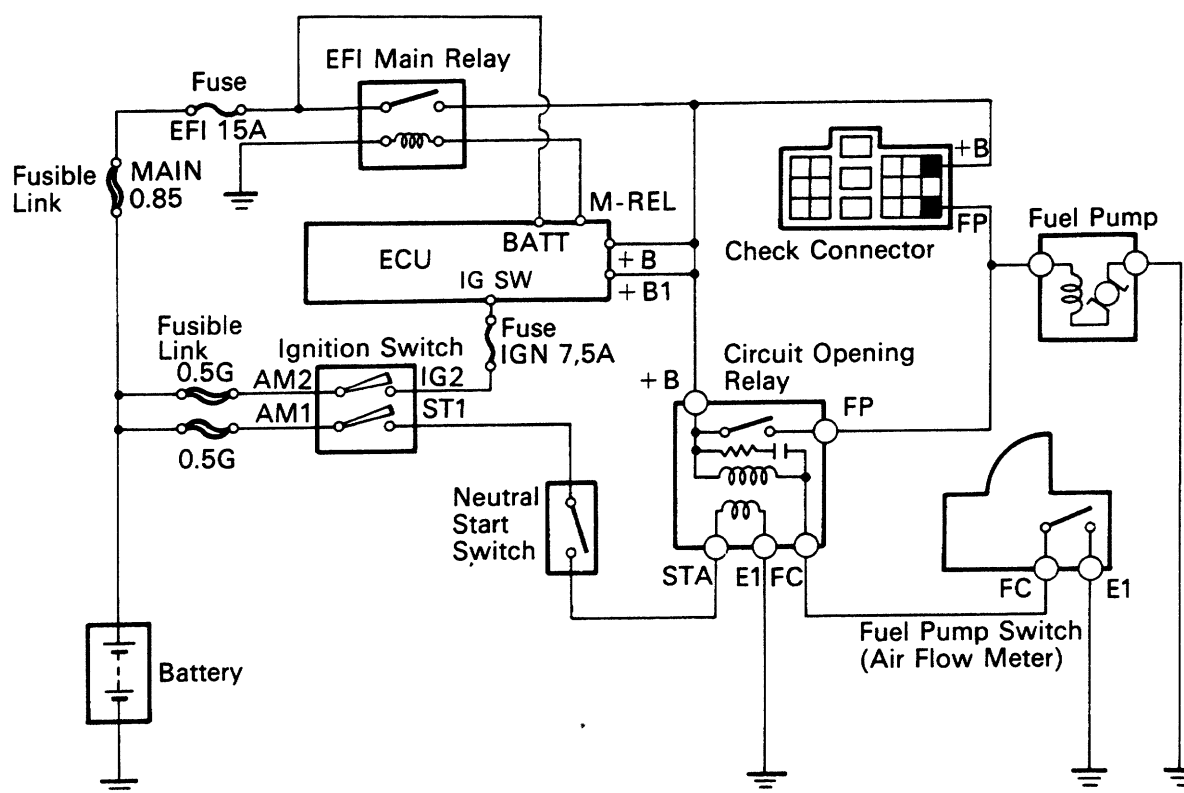


FUEL SYSTEM

Fuel Pump

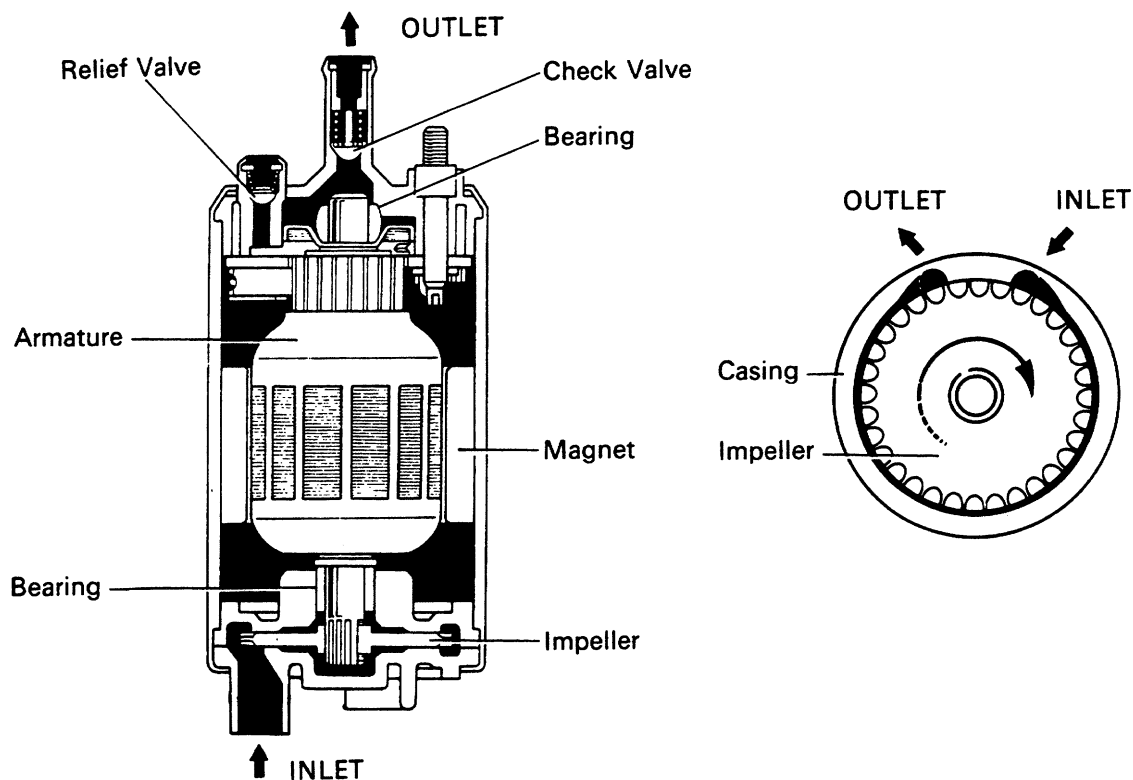

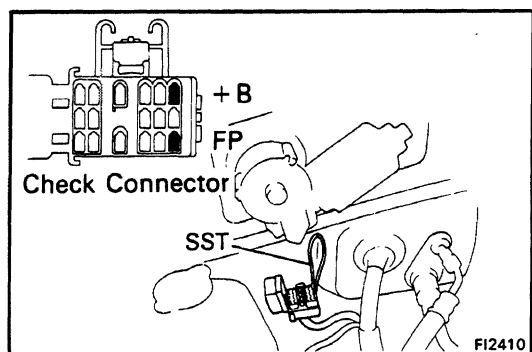


ON-VEHICLE INSPECTION

1. INSPECT FUEL PUMP OPERATION

- (a) Turn the ignition switch ON.


HINT: Do not start the engine.

- (b) Using SST, connect terminals + B and FP of the check connector. SST 09843-18020

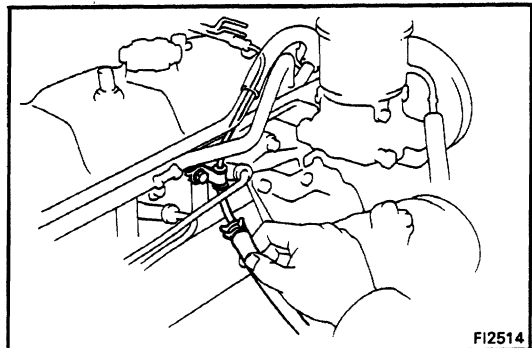

- (c) Check that there is pressure in the fuel return hose.

HINT: At this time, you will hear fuel return noise.

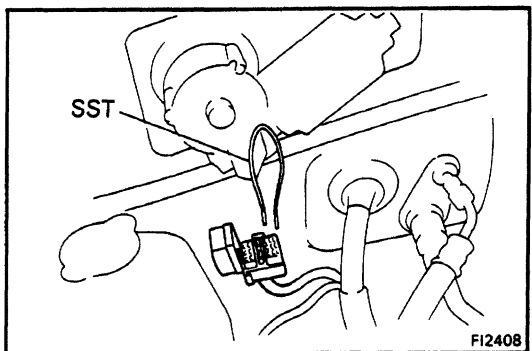

- (d) Remove SST.

- (e) Turn the ignition switch OFF.


If there is no pressure, check the following parts:

- Fusible links
- Fuse (EFI 15A, IGN 7.5A)
- EFI main relay
- Fuel pump
- ECU
- Wiring connections

2. INSPECT FUEL PRESSURE

- (a) Check the battery voltage above 11 volts.

- (b) Disconnect the cable from the negative (-) terminal of the battery.

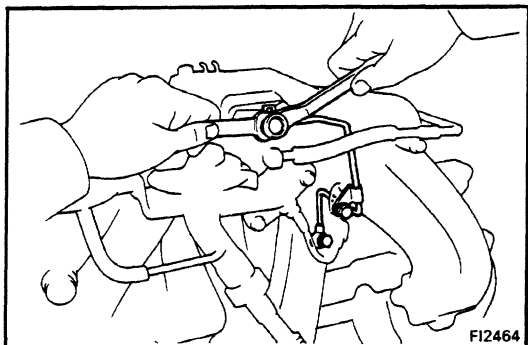


- (c) Disconnect the cold start injector connector.


- (d) Put a suitable container or shop towel under the cold start injector pipe.

- (e) Remove the two union bolts, four gaskets, pipe clamp bolt and cold start injector pipe.


HINT: Slowly loosen the union bolt.

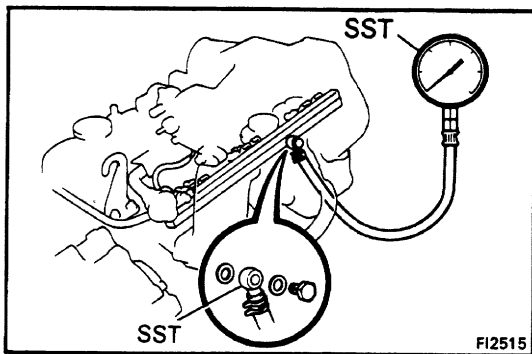

- (f) Install SST (pressure gauge) to the delivery pipe with new two gaskets and union bolt.
SST 09268-45012 (09268-41080)
Torque: 180 kg-cm (13 ft-lb, 18 N-m)
(g) Wipe off any splattered gasoline.
(h) Reconnect the battery negative (-) cable.

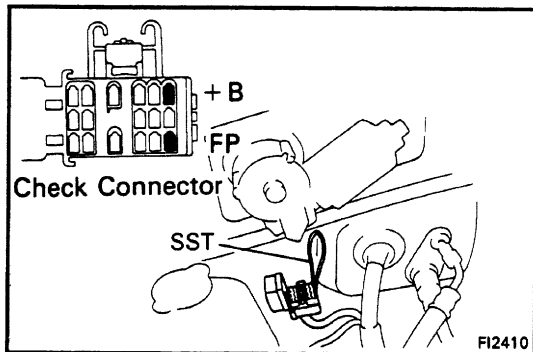

- (i) Using SST, connect terminals + B and FP of the check connector.
SST 09843-18020

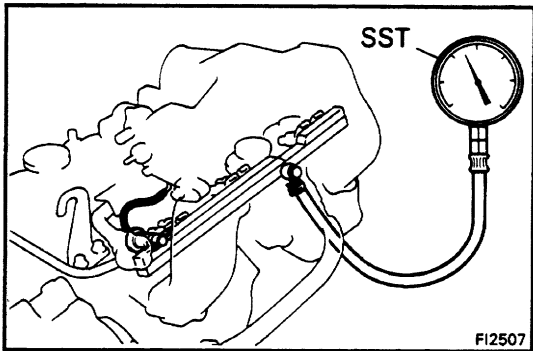



- (j) Turn the ignition switch ON.
(k) Measure the fuel pressure.

Fuel pressure: 2.6 – 3.2 kg/cm²
(37 – 46 psi, 255 – 314 kPa)



If pressure is high, replace the fuel pressure regulator.
If pressure is low, check the following parts:

- Fuel hoses and connection
- Fuel pump
- Fuel filter
- Fuel pressure regulator

- (l) Remove SST.

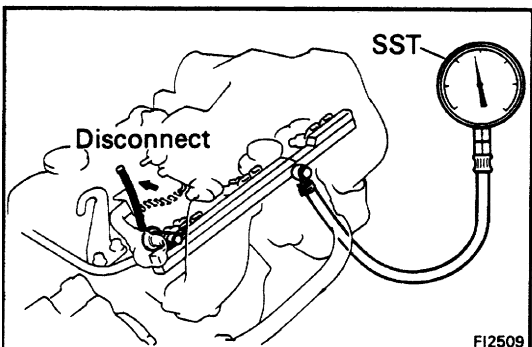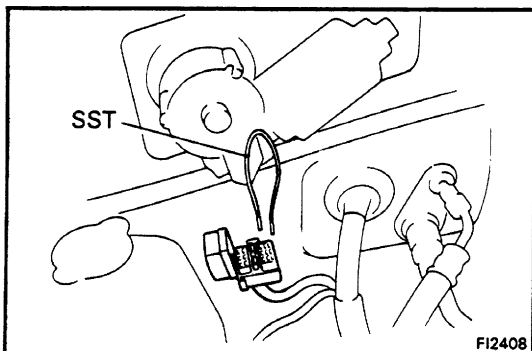

- (m) Start the engine.
(n) Disconnect the vacuum sensing hose from the fuel pressure regulator.
(o) Measure the fuel pressure at idling.
Fuel pressure: 2.6 – 3.2 kg/cm²
(37 – 46 psi, 255 – 314 kPa)

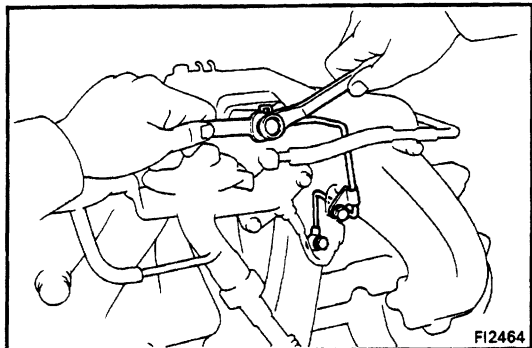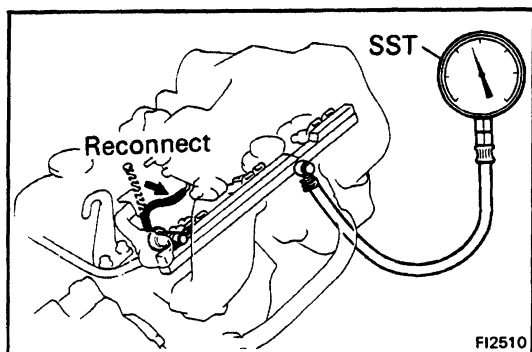

(p) Reconnect the vacuum sensing hose to the fuel pressure regulator.

(q) Measure the fuel pressure at idling.

Fuel pressure: 2.3 – 2.6 kg/cm²

(33 – 37 psi, 226 – 265 kPa)

If pressure is not as specified, check the vacuum sensing hose and fuel pressure regulator.

(r) Stop the engine. Check that the fuel pressure remains 1.5 kg/cm² (21 psi, 147 kPa) or more for 5 minutes after the engine is turned off.

If pressure is not as specified, check the fuel pump, pressure regulator and/or injector.

(s) After checking fuel pressure, disconnect the battery negative (–) cable and carefully remove the SST to prevent gasoline from splashing.

(t) Install the cold start injector pipe with new four gas-kets, the union bolts and pipe clamp bolt.

Torque:

Union bolt 180 kg-cm (13 ft-lb, 18 N-m)


Clamp bolt 120 kg-cm (9 ft-lb, 12 N-m)

(u) Reconnect the cold start injector connector.

(v) Reconnect the cable to the negative (–) terminal of the battery.

(w) Check for fuel leakage.

REMOVAL OF FUEL PUMP

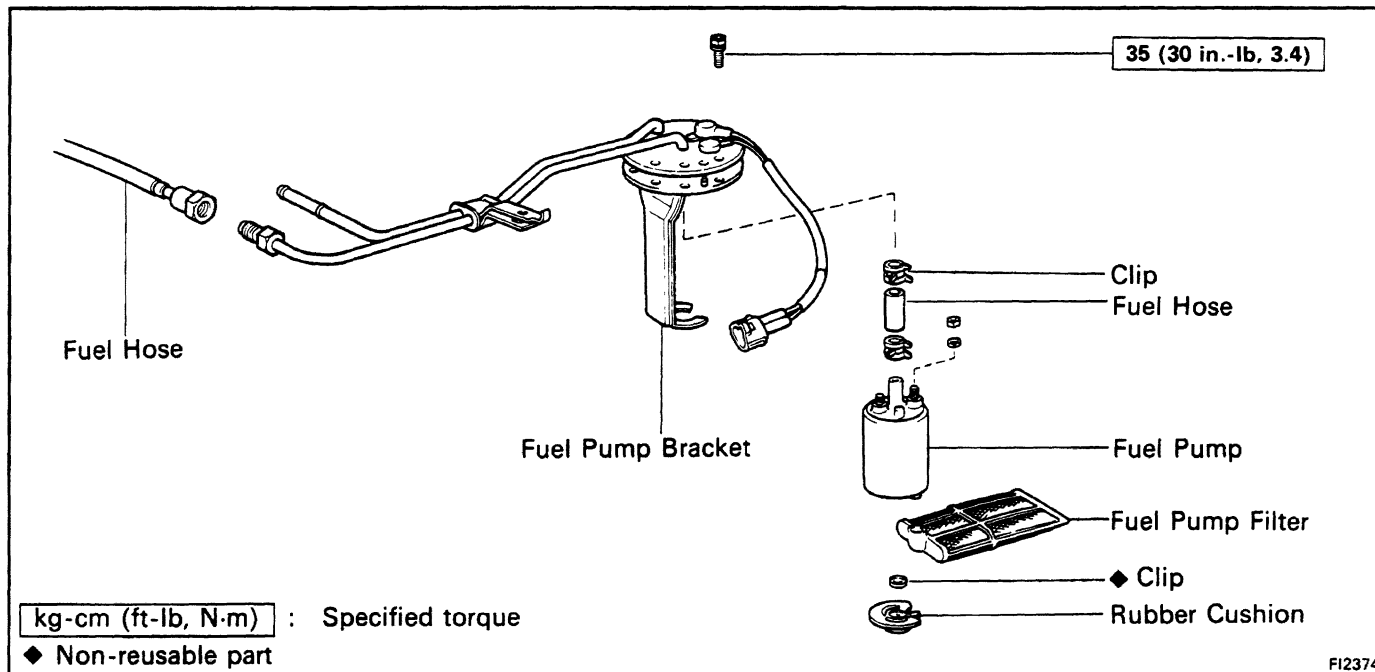


1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

2. DRAIN FUEL FROM FUEL TANK


CAUTION: Do not smoke or work near an open flame when working on the fuel pump.

3. REMOVE FUEL TANK

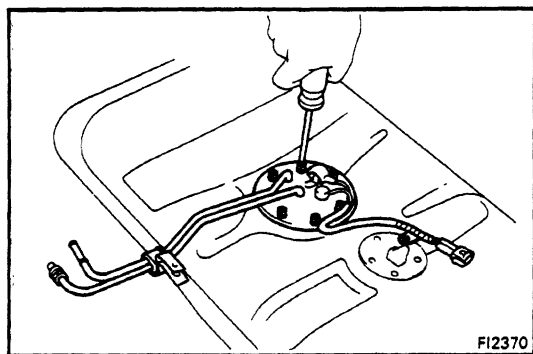


4. REMOVE FUEL PUMP BRACKET FROM FUEL TANK

- Remove the screw of the wire clamp.
- Remove the screws, pull out the pump bracket.

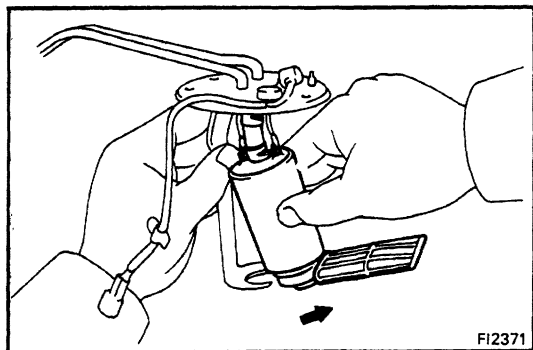


5. REMOVE FUEL PUMP FROM FUEL PUMP BRACKET

- Pull off the lower side of the fuel pump from the bracket.
- Remove the two nuts, and disconnect the wires from the fuel pump.
- Remove the fuel pump from the fuel hose.

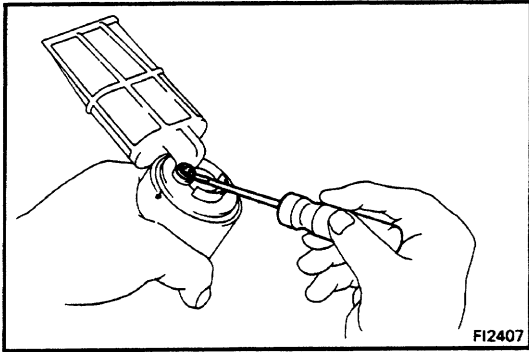

6. REMOVE FUEL PUMP FILTER FROM FUEL PUMP

- (a) Remove the rubber cushion.
- (b) Using a small screwdriver, remove the clip.
- (c) Pull out the pump filter.

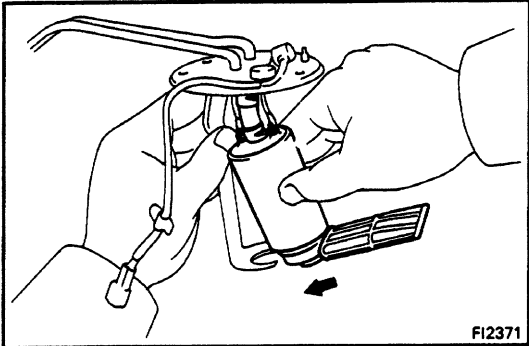

INSTALLATION OF FUEL PUMP


(See page [FI-50](#))

1. INSTALL FUEL PUMP FILTER TO FUEL PUMP

- (a) Install the pump filter with a new clip.
- (b) Install the rubber cushion.

2. INSTALL FUEL PUMP TO FUEL PUMP BRACKET

- (a) Connect the fuel hose to the outlet port of the fuel pump.
- (b) Connect the wires to the fuel pump with the two nuts.
- (c) Push the lower side of the fuel pump, and install the fuel pump.

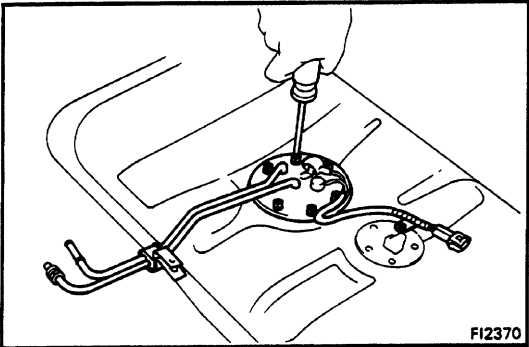

3. INSTALL FUEL PUMP BRACKET TO FUEL TANK

- (a) Install a new gasket and the pump bracket with the screws.

Torque: 35 kg-cm (30 in.-lb, 3.4 N-m)

- (b) Connect the wire clamp with the screw.

Torque: 20 kg-cm (17 in.-lb, 2.0 N-m)

4. INSTALL FUEL TANK

When installing the fuel tank, refer to [FI-64](#) for the installation position of the cushion and the tightening torque.

5. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY