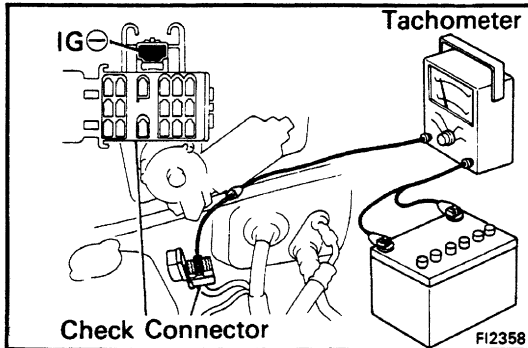

IGNITION SYSTEM

PRECAUTIONS

1. Do not leave the ignition switch on for more than 10 minutes if the engine will not start.



2. When a tachometer is connected to the system, – connect the tachometer test probe to terminal IG (-) of the check connector.
3. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before using.
4. NEVER allow the tachometer terminals to touch ground as this could damage the igniter and/or ignition coil.
5. Do not disconnect the battery when the engine is running.
6. Make sure that the igniter is properly grounded to the body.