
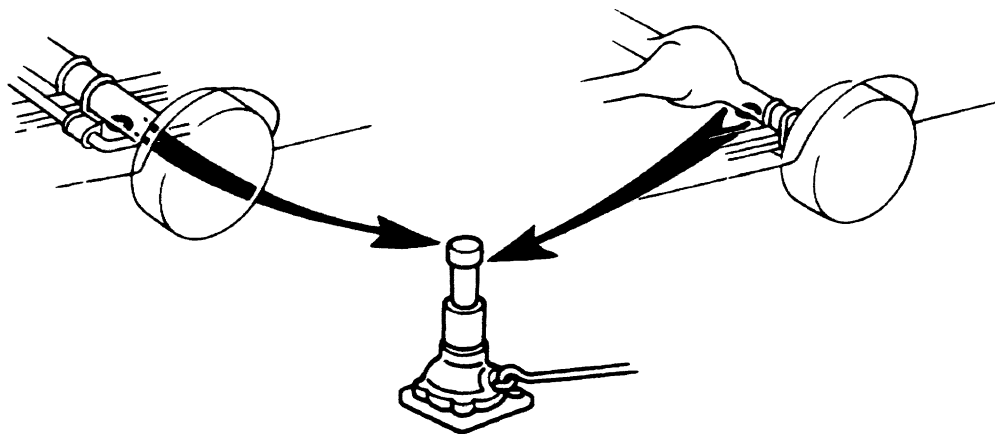


VEHICLE LIFT AND SUPPORT LOCATIONS

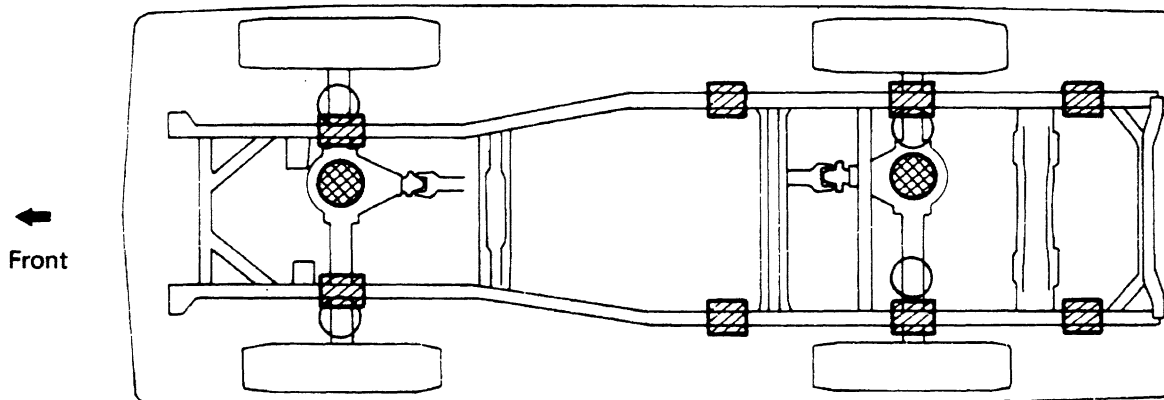

- JACK POSITION** _____ ●
- Front Under the front differential
- Rear Under the rear differential
- SCREW TYPE JACK POSITION** _____ ○
- SUPPORT POSITION** _____ ■
- Safety stand