

MAINTENANCE

MAINTENANCE SCHEDULE

SCHEDULE A

Conditions:

- Towing a trailer, using a camper or car top carrier.
- Repeated short trips of less than 5 miles (8 km) with outside temperatures remain below freezing.
- Extensive idling and/or low speed driving for long distances, such as police, taxi or door-to-door delivery use.
- Operating on dusty, rough, muddy or salt spread roads.

Maintenance operations:

A = Check and adjust if necessary;
R = Replace, change or lubricate;
I = Inspect and correct or replace if necessary

System	Service interval (Odometer reading or months, whichever comes first)		Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown in each maintenance schedule.																		See page (item No.)		
			Miles x 1,000	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	Months			
	Maintenance items	km x 1,000	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96					
ENGINE	Valve clearance*					A					A				A				A	A : Every 24 months	MA-6 (item 12)		
	Drive belts									I								I	I : 36 months, 72 months	MA-4 (item 1)			
	Engine oil and oil filter*		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R : Every 6 months	MA-5 (item 5)		
	Engine coolant													R					R : 36 months	MA-5 (item 6)			
	Exhaust pipes and mountings					I					I				I				I	I : Every 24 months	MA-6 (item 10)		
FUEL	Air Filter		I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I : Every 6 months R : Every 36 months	MA-5 (item 3,4)			
	Fuel lines and connections									I								I	I : Every 36 months	MA-6 (item 9)			
	Fuel tank cap gasket																	R	R : Every 72 months	MA-6 (item 8)			
IGNITION	Spark plug*									R								R	R : Every 36 months	MA-4 (item 2)			
EVAP	Charcoal canister	California only	R : 60,000 miles (126,000 km) only.																		I	I : Every 72 months	MA-5 (item 7)
EXHAUST	Oxygen sensor*	Except California																					MA-6 (item 11)
BRAKES	Brake lining and drums			I		I		I		I		I		I		I		I	I : Every 12 months	MA-7 (item 13)			
	Brake pads and discs			I		I		I		I		I		I		I		I	I : Every 12 months	MA-8 (item 15)			
	Brake line pipes and hoses					I				I				I				I	I : Every 24 months	MA-7 (item 13)–			
CHASSIS	Steering linkage			I		I		I		I		I		I		I		I	I : Every 12 months	MA-8 (item 16)			
	Ball joints and dust covers			I		I		I		I		I		I		I		I	I : Every 12 months	MA-8 (item 16)			
	Automatic transmission					R				R				R				R	R : Every 24 months	MA-9 (item 19)			
	Transfer, differential and steering gear box oil™					I				I				I				I	I : Every 24 months	MA-8 (item 17) MA-10 (item 20)			
	Front wheel bearing and thrust bush grease									R								R	R : Every 36 months	MA-10 (item 21)			
	Steering knuckle and chassis greaser's			R		R		R		R		R		R		R		R	R : Every 12 months	MA-11 (item 22)			
	Propeller shaft grease (7)			R		R		R		R		R		R		R		R	R : Every 12 months	MA-11 (item 22)			
	Bolts and nuts on chassis and body(°)			I		I		I		I		I		I		I		I	I : Every 12 months	MA-12 (item 23)			

Maintenance services indicated by a star (*) or asterisk (*) are required under the terms of the Emission Control Systems Warranty (ECSW). See Owner's Guide or Warranty Booklet for complete warranty information.

★ For vehicle sold in California

*For vehicle sold outside California

HINT:

- (1) After 60,000 miles (96,000 km) or 72 months, inspect every 7,500 miles (12,000 km) or 12 months
- (2) After 45,000 miles (72,000 km) or 36 months, replace every 30,000 miles (48,000 km) or 24 months.
- (3) Applicable when operating mainly on dusty roads. If not, follow schedule B.
- (4) Includes inspection of fuel tank band and vapor vent system.
- (5) Also applicable to lining drum for parking brake.
- (6) Inspect the steering gear box for oil leakage only.

- (7) If the propeller shaft has been immersed in water, it should be re-greased within a day.
- (8) Applicable only when operating mainly on rough, muddy roads. The applicable parts are listed below. For other usage conditions, refer to SCHEDULE B.

Front and rear suspension member cross body.

Strut bar bracket cross body.

U bolts for leaf spring.

Bolts for sheet installation.

Maintenance operations: A = Check and adjust if necessary;
R = Replace, change or lubricate;
I = Inspect and correct or replace if necessary

SCHEDULE B

Conditions: Conditions other than those listed for SCHEDULE A.

System	Service interval (Odometer reading or months, whichever comes first)	Maintenance services beyond 60,000 miles (96,000 km) should be performed at the same intervals shown in each maintenance schedule.										See page (item No.)
			7.5	15	22.5	30	37.5	45	52.5	60	Months	
ENGINE	Maintenance items	Miles x 1,000	12	24	36	48	60	72	84	96		
	Valve clearance★	km x 1,000		A		A		A		A	A : Every 24 months	MA-6 (item 12)
	Drive belts(1)					I				I	I : 36 months, 72 months	MA-4 (item 1)
	Engine oil and oil filters★		R	R	R	R	R	R	R	R	R : Every 12 months	MA-5 (item 5)
	Engine coolant (2)							R			R : 36 months	MA-5 (item 6)
	Exhaust pipes and mountings					I				I	I : Every 36 months	MA-6 (item 10)
FUEL	Air Filters★					R				R	R : Every 36 months	MA-5 (item 4)
	Fuel lines and connections(3)					I				I	I : Every 36 months	MA-6 (item 9)
IGNITION	Fuel tank cap gasket									R	R : Every 72 months	MA-6 (item 8)
	Spark plug★ ⁸					R				R	R : Every 36 months	MA-4 (item 2)
EVAP	Charcoal canister	California only								I	I : Every 72 months	MA-5 (item 7)
EXHAUST	Oxygen sensor★	Except California	R : 80,000 miles (128,000 km) only.									MA-6 (item 11)
BRAKES	Brake lining and drums(4)			I		I		I		I	I : Every 24 months	MA-7 (item 13)
	Brake pads discs (Front and rear)			I		I		I		I	I : Every 24 months	MA-8 (item 15)
	Brake line pipes and hoses			I		I		I		I	I : Every 24 months	MA-7 (item 13)
CHASSIS	Steering linkage			I		I		I		I	I : Every 24 months	MA-8 (item 16)
	Ball joints and dust covers			I		I		I		I	I : Every 24 months	MA-8 (item 16)
	Front wheel bearing and thrust bush grease					R				R	R : Every 36 months	MA-10 (item 21)
	Steering knuckle and chassis grease(5)			R		R		R		R	R : Every 24 months	MA-11 (item 22)
	Propeller shaft grease (5)			R		R		R		R	R : Every 24 months	MA-11 (item 22)
	Automatic transmission			I		I		I		I	I : Every 24 months	MA-9 (item 19)
	Transfer, differential and steering gear box oil (6)			I		I		I		I	I : Every 24 months	MA-8 (item 17) MA-10 (item 20)
	Bolt and nuts on chassis and body(7)			I		I		I		I	I : Every 24 months	MA-12 (item 23)

Maintenance services indicated by a star (*) or asterisk (aE-) are required under the terms of the Emission Control Systems Warranty (ECSW). See Owner's Guide or Warranty Booklet for complete warranty information.
For vehicle sold in California For vehicle sold outside California.

HINT:

- (1) After 60,000 miles (96,000 km) or 72 months, inspect every 7,500 miles (12,000 km) or 12 months.
- (2) After 45,000 miles (72,000 km) or 36 months, replace every 30,000 miles (48,000 km) or 24 months.
- (3) Includes inspection of fuel tank band vapor vent system.
- (4) Also applicable to lining drum for parking brake.
- (5) If the propeller shaft has been immersed in water, it should be re-greased within a day.
- (6) Inspect the steering gear box for oil leakage only.

- (7) The applicable parts are listed below.
Front and rear suspension member cross body.
Strut bar bracket cross body.
U bolts for leaf spring.
Bolts for sheet installation.