


Stabilizer Bar (Wagon only)

REMOVAL OF STABILIZER BAR


(See page [SA-49](#))

1. JACK UP AND SUPPORT VEHICLE

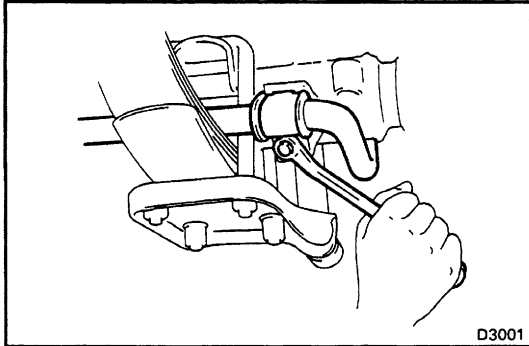


2. REMOVE STABILIZER BAR

- (a) Remove the stabilizer bar brackets from the axle housing.

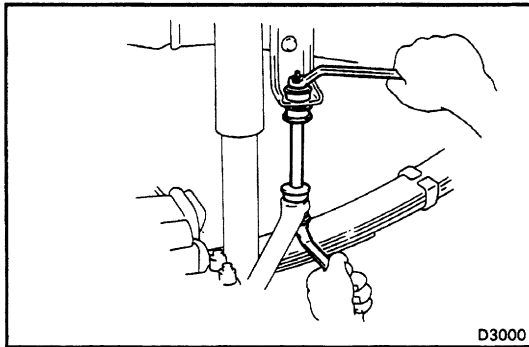

- (b) Remove the nuts, retainer cushions and bolts holding both sides of the stabilizer bar to the frame and remove the stabilizer bar.

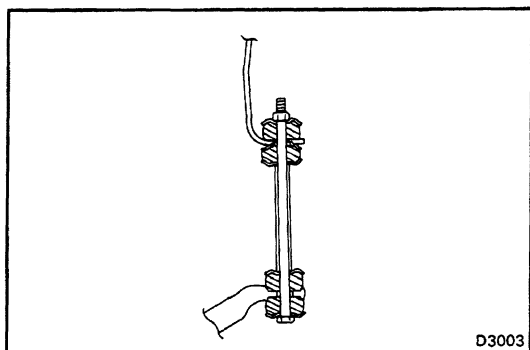


INSTALLATION OF STABILIZER BAR

(See page [SA-49](#))


1. INSTALL STABILIZER BAR

- (a) Install the cushion and bracket to the stabilizer bar.
- (b) Temporarily install the bracket to the axle housing.
- (c) Temporarily install the stabilizer bar on both sides to the frame with bolts, cushions and nuts as shown.

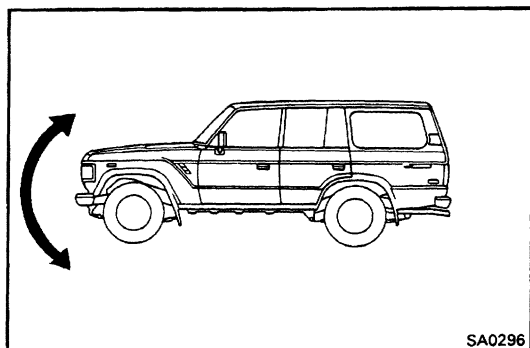

2. INSTALL WHEEL AND LOWER VEHICLE


3. STABILIZE SUSPENSION

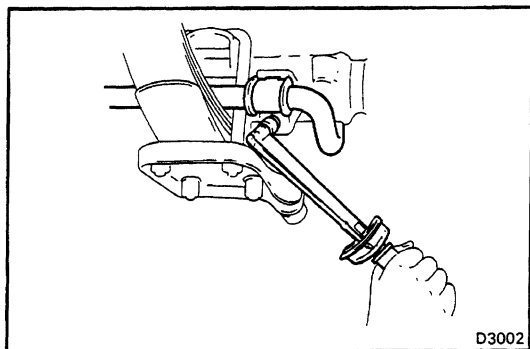

4. TORQUE BRACKET

- (a) Torque the bracket bolt.

Torque: 130 kg-cm (9 ft-lb, 13 N-m)

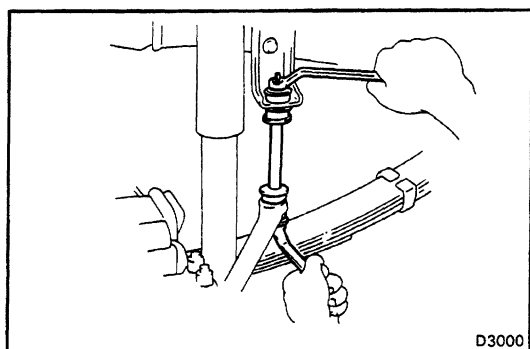

- (b) Torque the nut.

Torque: 180 kg-cm (13 ft-lb, 18 N-m)