

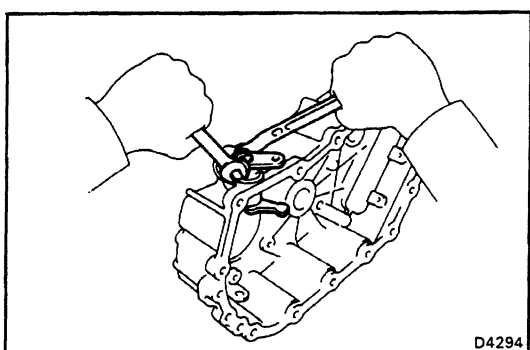


Transfer Rear Case COMPONENTS

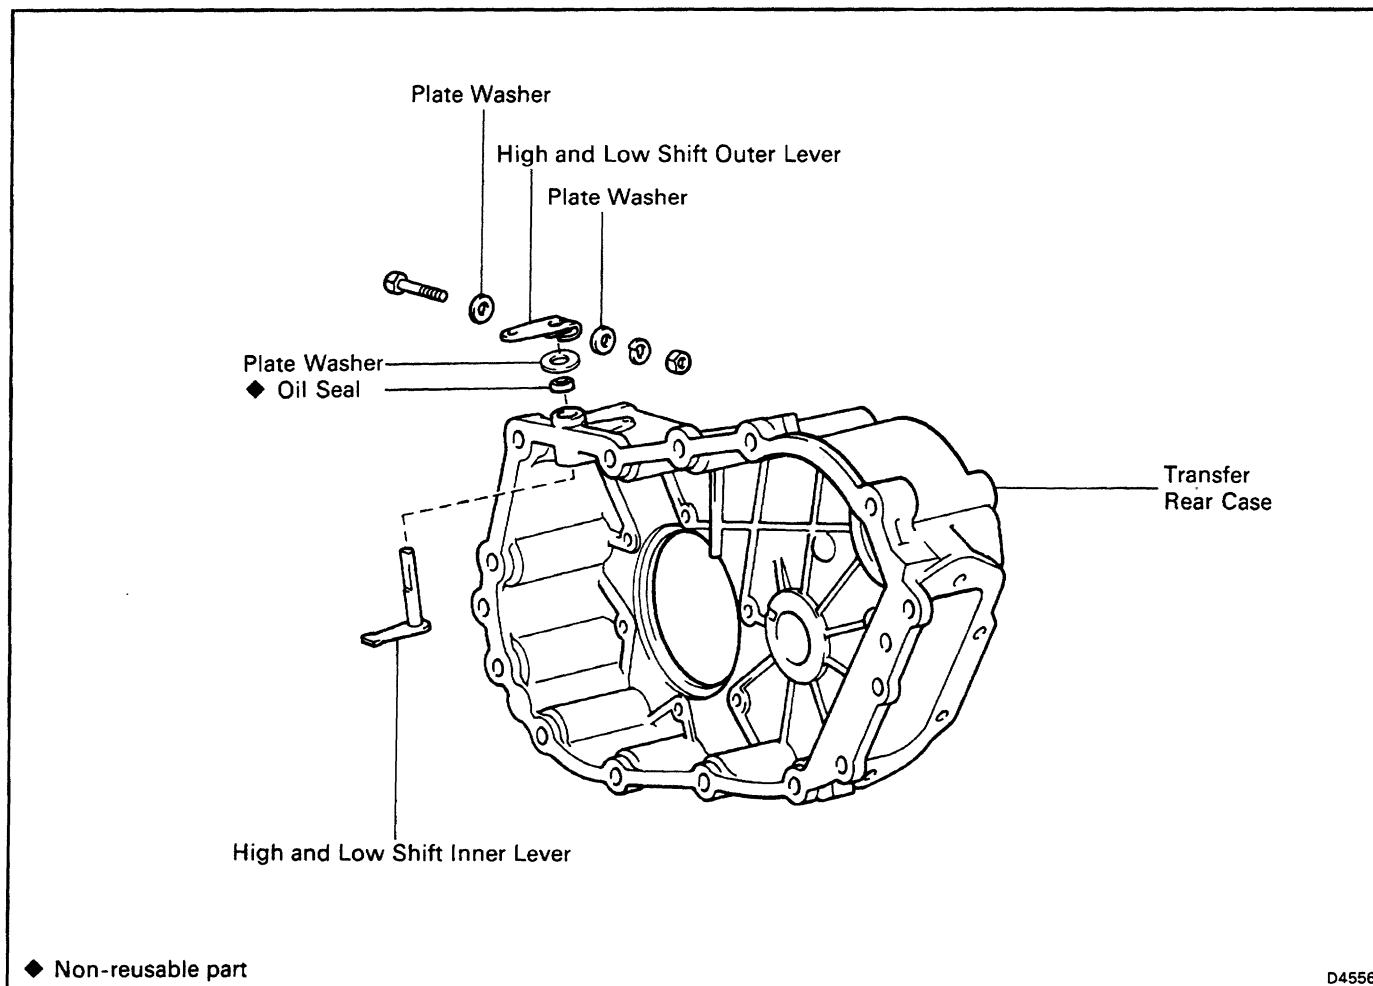

DISASSEMBLY OF TRANSFER REAR CASE


REMOVE OUTER AND INNER LEVERS OF TRANSFER HIGH AND LOW SHIFT

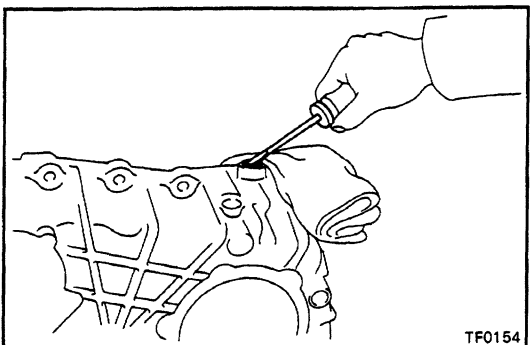


INSPECTION AND REPAIR OF TRANSFER REAR CASE

IF NECESSARY, REPLACE HIGH AND LOW SHIFT LEVER SHAFT OIL SEAL

(a) Using a screwdriver, remove the oil seal.

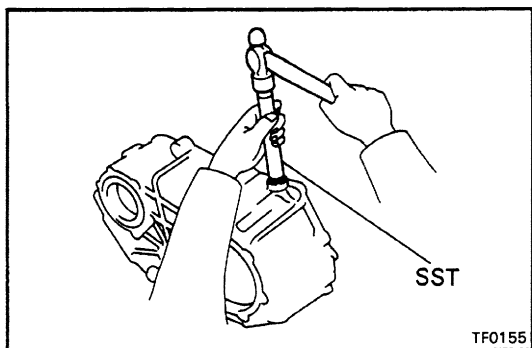

- (b) Using SST and a hammer, tap in a new oil seal.
SST 09608-20012 (09608-03020)
- (c) Apply-MP grease to the oil seal lip.

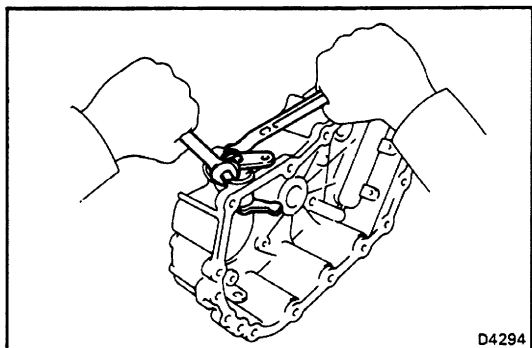

ASSEMBLY OF TRANSFER REAR CASE

INSTALL OUTER AND INNER LEVERS OF TRANSFER HIGH AND LOW SHIFT