
 



AC CONTROL ASSEMBLY

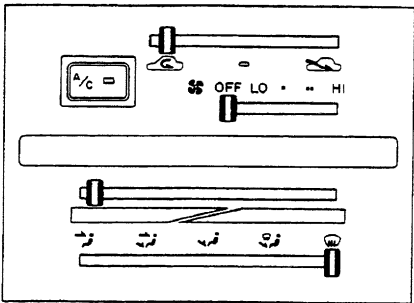

Blower Switch



 A/C Switch



Temperature Control Resistor



AC2716
S-6-2
AC2752 GA-2-2-C


Blower Switch

INSPECTION OF SWITCH

INSPECT SWITCH CONTINUITY

Terminal Switch position	1	8	9	11	12	Illumination	
						6	7
OFF							
LO							
• (M 1)							
• (M 2)							
HI							

If continuity is not as specified, replace the switch.

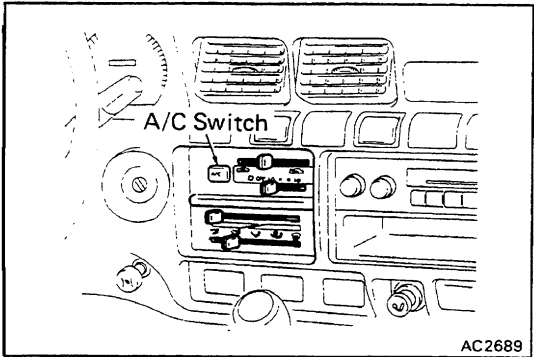


A/C Switch

REMOVAL OF SWITCH

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE A/C SWITCH

INSPECTION OF SWITCH


INSPECT SWITCH CONTINUITY

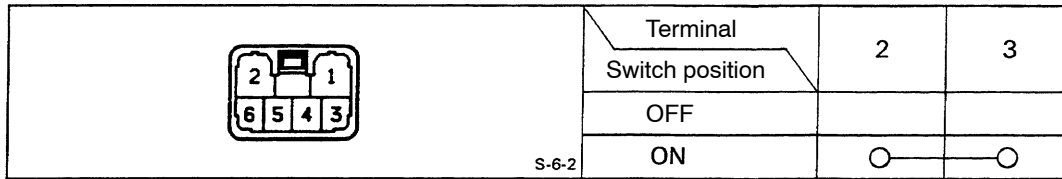

If continuity is not as specified, replace the switch.

INSTALLATION OF SWITCH

1. **INSTALL A/C SWITCH**
2. **CONNECT NEGATIVE CABLE TO BATTERY**

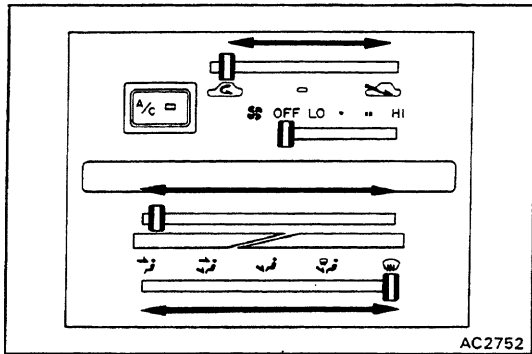


A/C Control Levers

INSPECTION OF A/C CONTROL LEVERS

INSPECT A/C CONTROL LEVERS OPERATION


Move the control levers left and right, and check for stiffness and binding through the full range of the levers.

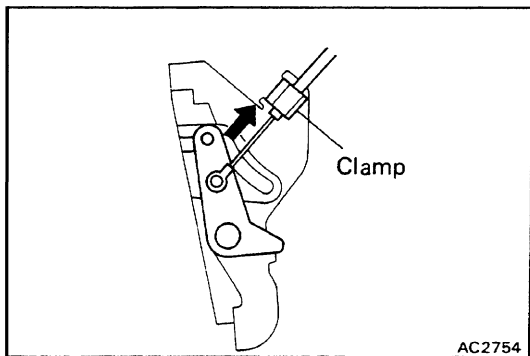

ADJUSTMENT OF A/C CONTROL CABLES


1. **ADJUST AIR INLET DAMPER CONTROL CABLE**

Set the air inlet damper and the control lever to "FRESH" position, install the control cable and lock the clamp.

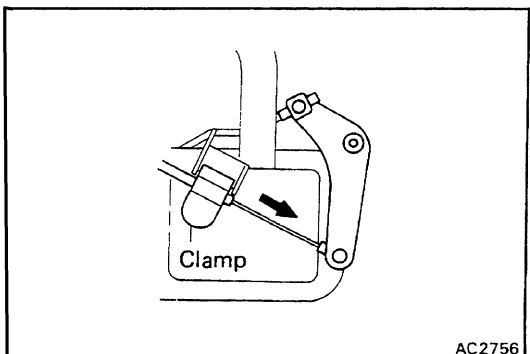


2. **ADJUST AIR MIX DAMPER CONTROL CABLE**


Set the air mix damper and the control lever to "COOL" position, install the control cable and lock the clamp.

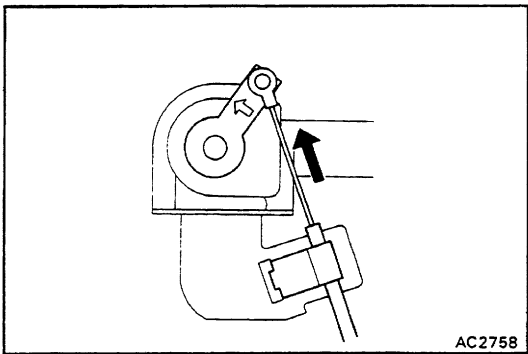

- 3. ADJUST WATER VALVE CONTROL CABLE**
Set the water valve and the control lever to "COOL" position, install the control cable and lock the clamp.

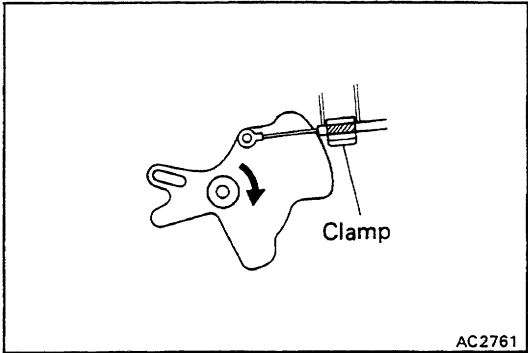

- 4. ADJUST MODE DAMPER CONTROL CABLE**
(a) Set the mode damper and the control lever to "DEF" position.
(b) Clamp the white section of the control cable and install the cable to damper control lever.

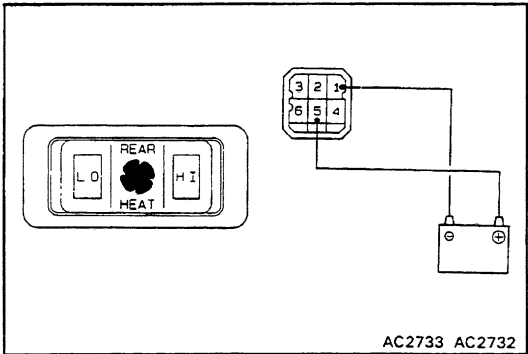

REAR HEATER SWITCH INSPECTION OF SWITCH

- 1. INSPECT INDICATOR**
(a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
(b) Push each of the rear heater switch knob in and check that their indicators light up.

If indicator operation is not as specified, replace the switch.

2. INSPECT SWITCH CONTINUITY

Terminal Switch position	1	2	4	5	Illumination	
					3	6
HI	○	○	○			
OFF						
LO	○	○				

If continuity is not as specified, replace the switch.