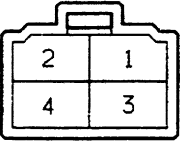
 
 
 


**BLOWER RESISTORS**  
**Front A/C Blower Resistor**  
**INSPECTION OF BLOWER RESISTOR**  
**INSPECT BLOWER RESISTOR CONTINUITY**

|                                                                                            |           |                                                                                     |   |   |   |
|--------------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|---|---|---|
| <br>H-4-2 | Terminal  | 1                                                                                   | 3 | 2 | 4 |
|                                                                                            | Condition |                                                                                     |   |   |   |
|                                                                                            | Constant  |  |   |   |   |



 
 
If continuity is not as specified, replace the blower resistor.

**Rear Heater Blower Resistor**  
**INSPECTION OF BLOWER RESISTOR**  
**INSPECT BLOWER RESISTOR CONTINUITY**

|                                                                                   |                                                                                   |           |                                                                                    |     |     |     |     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------|------------------------------------------------------------------------------------|-----|-----|-----|-----|
| Connector "A"                                                                     | Connector "B"                                                                     | Terminal  | A-1                                                                                | A-2 | A-3 | B-1 | B-2 |
|  |  | Condition |                                                                                    |     |     |     |     |
| H-3-2 H-2-2                                                                       |                                                                                   | Constant  |  |     |     |     |     |

If continuity is not as specified, replace the blower resistor.

**HEATER RELAY**  
**INSPECTION OF RELAY**  
**INSPECT RELAY CONTINUITY**
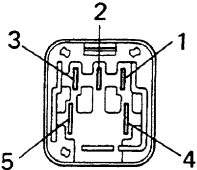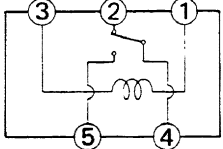
|                                                                                                                                                                                             |                                             |                                                                                       |   |   |                                                                                       |   |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|---------------------------------------------------------------------------------------|---|---|---------------------------------------------------------------------------------------|---|
| <br><br>BE1850 BE1844 | Terminal                                    | 1                                                                                     | 2 | 3 | 4                                                                                     | 5 |
|                                                                                                                                                                                             | Condition                                   |                                                                                       |   |   |                                                                                       |   |
|                                                                                                                                                                                             | Constant                                    |  |   |   |                                                                                       |   |
|                                                                                                                                                                                             | Apply battery voltage to terminals 1 and 3. |                                                                                       |   |   |  |   |

If continuity is not as specified, replace the relay.

**REAR HEATER RELAY**  
**INSPECTION OF RELAY**

Check the relay the same way as for the heater relay on page [AC-36](#).