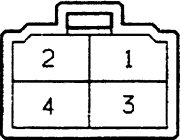
 
 
 


BLOWER RESISTORS
Front A/C Blower Resistor
INSPECTION OF BLOWER RESISTOR
INSPECT BLOWER RESISTOR CONTINUITY

 H-4-2	Terminal	1	3	2	4
	Condition				
	Constant				


 
 
If continuity is not as specified, replace the blower resistor.

Rear Heater Blower Resistor
INSPECTION OF BLOWER RESISTOR
INSPECT BLOWER RESISTOR CONTINUITY

Connector "A"	Connector "B"	Terminal	A-1	A-2	A-3	B-1	B-2
		Condition					
H-3-2 H-2-2		Constant					

If continuity is not as specified, replace the blower resistor.

HEATER RELAY
INSPECTION OF RELAY
INSPECT RELAY CONTINUITY

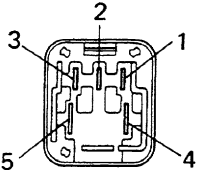 BE1850 BE1844	Terminal	1	2	3	4	5
	Condition					
	Constant					
	Apply battery voltage to terminals 1 and 3.					

If continuity is not as specified, replace the relay.

REAR HEATER RELAY
INSPECTION OF RELAY

Check the relay the same way as for the heater relay on page [AC-36](#).