


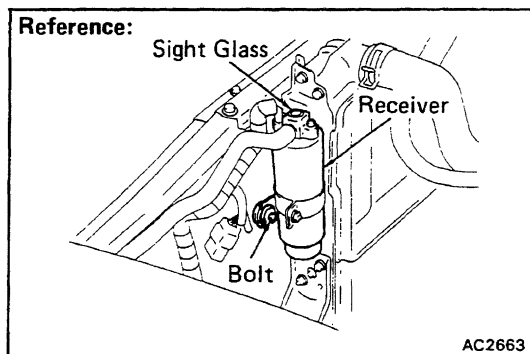

RECEIVER

ON-VEHICLE INSPECTION

INSPECT SIGHT GLASS, FUSIBLE PLUG AND FITTINGS FOR LEAKAGE

Use a gas leak tester. Repair as necessary.

REMOVAL OF RECEIVER

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
2. REMOVE BATTERY
3. DISCONNECT TWO LIQUID TUBES FROM RECEIVER
HINT: Cap the open fittings immediately to keep moisture out of the system
4. REMOVE RECEIVER FROM RECEIVER HOLDER

INSTALLATION OF RECEIVER

1. INSTALL RECEIVER IN RECEIVER HOLDER
HINT: Do not remove the blind plugs until ready for connection.
2. CONNECT TWO LIQUID TUBES TO RECEIVER
Torque: 55 kg-cm (48 in.-lb, 5.4 N-m)
3. INSTALL BATTERY
4. IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR
Add 20 cc (0.7 fl.oz.)
Compressor oil: DENSO OIL 6,
SUNISO NO.5GS or equivalent
5. EVACUATE AIR FROM REFRIGERATION SYSTEM
6. CHARGE SYSTEM WITH REFRIGERANT AND INSPECT FOR LEAKAGE OF REFRIGERANT
Specified amount: 900 ± 50 g (31.74 ± 1.76 oz)

