

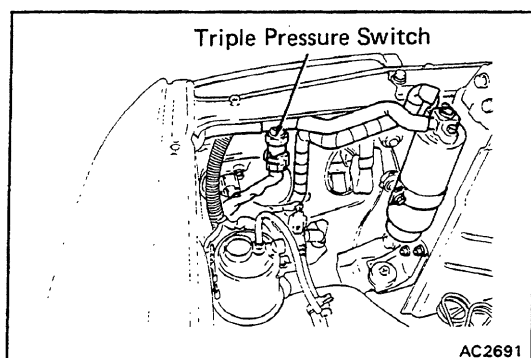


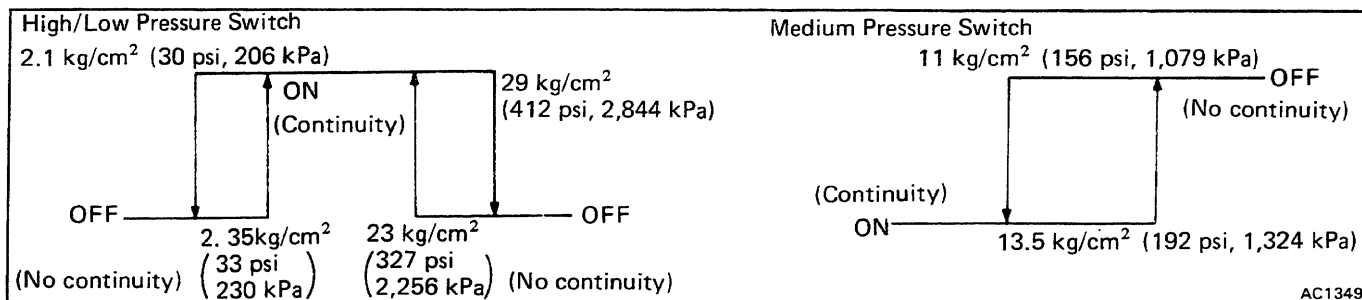

TRIPLE PRESSURE SWITCH

ON-VEHICLE INSPECTION

1. **DISCONNECT CONNECTOR OF PRESSURE SWITCH**
2. **INSPECT PRESSURE SWITCH**
 - (a) Install the manifold gauge set.
 - (b) Observe the gauge reading.
 - (e) Check the continuity between the two terminals of the pressure switch shown in the below.

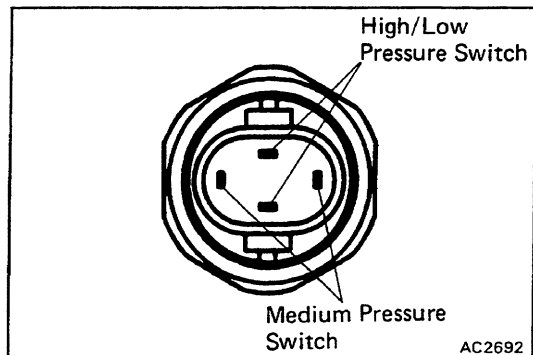

If defective, replace the pressure switch.


BLOWER MOTORS

Front A/C Blower Motor

INSPECTION OF BLOWER MOTOR

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operation is smooth.

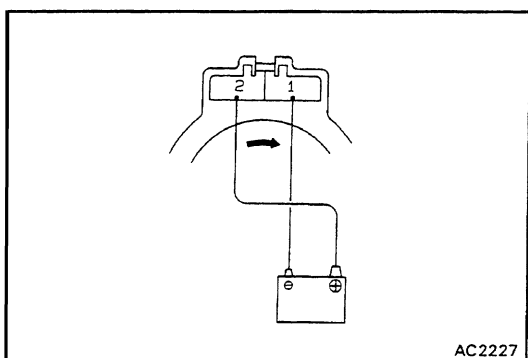

Rear Heater Blower Motor

INSPECTION OF BLOWER MOTOR

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operation is smooth.

